

5QT

# 5QT

## Glass Air Fryer

### User Manual





# Table of Contents

- |     |                           |     |                          |
|-----|---------------------------|-----|--------------------------|
| 4.  | Important Safeguards      | 14. | Cleaning, Care & Storage |
| 8.  | What's in the Box         | 16. | Troubleshooting          |
| 9.  | Control Panel             | 19. | Warranty/Support Info    |
| 11. | Preset Temps              |     |                          |
| 12. | Setting Up Your Air Fryer |     |                          |



# aria HEALTHY STARTS HERE

Follow us on Socials

For video tutorials, recipes, and more!




ARIAAIRFRYERS



ARIAAIRFRYERS



# Important Safeguards

 **WARNING!** Always follow the Safety Instructions below before, during, and after using your Aria Air Fryer. As your Air Fryer is a powerful electrical appliance with heating elements and fans, be sure to follow all safety precautions and read all instructions fully and carefully before using. Failure to do so could result in serious electrical shock, burns from heat, other injury, or physical damage.

## Read All Instructions Before Use And Save

- Some parts of the Air Fryer are extremely hot during and after operation such as the exterior, interior, trays, and all accessories. Do not touch hot surfaces, parts, accessories, interior or exterior while cooking or before it's cooled down. Use a heat-resistant oven glove instead of touching the Air Fryer or its accessories directly to avoid bodily injury.
- The Air Fryer contains both electronic and heating elements. To avoid electrical shock, do not immerse the power cord, plug, or housing in water or put them under the tap during cleaning.
- Make sure that your outlet's voltage corresponds to the voltage stated on the label of the appliance, and only use with a properly grounded outlet.
- Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning, handling, or moving accessories.
- This appliance Should not be used by or near children.

- As the plug is polarized (one prong is larger than the other), be sure to insert into a polarized outlet the correct way. If the plug does not fit, reverse the plug and try again, or contact a certified electrician.
- Do Not let the cord hang over the edge of the table or countertop, where it could be pulled on by children or pets, or touch hot surfaces, which could damage the cord.
- Do not place on or near a hot gas or electric burner.
- Do not use this appliance for other than intended or modify in any way.
- Extreme caution should be exercised when using containers constructed of materials other than metal or glass in the Air Fryer Toaster Oven.
- Do not cover any part of the Air Fryer with metal foil. This will cause overheating of the Air Fryer.
- Oversized foods, metal foil packages, or utensils must not be inserted in the Air Fryer as they may involve a risk of fire or electric shock.
- A fire may occur if the appliance is covered or touching flammable materials such as curtains, draperies or walls. Do not store any items on top of the appliance when in operation. Do not operate under wall cabinets.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electric shock.

- Warning: To avoid possibility of fire, Never leave the appliance unattended during use.
- Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire.
- Prevent any water or other liquids from entering the Air Fryer.
- Before using, check the power cord of appliance and the accessories. Do not use if any part shows any damage. Contact Customer Care if this is the case for warranty assistance.
- Before each use, ensure the heating element on top of the Air Fryer and the fan are both clean and clear from any ingredients or food from the previous cooking cycle.
- Immediately unplug the Air Fryer if you see dark smoke coming out of it. Wait for the smoke to stop being released before pulling out the Racks, Trays, or other accessories.
- Children over 10 years, anyone with a physical or mental disability, and anyone with a lack of experience and knowledge on how to use the Air Fryer should read the User Guide completely and be guided by someone who has prior experience with using the appliance.
- As the Air Fryer gets extremely hot during use, prevent fire hazards and Do not put plastic protective film, or non-oven-safe dishes, bowls, or tools into the Air Fryer.

### Short Cord Instructions:

Do not use with an extension cord. A short power supply cord is provided to reduce the risks resulting from being entangled in or tripping over a long cord.

### Overheat Protection:

Should the inner temperature control system fail, the overheating protection system will be activated, and the appliance will not function. Should this happen, unplug the power cord. Allow time for the appliance to cool completely before restarting or storing.

### Electric Power:

If the electrical circuit is overloaded with other appliances, your unit may not operate properly. It should be operated on a dedicated electrical circuit (power point).

### Automatic Shut-Off:

This appliance has a built-in shut-off device that will automatically shut down the unit. When the timer reaches zero. You can manually switch off the appliance by selecting the power button. The fan will continue running for about 3 minutes to cool down the appliance.





## What's In The Box



### 5Qt Glass Air Fryer

Cook toxin-free with our innovative glass basket design made of borosilicate glass. Elevate your cooking game with safety and flavor in mind!

### Mesh Tray

Keeping your food off the basket bottom for optimal air circulation



# Touchscreen Control Panel



1.



## Power Button

Tap the Power Button to Turn On or Off the Air Fryer.

2.



## Time/Temp Control

Tap the - or + to increase Time and Temperature

3.



## Play/Pause Button

Tap the Play/Pause Button to Start or Stop Cooking.

4.



## DIY Button





Press DIY button when you want to input your own Time/Temp.





5.



### Menu Button

Press the Menu Button, to cycle to select the desired cooking preset. The corresponding cooking preset will flash in the LED screen.


Preset	Icon	Temp	Time
French Fries		400°F	10min
Chicken Wings		400°F	22min
Sweet Potato		400°F	30min
Steak		360°F	11min

Preset	Icon	Temp	Time
Ribs		400°F	14min
Shrimp		340°F	10min
Bake		300°F	15min
Peanut		360°F	6min

Note: The times and temperatures above are suggestions - they may vary on the amount of your food, the source, thawness, and other factors. You can also fine-tune time and temperature after selecting Preset. Always keep an eye on your food as it cooks so it turns out exactly how you prefer.


# Setting Up Your Aria Air Fryer

1.

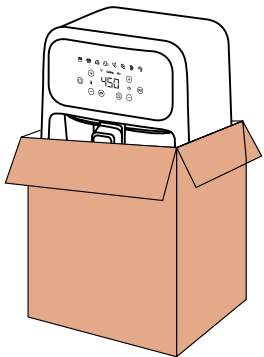


Remove and discard all packaging around and inside the oven. Be sure to peel off all protective films.

2.

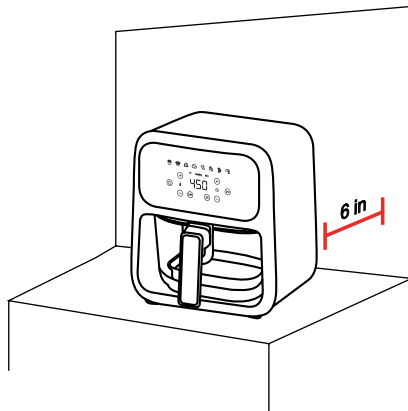

Place on a stable, level, heat-resistant surface, away from anything that can be damaged by heat. Keep at least 6in distance between the Air Fryer and walls, furniture, etc.


3.

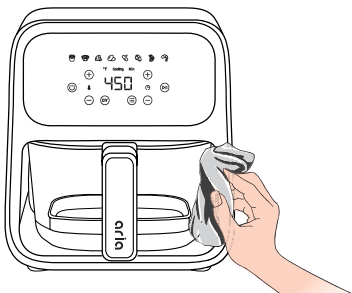

Wash all accessories and wipe clean the interior of the Air Fryer. Dry and place accessories back in Air Fryer.

4.

During first use, the Fryer may emit odor or smoke, which is caused by the protective film. This is normal. Simply run the Oven empty for 15 minutes at the highest temperature to sterilize and remove odor.

 **WARNING!** When the Air Fryer is cooking, the inside and outside of the Oven will get extremely hot and steam may be released from the air vent openings. Be sure to keep your hands, face, and all other body parts away to avoid injury. Also be careful of hot steam and air as you open the Door, adjust food, and move any accessories. Use heat-resistant oven gloves while handling parts and tongs to flip food when applicable.



# Care, Cleaning, & Storage

Before cleaning, unplug the Aria Air Fryer from the power outlet. Allow the oven and all accessories to cool completely before disassembling and cleaning.

## Cleaning the Outer Oven and Door

- Wipe the outer body with a soft, damp sponge. A non-abrasive liquid cleanser or mild spray solution may be used to avoid build-up of stains. Apply the cleanser to the sponge, not the oven surface, before wiping.
- To clean the glass, use a mild detergent and a soft, damp sponge or soft plastic scouring pad. Do not use an abrasive cleanser or metal scouring pad as these can scratch the glass surface.
- Wipe the LED screen with a soft damp cloth. Apply cleanser to the cloth not the LED surface. Cleaning with dry cloth or abrasive cleaners may scratch the touchscreen.
- Let all surfaces dry thoroughly prior to inserting the power plug into a power outlet and turning the oven on.



**WARNING:** Do not immerse the Oven, power cord or power plug in water or any other liquid as this may cause electrocution.

## Cleaning the Air Fryer

Wipe the walls with a soft, damp sponge. A non-abrasive liquid cleanser

or mild spray solution may be used to avoid build-up of stains. Apply the cleanser to the sponge, not the oven surface, before cleaning.

- Let all surfaces dry thoroughly prior to inserting the power plug into a power outlet and turning the Oven on.
- **WARNING:** Use EXTREME caution when cleaning the heating elements as they can get very hot and are fragile. Allow the oven to cool completely, and then gently wipe a soft, damp sponge or cloth along the length of the heating element. Do not use any type of cleanser or cleaning agent. Let all surfaces dry thoroughly prior to inserting the power plug into a power outlet and turning the oven on.

## Cleaning the Accessories

- Wash accessories in warm soapy water with a soft sponge or soft plastic scouring pad. Rinse and dry thoroughly. Do not use abrasive cleansers, metal scouring pads or metal utensils to clean any of the accessories as they may damage the surfaces.

## Storage

Always allow Air Fryer and all accessories to cool completely before disassembling and cleaning.

- Ensure the Air Fryer and all accessories are clean and dry
- Store the appliance in an upright position standing level on its support legs. Do not store in a wet or hot condition.



# Troubleshooting

Issue	Cause	Solution
<b>The Air Fryer Doesn't Turn On</b>	The Air Fryer is not plugged in properly	Reinsert the power plug and make sure the oven is plugged in
	Air Fryer is not on	Tap "Power" icon to power on
	The Basket is not closed properly	Make sure the Basket is completely closed
<b>Steam Is Coming Out From The Top Of The Air Fryer</b>	You are cooking high moisture content foods	This is normal. The Air Fryer is vented to release steam created from high-moisture content foods such as frozen breads. Cool surfaces may gather this steam
<b>Dark Smoke Is Coming Out Of The Air Fryer</b>	Food is burning	Immediately turn off the Air Fryer and allow it to cool down completely. Be careful when you take out the food



Issue	Cause	Solution
<b>White Smoke Is Coming Out Of The Air Fryer</b>	This is the first time using the Air Fryer	This is normal. The Air Fryer may produce some white smoke the first time. Simply run at the highest temperature for 15-20 minutes without any food to eliminate
	Cooking food with high oil, fat, or grease	This is normal. Frying greasy foods will produce white smoke, and should not affect cooking.
	Grease residues or oil from previous use	Always clean all accessories and parts between cooking cycles to not burn old grease or oil
<b>Foods Are Not Crispy After Air Frying</b>	Ingredients have high moisture	Use oven snacks or brush a thin layer of oil on the surface of the ingredients before cooking for crispier results

# Troubleshooting (continued)

Issue	Cause	Solution
<b>The Ingredients Cooked With The Air Fryer Are Not Done</b>	Basket is overfilled with food	Reduce the amount of ingredients and allow for proper hot air flow
	Incorrect Function	Be sure to cook with the proper Function for your ingredients
	Cooking time or temperature is too low	Set the temperature higher or cooking time longer
<b>Foods Is Cooked Unevenly</b>	Ingredients are stacked or close to each other during cooking	Spread out ingredients for proper hot air flow
	Accessories aren't in the right position	Adjust the accessories into the proper position
<b>Display shows Error Code "E1"</b>	Internal Error	Remove the power cord from the power outlet and contact Customer Care
<b>Display shows Error Code "E2"</b>	Internal Error	Remove the power cord from the power outlet and contact Customer Care



To make a warranty claim, do not return this  
appliance to the store.

**Please call 1.312.498.9334**

Between 10:00am - 5:00pm (CST) Monday through Friday

or **email [help@ariaairfryer.com](mailto:help@ariaairfryer.com)**



## **We're Here to Help!**

**Enjoy your favorite foods with the assurance  
that we're here to help you anytime.**

### **Limited Lifetime Warranty Terms & Conditions**

**First 60 days after purchase date:** If any problems, we'll replace your unit at no cost but you'll be responsible to pay shipping both ways to get your product back to us and for us to send you a new one.

**After 60 days of purchase date:** If any problems, we'll repair it or replace unit at no cost to you if we determine that the product is not damaged due to improper use and is a problem due to manufacturing deficiencies. You'll be responsible to pay for the shipping cost both ways, to and from our location.

**Accessory Replacements:** We'll ship you a free replacement, you'll cover shipping cost.

**[ariaairfryer.com/support](http://ariaairfryer.com/support)**



**aria**  
ariaairfryer.com



5Qt / 1200 Watts

For video tutorials, recipes, and more!



ARIAAIRFRYERS



ARIAAIRFRYERS