




TV Stand

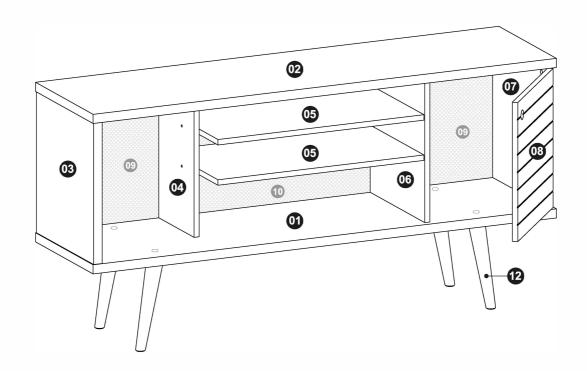

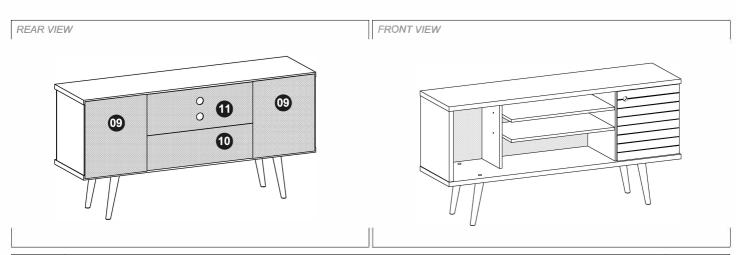


n.° ID	Parts Identification (Description)	Quantity
01	Base	1
02	Top Panel	1
03	Left Side Panel	1
04	Left Partition	1
05	Shelf	2
06	Right Partition	1
07	Right Side Panel	1
08	Door	1
09	Left and Right Back Panel	2
10	Lower Middle Back Panel	1
11	Upper Middle Back Panel	1
12	Wood Feet	4


## **TOOLS NEEDED**

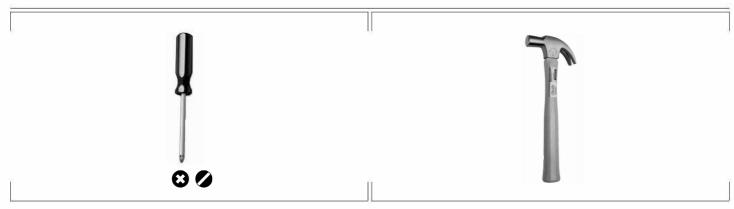

# **INCLUDED IN THE PACKAGE**

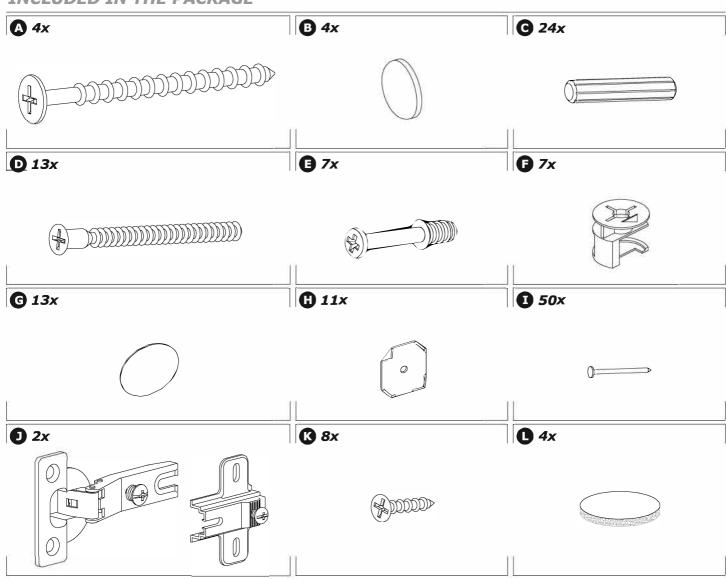


# STEP 1

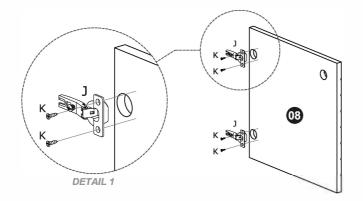

#### Preparing the door:


• Fix the hinges (J) in the Door (08) with bolts (K).

## STEP 2

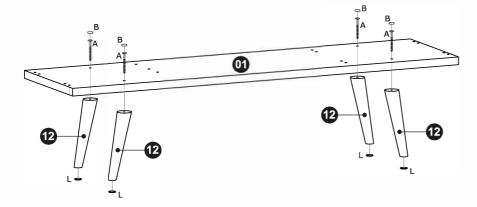


- Fix the feet (12) under the Base (01) with bolts (A).
- Apply the protective felt covers (L) on the bottom of the feet (12).
- Apply the plastic covers (B) on top of the bolts (A).

# STEP 3

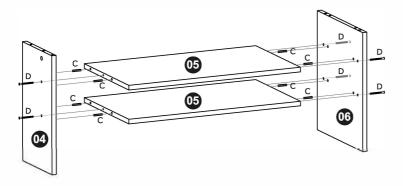


 Connect Shelves (05) into Partitions (04) and (06) with dowels (C) and bolts (D).

## STEP 4

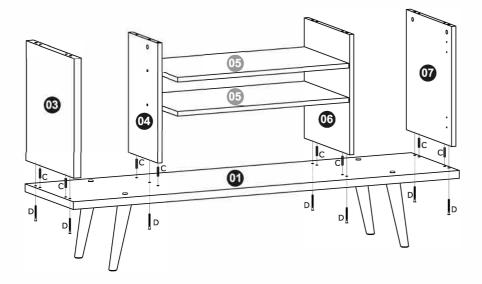


- Connect Side Panels (03) and (07) into the Base (01) with dowels (C) and bolts (D).
- Connect Partition Parts (04) and (06) into the Base (01) with dowels (C) and bolts (D).

## STEP 5

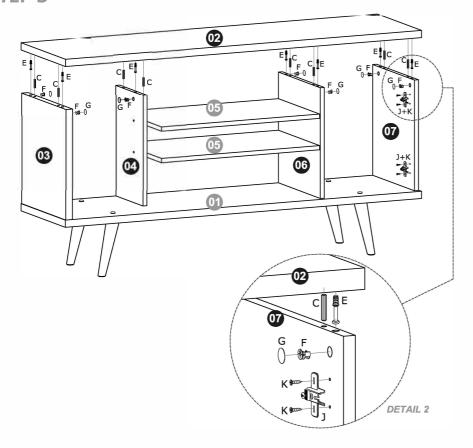


- Connect the Top Panel (02) onto Side Panels and Partitions (03), (04), (06) and (07) using dowels (C) and the Minifix hardware (E + F).
- Apply adhesive covers (G) on the minifix hardware (F).
- Fix hinge connector (J) on the Right Side Panel (07) with bolts (K).

## STEP 6

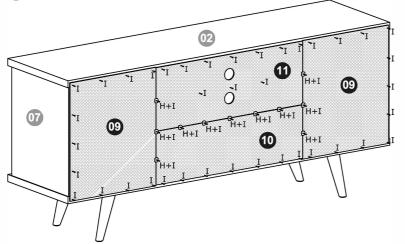

- Connect Back Panels (09), (10) and (11,) with nails (I).
- Use metallic plates (H) and nails (I) at the joining surfaces.

## STEP 7

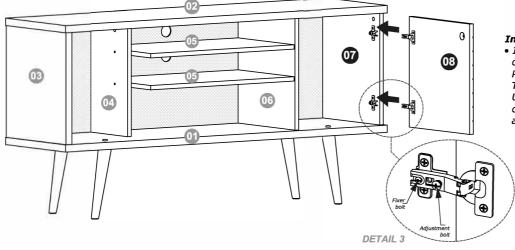

Installing the door (08):

Insert the hinge from the door (08) onto the connector on the Side Panel (07).

The connector pieces includes 2 bolts. Use the adjustment and fixer bolts on the insert to tighten, adjust and align the door.