TV CONSOLE



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.






ASSEMBLY TIME PER UNIT: 40 MINUTES


PARTS IDENTIFICATION:

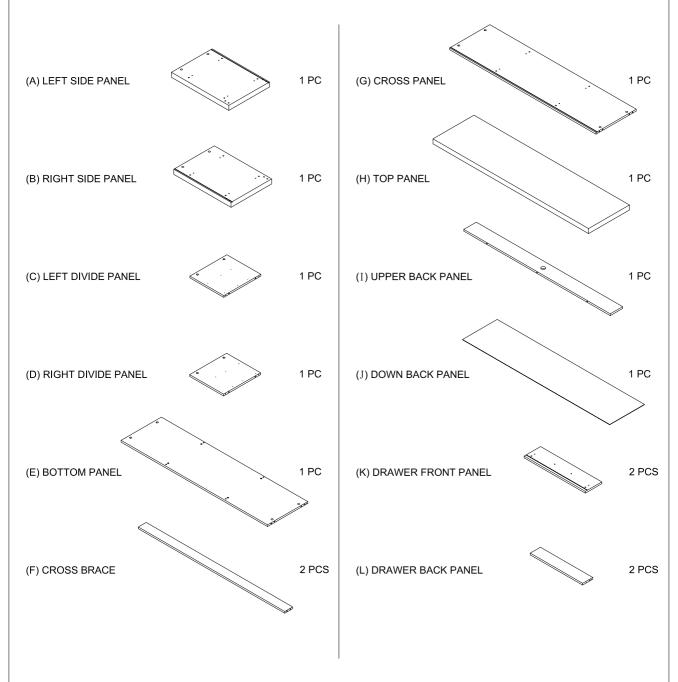

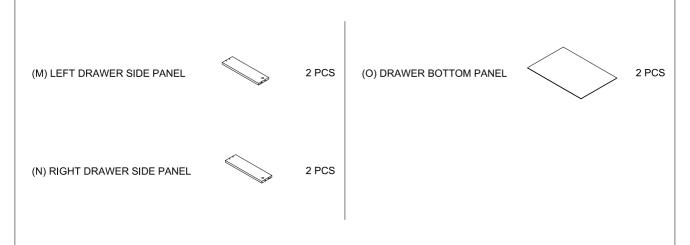



Z	HARDWARE PACKAGE						
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	8	GLIDES L = 350mm	CL CR DL DL	2 SET
2	WOODEN DOWEL Ø8x30mm		42 PCS	9	GLIDES SCREW ¢3x12mm	Damme	24 PCS
3	CAM BOLT Ø7x35.5mm		20 PCS	10	HANDLE		2 PCS
4	CAM LOCK Ø15x12mm		20 PCS	11	HANDLE BOLT M5x25mm		4 PCS
5	SCREW Ø4.5x42mm	AUTUTU (B)	4 PCS	12	NUT M5		4 PCS
6	DRAWER SCREW Ø4.3x35mm	attitute &	8 PCS	13	STICKER Ø20mm		4 PCS
7	PLASTIC FEET Ø15mm	٨	6 PCS				

Z8,Z10,Z11,Z12 not included in blister packaging.

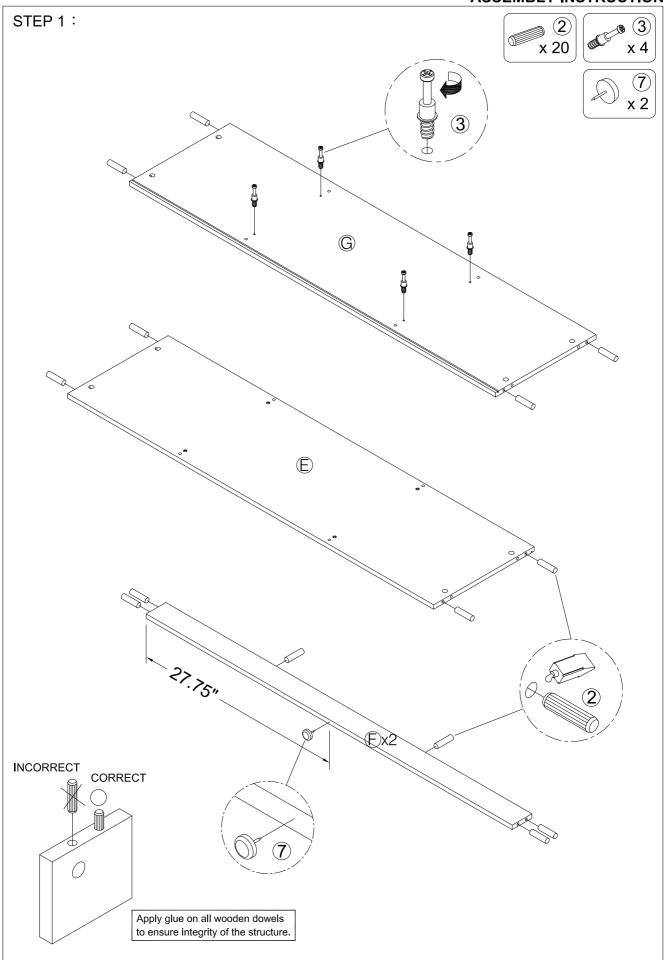

page 4 of 10

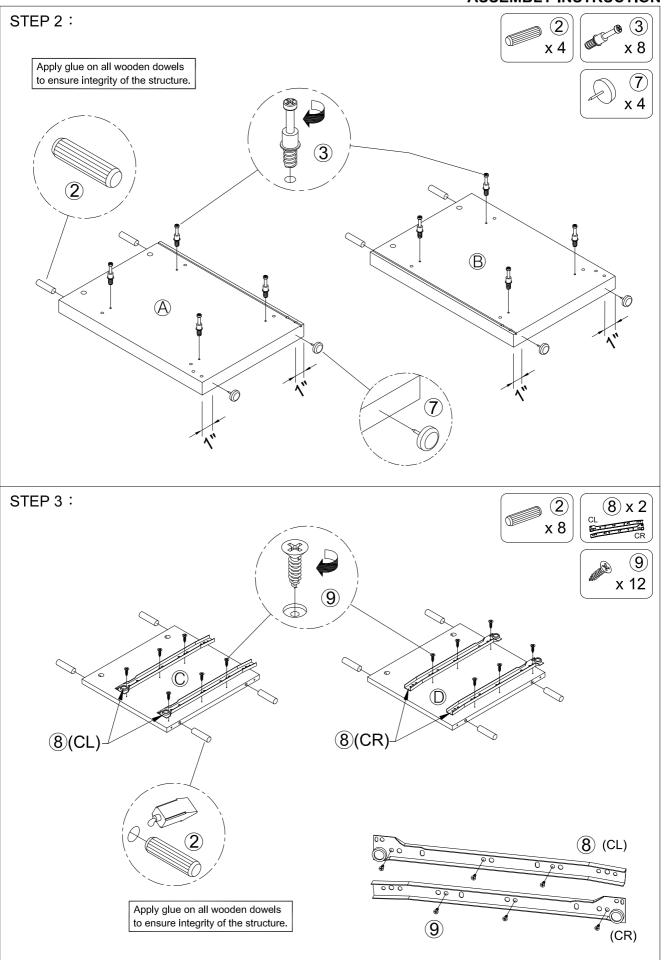

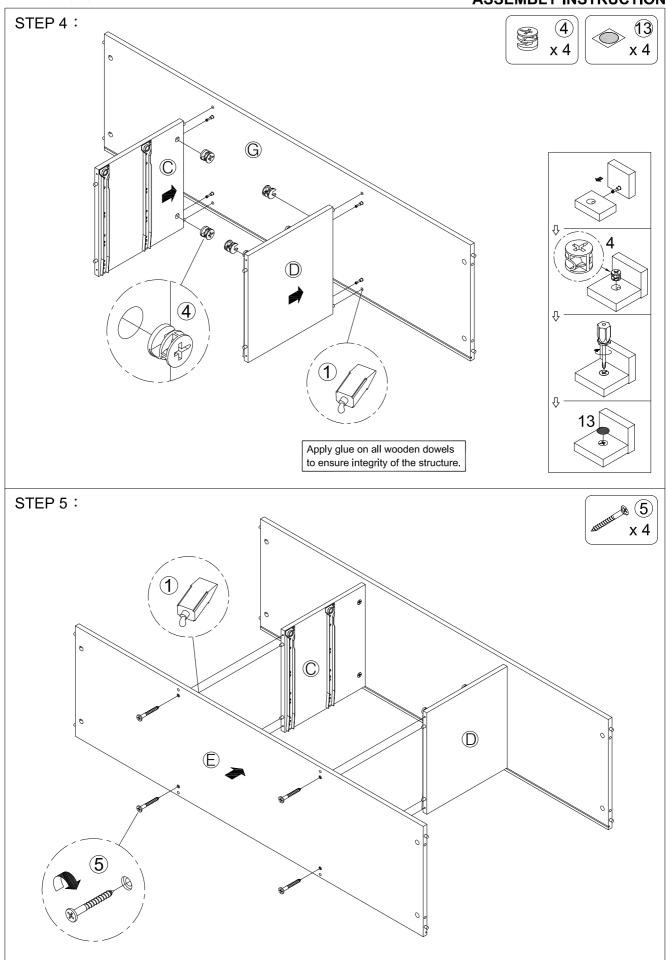

page 6 of 10

