

LED Product Information and Warnings

Important

- **Always disconnect the power before installing or replacing bulbs and before cleaning or other maintenance.**
- **Consult a qualified, licensed electrician to ensure correct branch circuit conductor.**

- Please read all included assembly instructions and warnings carefully before installation. Contact Customer Service if you have any questions or concerns. Before installation, please confirm that the fixture is compatible with your supply voltage and dimming system, if present.
- LEDs are highly sensitive electronic devices, and must be treated with care. Do not open any factory sealed compartments, and avoid touching the LEDs with your hands or any object.
- Although all our fixtures are equipped with protective devices, LED fixtures are vulnerable to power surges and supply variations. Do not install LED fixtures on the same circuit as any motors, appliances, or HVAC systems.
- Do not remove or bypass any LED Driver or Transformer that is provided with the fixture, and do not replace or substitute with another power supply.
- Remote LED Driver or Transformer installation must be done by a licensed electrician and in accordance with local codes. Remote installations should be in an accessible location, as close to the fixture as possible.
- Fixtures must be wired in parallel on independent leads; do not "daisy chain" multiple fixtures together or wire them in series.
- All factory-made splices and connections must remain intact. LED circuits are carefully designed and built, and improper connections may damage the fixture.
- The ends of coaxial pendant cords have been precisely stripped and split at the factory and must not be field cut. Excess cord or cable should be neatly coiled and reserved in the fixture canopy.
- Any mounting hardware is provided for your convenience and should be used with discretion. Always use the appropriate hardware for the mounting surface.

December 8, 2016

Assembly Instructions

2981


INSTRUCTIONS D'INSTALLATION

Liquid Series - Large 3-Light Round LED Pendant

Important

- Always disconnect the power before installing or replacing bulbs and before cleaning or other maintenance.
 - Consult a qualified, licensed electrician to ensure correct branch circuit conductor.
- Consulter un électricien qualifié pour vous assurer que les conducteurs de la dérivation sont adéquats.*

1. Shut off power to the outlet box (A).
2. Determine the height at which the fixture is to be hung. Insert the steel cables (B) through the locks (C) and adjust to the desired length. To shorten the cable, push the cable (B) up and it will be locked automatically. To lengthen the cable, lift up on the cable and push up on the lock (C). While keeping the lock depressed, lower the cable to the desired length. Release the lock to set (Fig. 1).
3. Use the screwdriver (D) to loosen the set screws (E). Feed the power cords (F) through the bushings (G) in the canopy (H). Adjust the power cords (F) to the desired length.
4. Connect the fixture wires to the lever nuts (J) by pulling up on the lever for an empty slot (Fig. 2), inserting the wire, and pushing the lever back down to lock. The white inner conductor (K) and black outer conductor (L) on each cord (F) must be connected to separate lever nuts, as shown (Fig. 3).
5. Make appropriate electrical connections using wire nuts:
 - a. Connect the transformer's (M) live wire (black) to the live outlet box wire.
 - b. Connect the transformer's (M) neutral wire (white) to the neutral outlet box wire.
 - c. Connect fixture's ground wire (green or uncoated) to the ground outlet box wire.
 - d. Carefully place connections and transformer (M) in outlet box (A).
6. Reserve extra cords (F) and lever nuts (J) in canopy (H).
7. Attach cross bar (N) to the outlet box (A), secure with outlet box screws (P).
8. Attach canopy (H) to nipple (Q), secure with finial (R).
9. Install included G4 LED Bulb (S).
10. Slide dust cover (T) onto fixture (U).
11. Install glass (V) onto the fixture using threaded pins (W).
12. Remove the slack from the power cords (F) and tighten the set screws (E).
13. Restore power to the fixture.

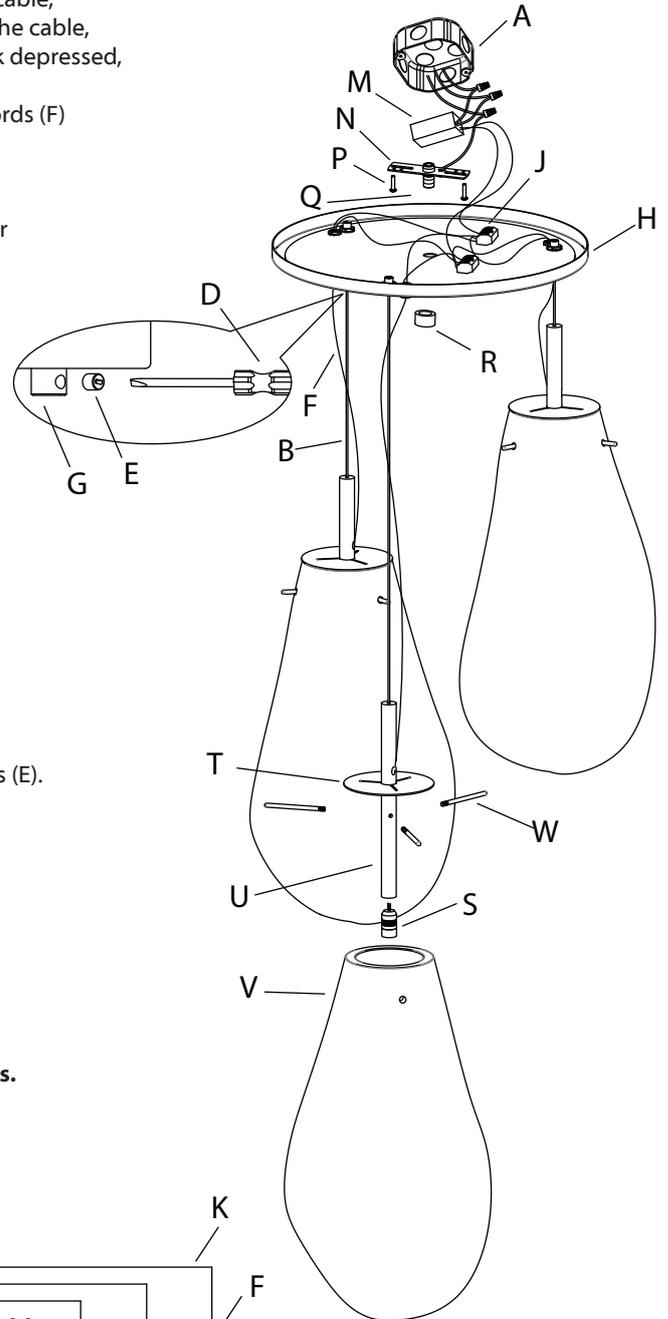

Note

- The outlet box must be at least 4" DIA and 1.5" deep to fit the transformer.
- This fixture is dimmable with Electronic Low Voltage (Trailing-Edge) type dimmers only.

Care Instructions

- **Dusting:** Use a clean, dry cloth.
- **Cleaning:** To protect the finish, avoid any harsh abrasives or chemicals.

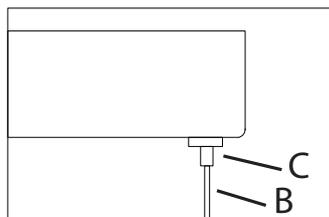


Fig. 1



Fig. 2

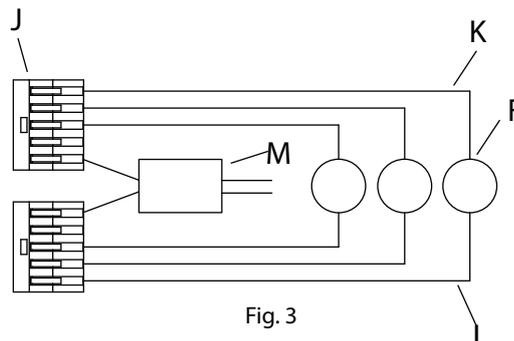


Fig. 3