


OFFICE CHAIR



Assembly Instructions - Important:

Carefully unpack and identify each component before attempting to assemble. Refer to parts list. Please take care when assembling the unit and always set the parts on a clean, soft surface. If you require any assistance with assembly, parts or information on other products, please visit our website or call or write us.

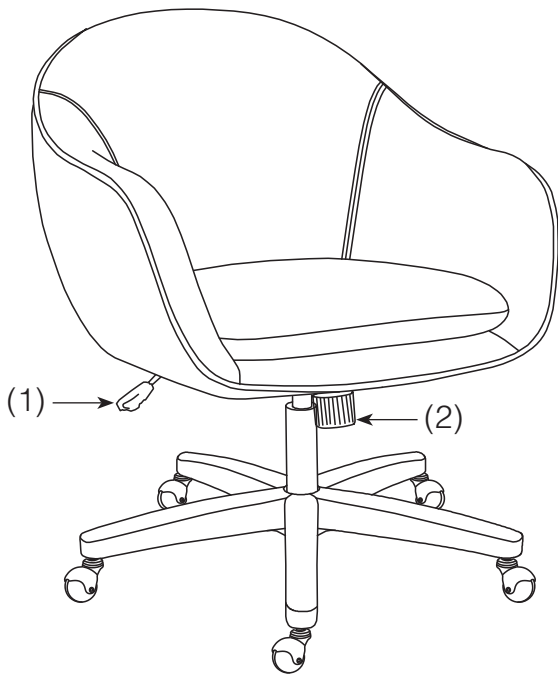

FEATURES

• PNEUMATIC SEAT HEIGHT ADJUSTMENT

To raise seat remove pressure from seat and pull lever (1) up.

To lower seat height sit on chair and pull lever (1) up.

NOTE: It is normal for chair to slightly lower under body weight.

• LOCKING TILT ADJUSTMENT

For individual comfort, this chair has been equipped with an adjustment that will allow the user to change the tension of the tilting feature.

Turn knob (2) clockwise to increase tension and counter-clockwise to decrease or ease the tension. To lock, return chair to the upright position and push lever (1) in. To unlock, pull lever (1) out.

NOTE: Be careful not to loosen back tilt adjustment knob completely.

1. Do not use this product unless all screws and bolts are securely tightened.
2. Check that all screws and bolts are tight every three months or as needed.
3. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
4. Do not use this product as a stepladder.
5. Use this product for its intended purpose only.
6. **FOR RESIDENTIAL USE ONLY.**

OFFICE CHAIRS LIMITED WARRANTY

Our office chairs are warranted from the date of purchase against failure due to material and workmanship as follows


- 2 Years on all non-moving metal parts.
- 1Years on component parts including Control mechanisms, pneumatic cylinders, wood, plastic parts, base and casters.
- 1 Year on upholstery fabric and foam against wear and deterioration.
- We cannot warrant leather against routine scratching and scuffing, as all leather is subject to minor blemishes in normal use.

*All warranties are limited to the original purchaser for normal Residential usage by persons weighing 200 lbs. or less. This warranty will not cover labor, freight or damage from misuse, abuse, negligence, alteration, accident, vandalism, rusting, acts of nature or any other event beyond the control of us. The warranty does not cover cosmetic damage that may result from normal use. Liability for incidental or consequential damages is excluded. The user assumes all risk of injury resulting from use of this product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.


The seating under this warranty is not intended for commercial use (40-hour work week).

It is the customer's responsibility to prepay freight on any components returned to the factory. Return freight on components covered by warranty will be paid by us.

PARTS

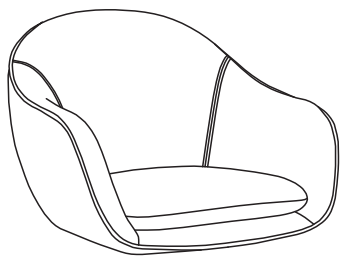


(A) Chair Body (1 PC)

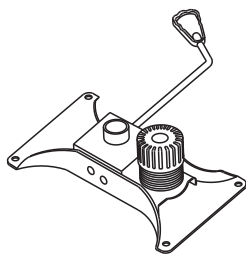


(B) Seat Plate (1 PC)



(C) Pneumatic Cylinder (1 PC)

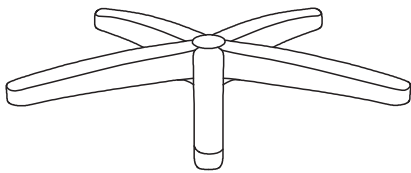


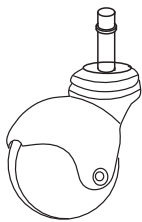


(D) Base (1 PC)




 (E) Casters (5 PCS)

HARDWARE LIST


NO	DRAWING	DESCRIPTION	QUANTITY
1		Bolt	4 PCS
2		Lock Washer	4 PCS
3		Flat Washer	4 PCS
4		Allen Wrench	1 PC

STEP 1

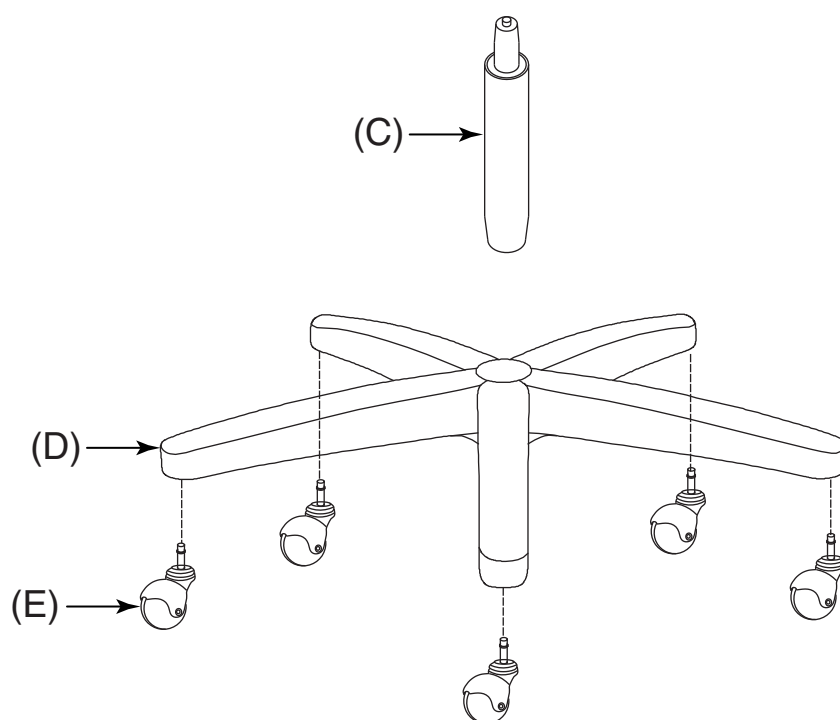


PUSH HARD UNTIL YOU FEEL OR HEAR THE CASTERS (E) SNAP INTO PLACE.

STEP 2

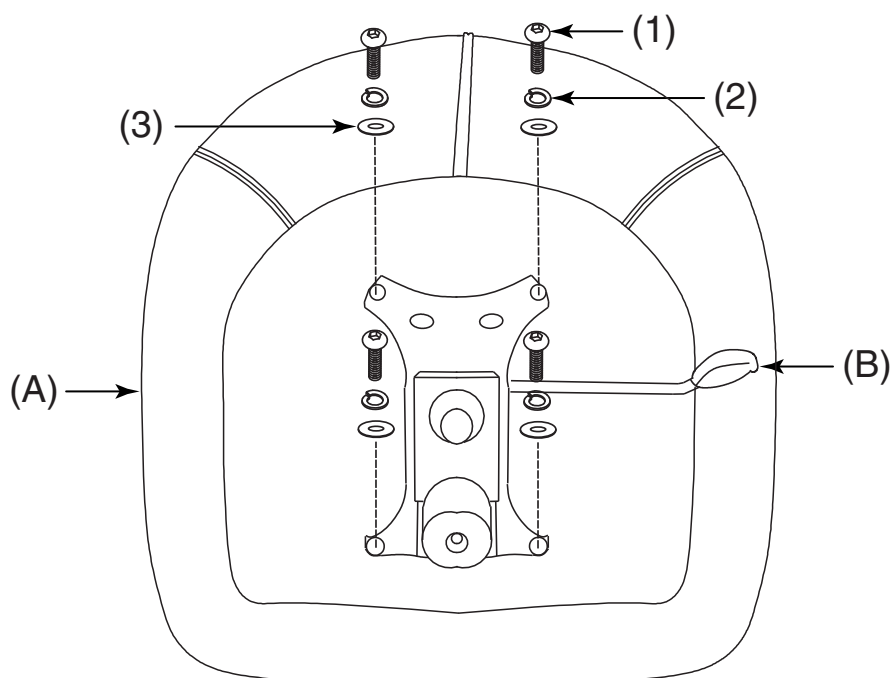

FULLY TIGHTEN BOLTS (1).

STEP 3

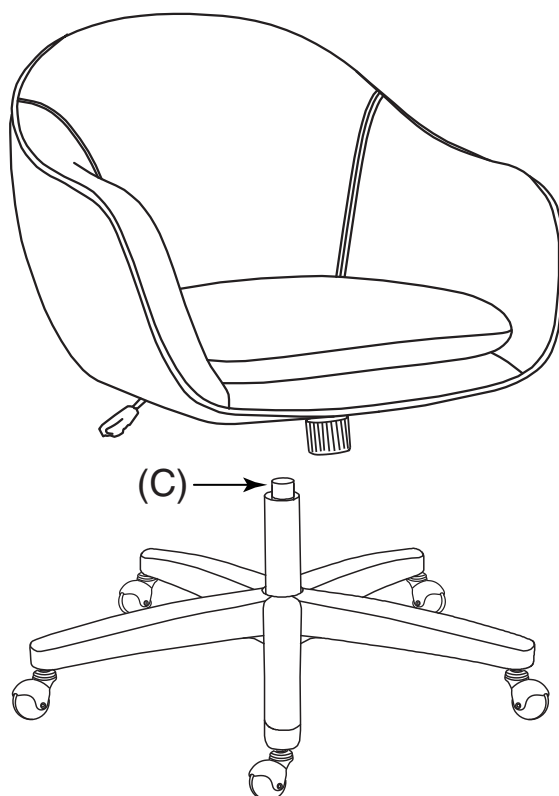

PLACE THE ASSEMBLED SEAT ON TOP OF PNEUMATIC CYLINDER (C) AND APPLY DOWNWARD PRESSURE.