


Assembly Instructions

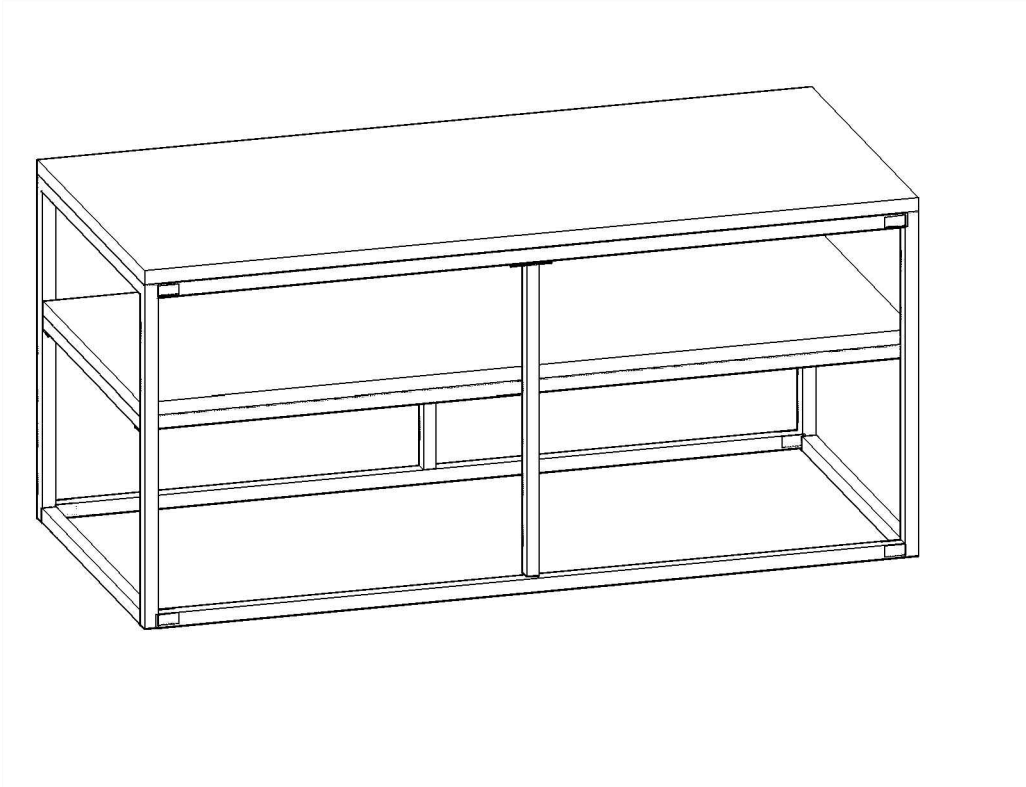


 











Thank you for purchasing our product!

 Please assemble the products with the guidance of this manual instruction. Contact our friendly customer service department with any comments or in case there is any missing or damaged parts or hardware.



We appreciate your business!


A		Frame	2PCS	F		Wooden Board	1PC
B		Connecting bar	2PCS	G		Wooden Board	1PC
C		Connecting bar	2PCS	H		Bolt 12mm	16PCS
D		Frame	1PC	I		Bolt 25mm	2PCS
E		Connecting bar	2PCS	J		Bolt 30mm	2PCS
				K		Screw 15mm	12PCS
				L		FLAT WASHER	8PCS
				M		Allen Wrench	1PC

NOTE:

- 1)Please be advise to have at least 2 persons to assemble this unit
2) Tools not included,but essential for assembling this unit:


"Philips"Screwdriver


- 3)Place a large cloth or blanket on the floor or flat surface to protect parts from scratching
4)Before assembling this unit ,please check that all parts and hardware are present

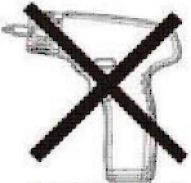


DO NOT USE
POWER TOOLS


STEP 1

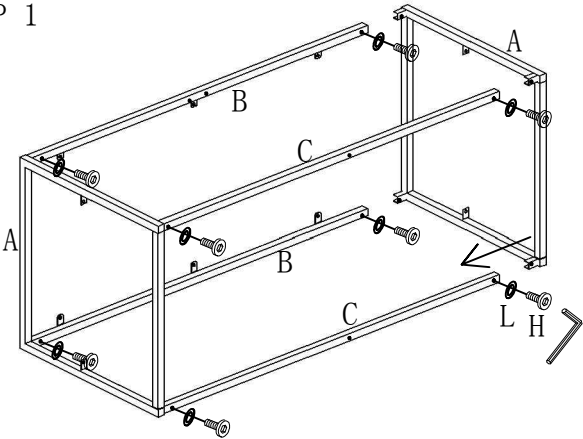

STEP 2

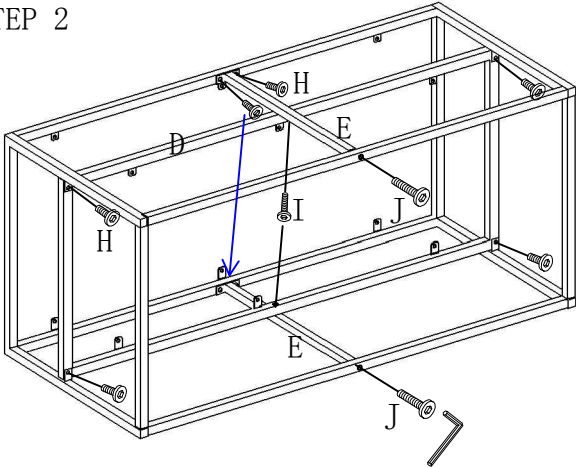

STEP 3

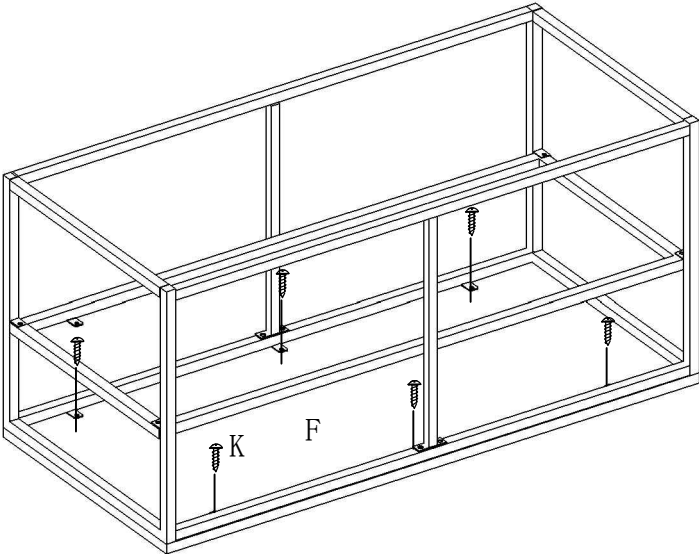

STEP 4

