



 
 
 
 









# Right Arm Sofa

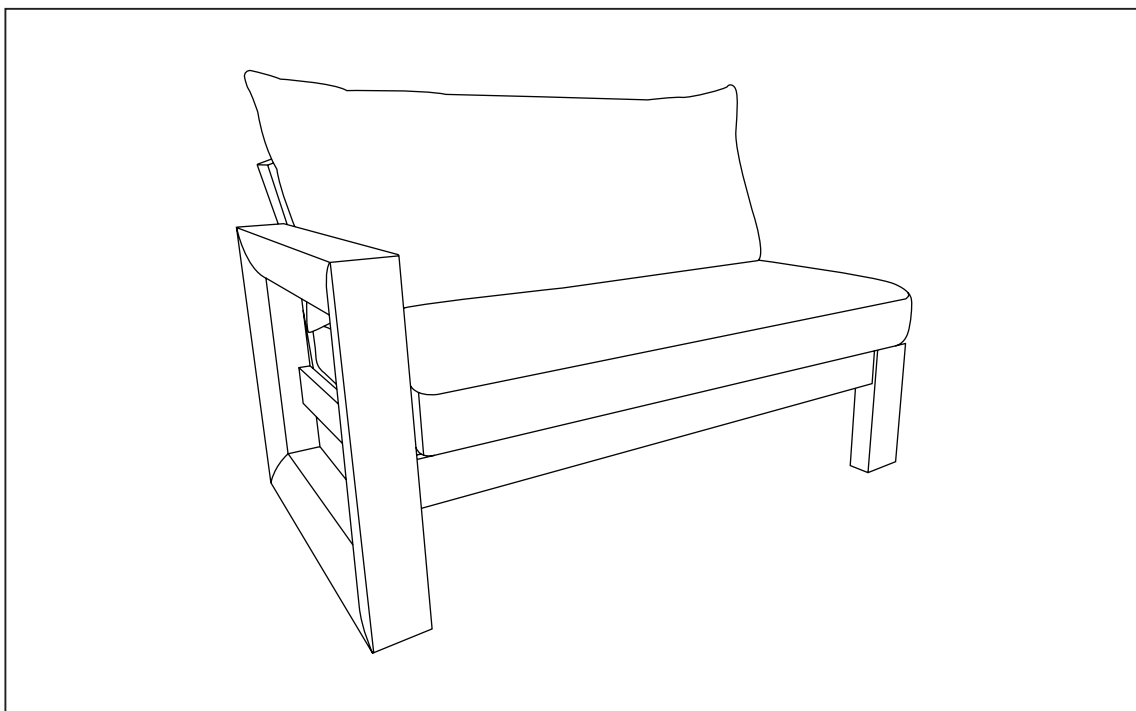

## ASSEMBLY INSTRUCTIONS

**IMPORTANT, RETAIN FOR FUTURE REFERENCE.  
READ CAREFULLY.**

  
## PARTS LIST

NO	PICTURE	PART DESCRIPTION	QTY.
A		Sofa Back	1
B		Sofa Seat	1
C		Right leg frame	1
D		Left leg frame	1
E		Support rail	1
F		Screw (M7 x 130)	2
G		Bolt (M8 x 130)	2
H		Bolt (M6 x 70)	2
I		Barrel nut	4
J		Screw (M6 x 45)	4
K		Allen wrench	2
L		Plastic cap	4
M		Plastic cap	2
N		Barrel nut extension bolt (M6 x 40)	1

## Step 1.

### ATTACH BACK AND SUPPORT RAIL TO RIGHT LEG FRAME


1. Attach the top of back (A) to the right leg frame (C) using screw (F) and allen wrench (K).
2. Attach the bottom of back (A) to the right leg frame (C) using bolt (H), barrel nut (I), and allen wrenches (K).
3. Attach the support rail (E) to the right leg frame (C) using bolt (G), barrel nut (I), bolt extension for barrel nut (N), and allen wrench (K).

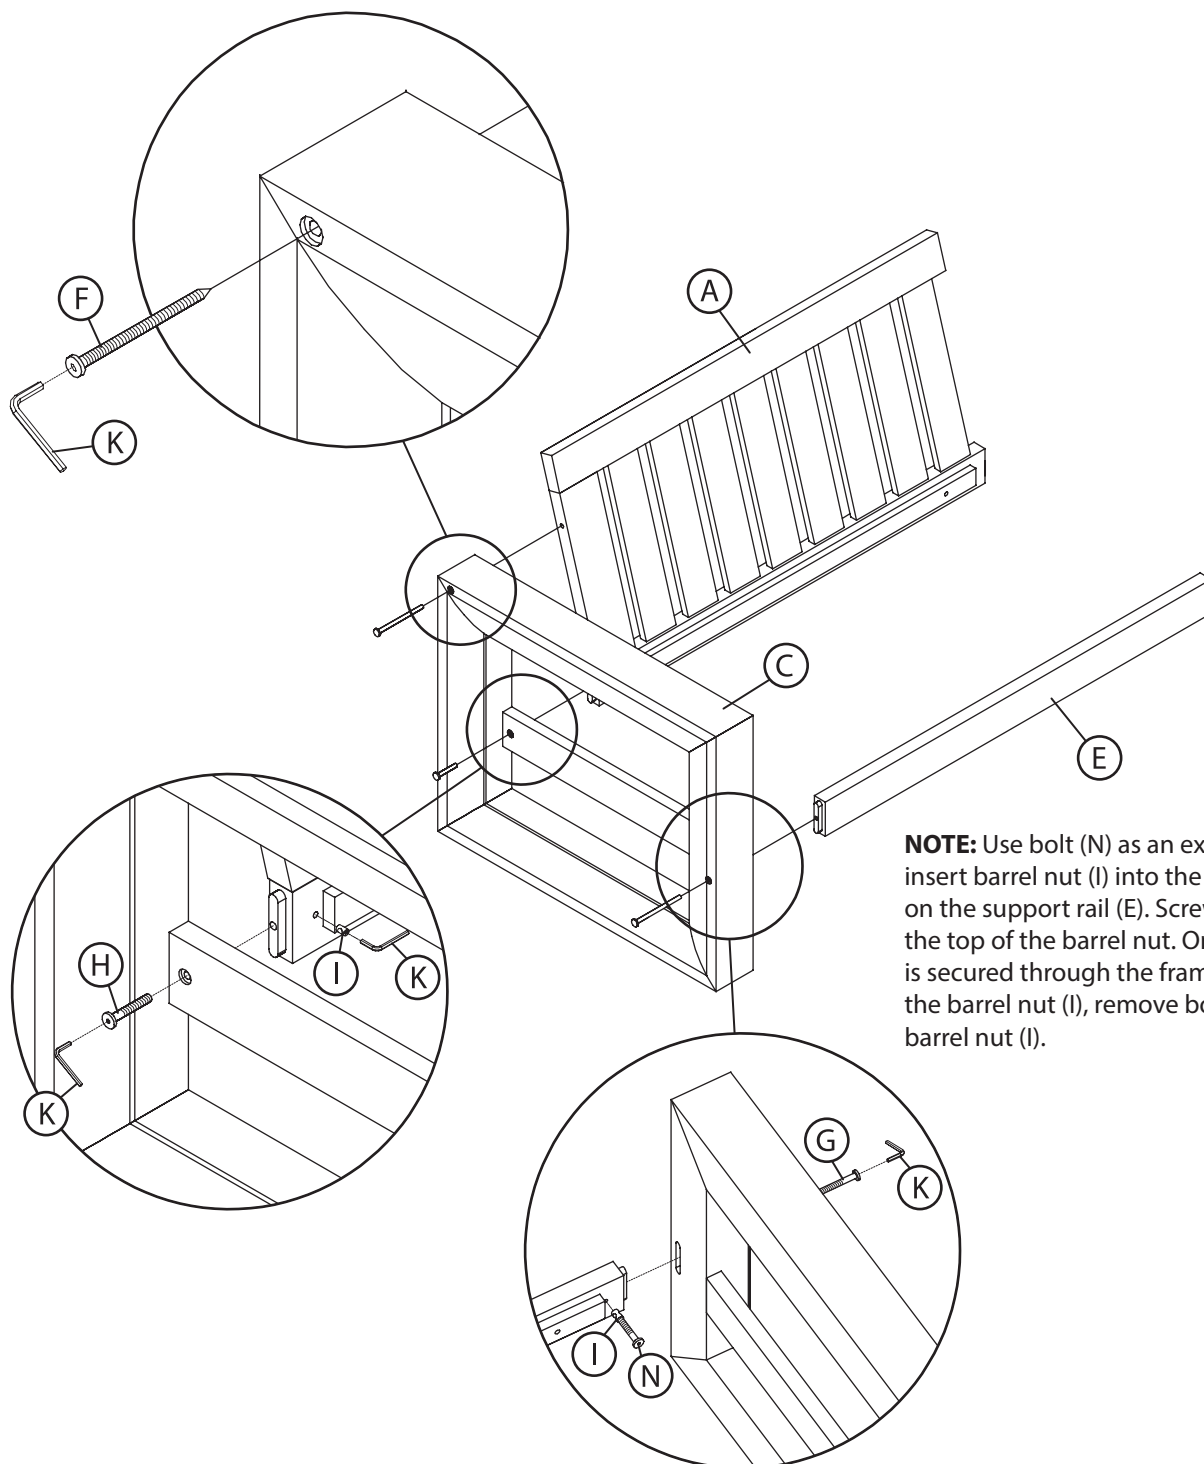

**NOTE:** Use bolt (N) as an extension to insert barrel nut (I) into the hole found on the support rail (E). Screw the bolt into the top of the barrel nut. Once bolt (G) is secured through the frame and into the barrel nut (I), remove bolt (N) from barrel nut (I).

## Step 2.



**ATTACH LEFT LEG FRAME TO BACK AND SUPPORT RAIL-** Repeat steps from step 1 on the left leg frame (D).

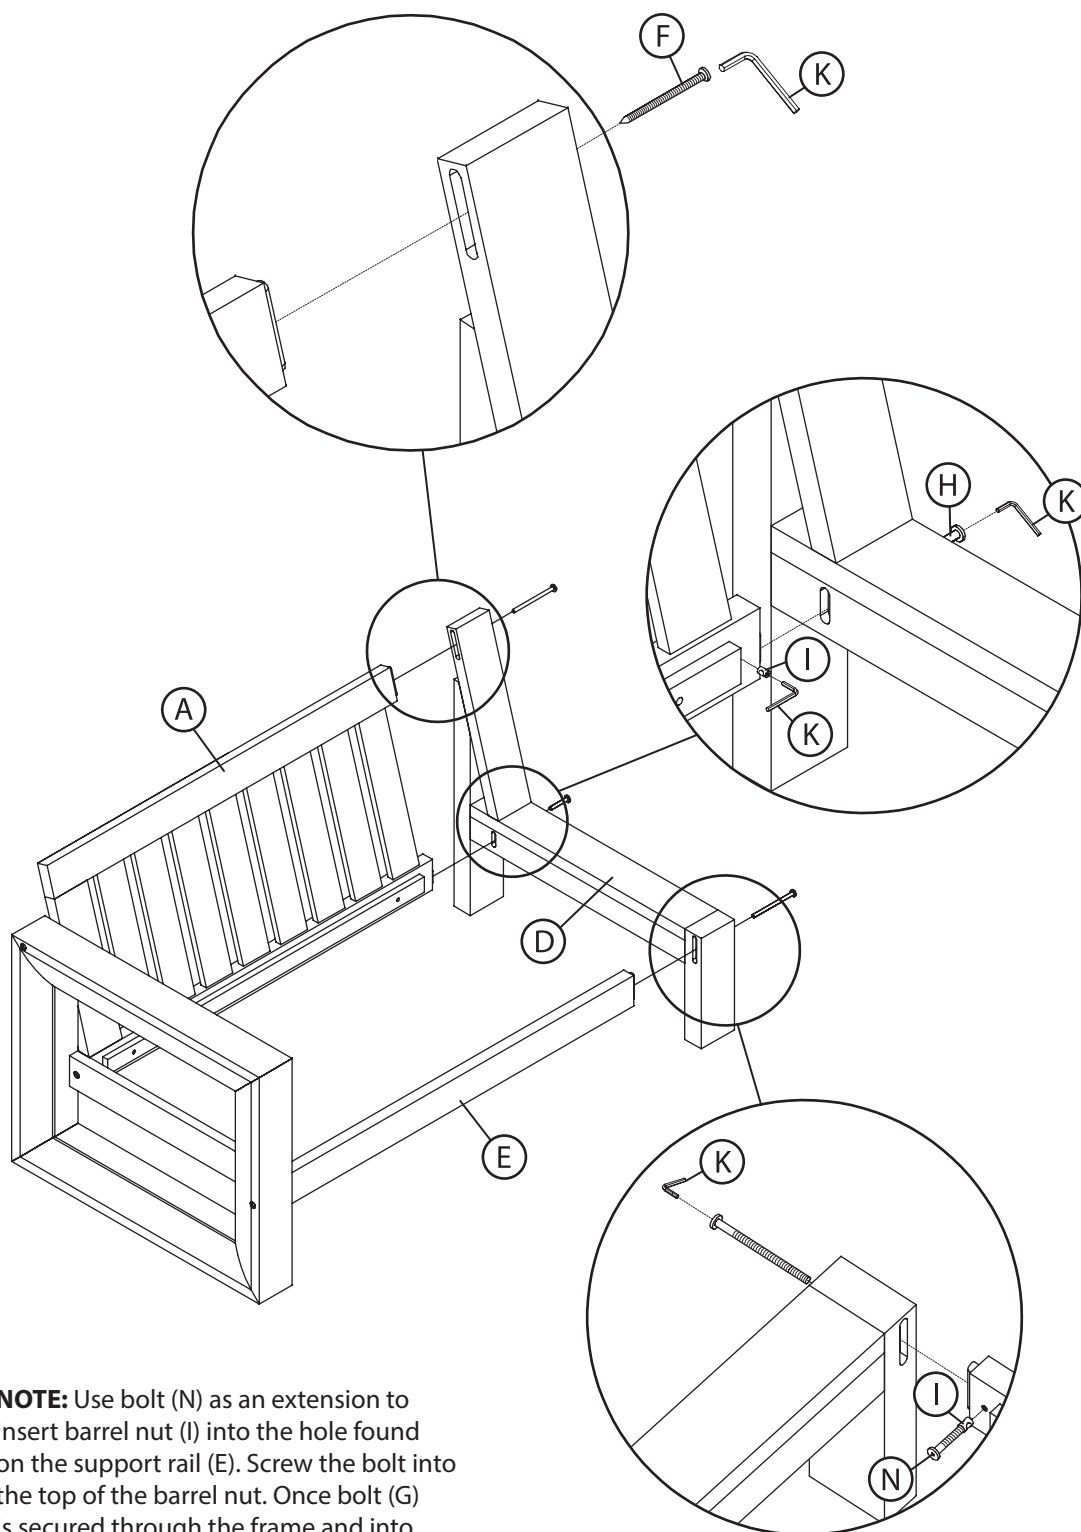

**NOTE:** Use bolt (N) as an extension to insert barrel nut (I) into the hole found on the support rail (E). Screw the bolt into the top of the barrel nut. Once bolt (G) is secured through the frame and into the barrel nut (I), remove bolt (N) from barrel nut (I).



### Step 3.

**ATTACH SEAT TO SOFA FRAME** - Place seat (B) in position on top of sofa frame. Attach seat (B) to support rail (E) and sofa back (A) using screws (J) and allen wrench (K).

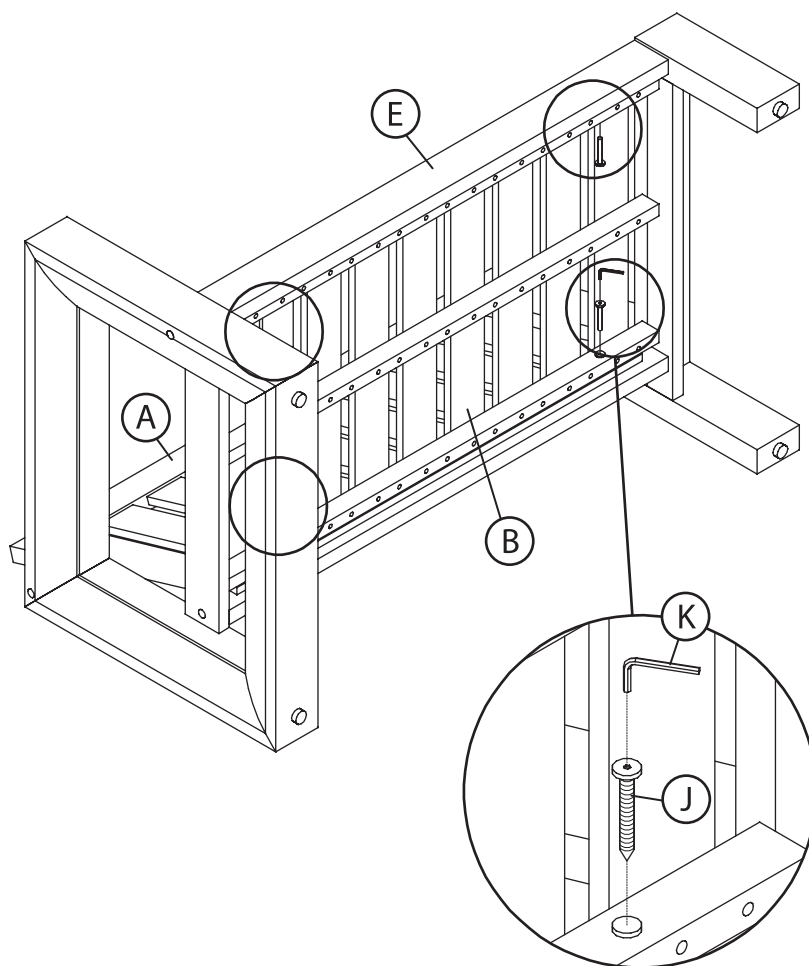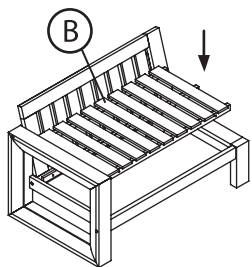


## Step 4.

**INSERT PLASTIC CAPS INTO BOLT HEADS-** Insert plastic caps (L) and (M) into exposed bolt and screw heads indicated below.

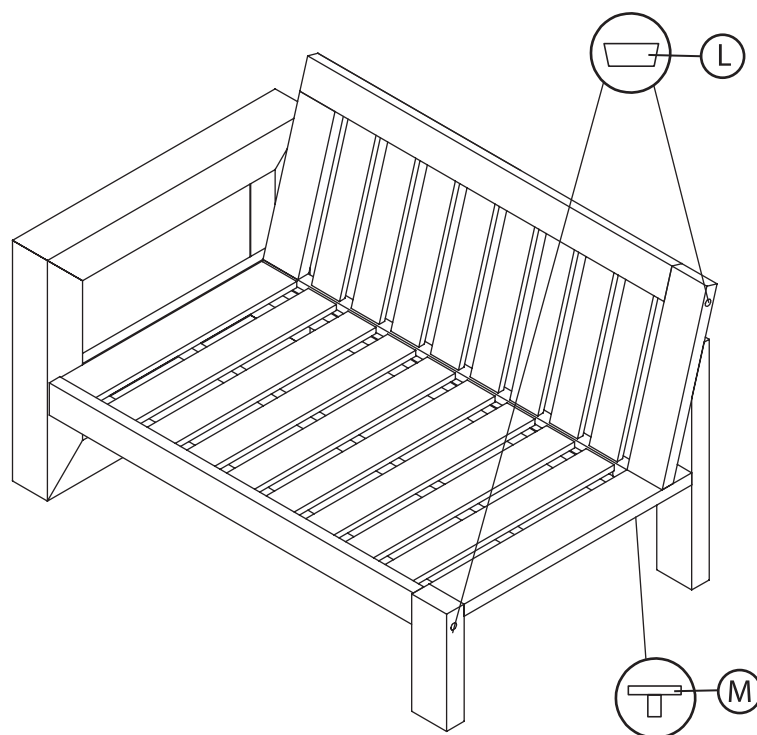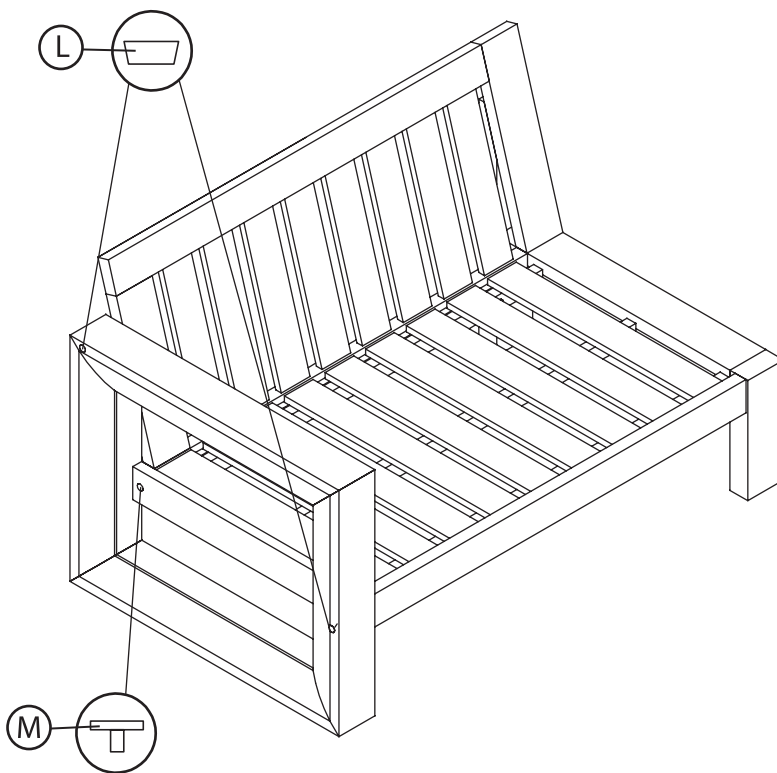


## Care and Maintenance

All outdoor furniture is subject to UV rays and weather elements. In order to keep your furniture as long lasting and vibrant as possible, we advise using furniture covers or storing the furniture when not in use. For more information about the materials used to make our furniture

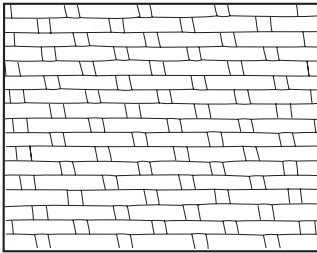


### WICKER

Simply washing your wicker with a mild detergent and protecting it as much as possible by covering and or storing it when not in use for long periods of time is sufficient.

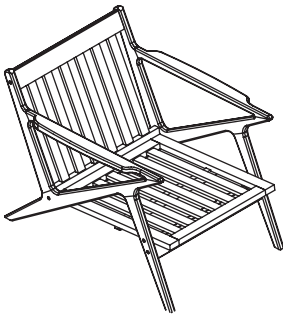


### WOOD FRAMES

Make sure all surfaces are protected from heat and liquids. Wipe up spills immediately and do not place furniture next to a heat source such as radiators or fires. All timber surfaces may change color. Spray polishes are best to avoid as they contain silicones which may spoil the surface by building up overtime. Check bolts and screws regularly and tighten when necessary.

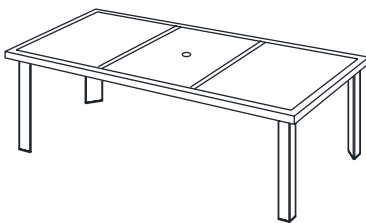

### STONE TOPS/ TABLE TOPS

Spills should be wiped up quickly to avoid any staining on the surface. Regular cleaning with mild soap and water with a sponge or soft scrub brush is all that is required. Storing or covering your natural stone top when not in use for extended periods of time is recommended.

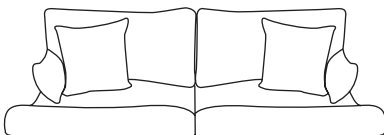

### FABRICS

Wipe off spills with a cloth and water. Fabrics designed to protect and last for several years. Fabrics are treated with a proprietary water and stain repellent.