

## **ASSEMBLY INSTRUCTION**

## **TUFTED DINING CHAIR**

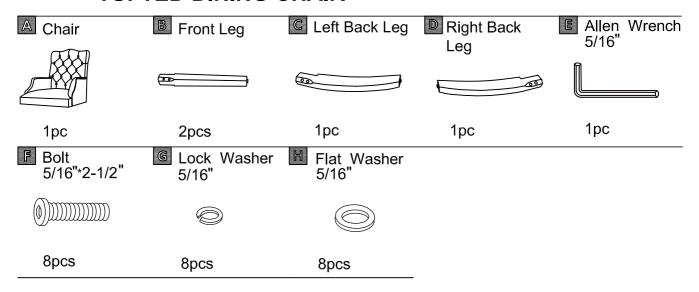

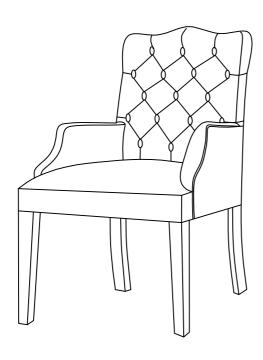


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

Put the chair(A) on a smooth flat surface, attached the two front legs(B) to the chair(A) use bolt(F), lock washer(G) and flat washer(H) on both of chair. Turn the allen wrench(E) in bolt(F). But not too tight.


Take the Allen Wrench, and turn the bolts until the legs are secure. DO NOT TIGHTEN COMPLETELY. Stop when you feel you are adding force to tighten the bolt.

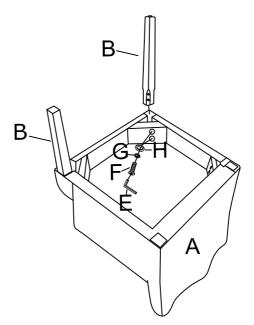

2

Put the chair(A) on a smooth flat surface, attached the left back leg(C) and the right back leg(D) to the chair(A) use bolt(F), lock washer(G) and flat washer(H) on both of chair. Turn the allen wrench(E) in bolt(F). But not too tight.

Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

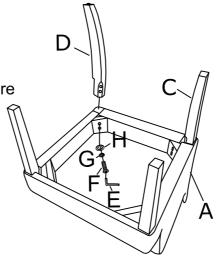

Helpful Tip:
-Instead of applying
downward pressure while
reaching under to tighten
bolts, have someone sit in
the chair while you tighten
the bolts.

## Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.