







Club Chairs

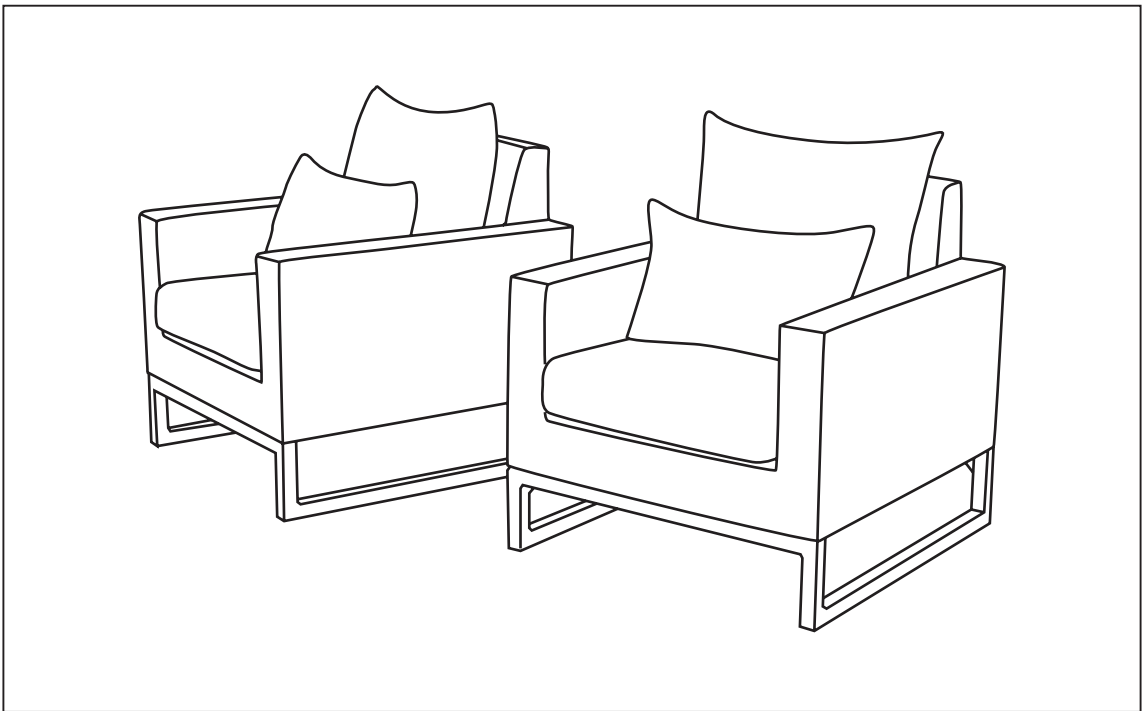

ASSEMBLY INSTRUCTIONS


**IMPORTANT, RETAIN FOR FUTURE REFERENCE.
READ CAREFULLY.**

    PARTS LIST

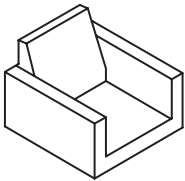NO.	PICTURE	PART DESCRIPTION	QTY.
A		Chair	1
B		Chair feet	2
C		Support bars	4
D		Bolt (M6*50)	4
E		Bolt (M6*15)	4
F		Washer (ø15*ø8.5*1.5)	8
G		#4 Allen wrench	1


Step 1.

ASSEMBLE CHAIR LEGS- Insert each side of support bars (C) into both chair legs (B). Use washers (F) and bolts (E) to secure chair legs together using the allen wrench (G).

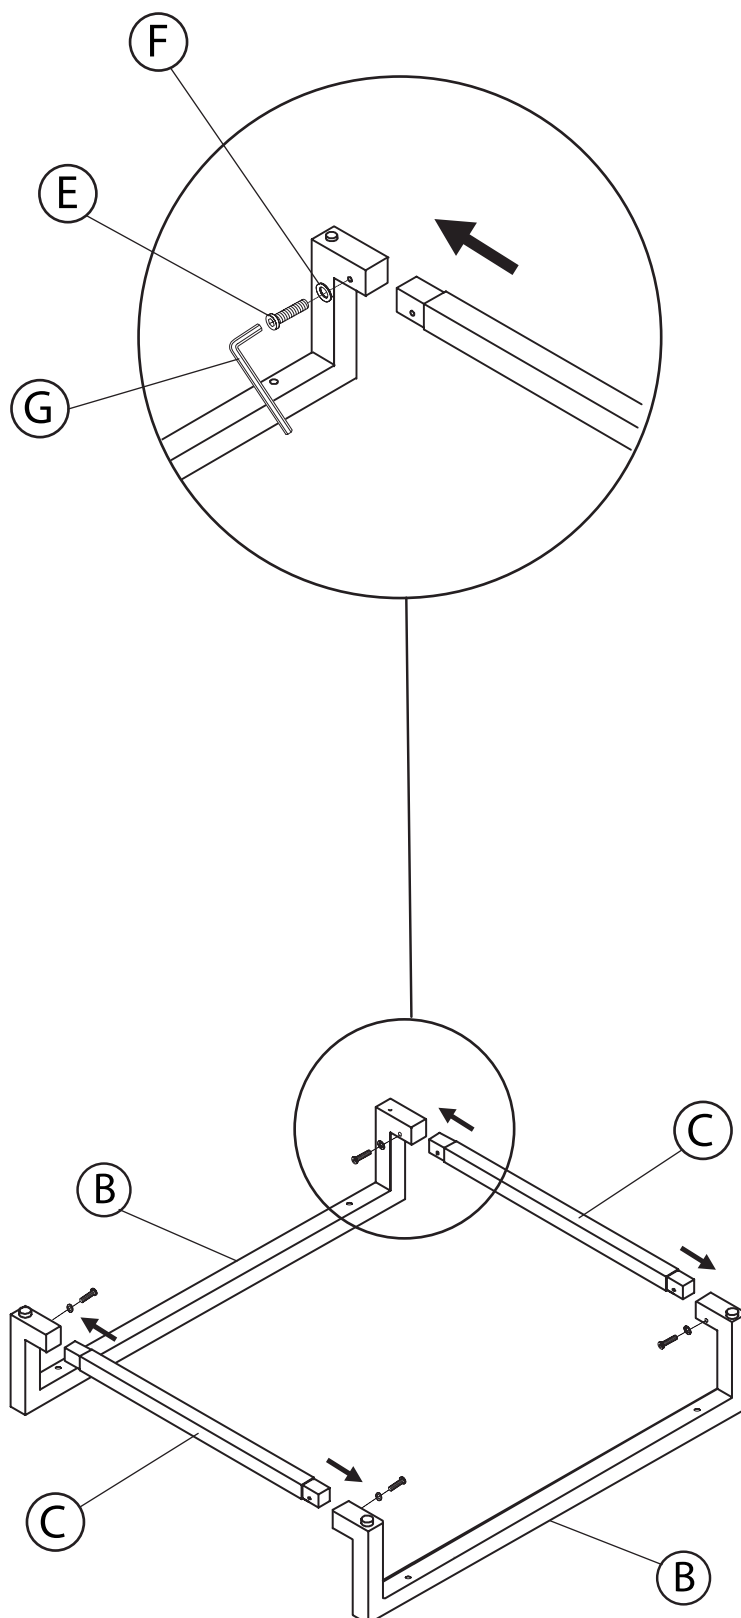


Step 2.

ATTACH CHAIR LEGS TO CHAIR- With chair (A) upside down, place the assembled chair feet (B) on top of chair. Fasten chair feet to the chair using washers (F), bolts (D), and allen wrench (G).

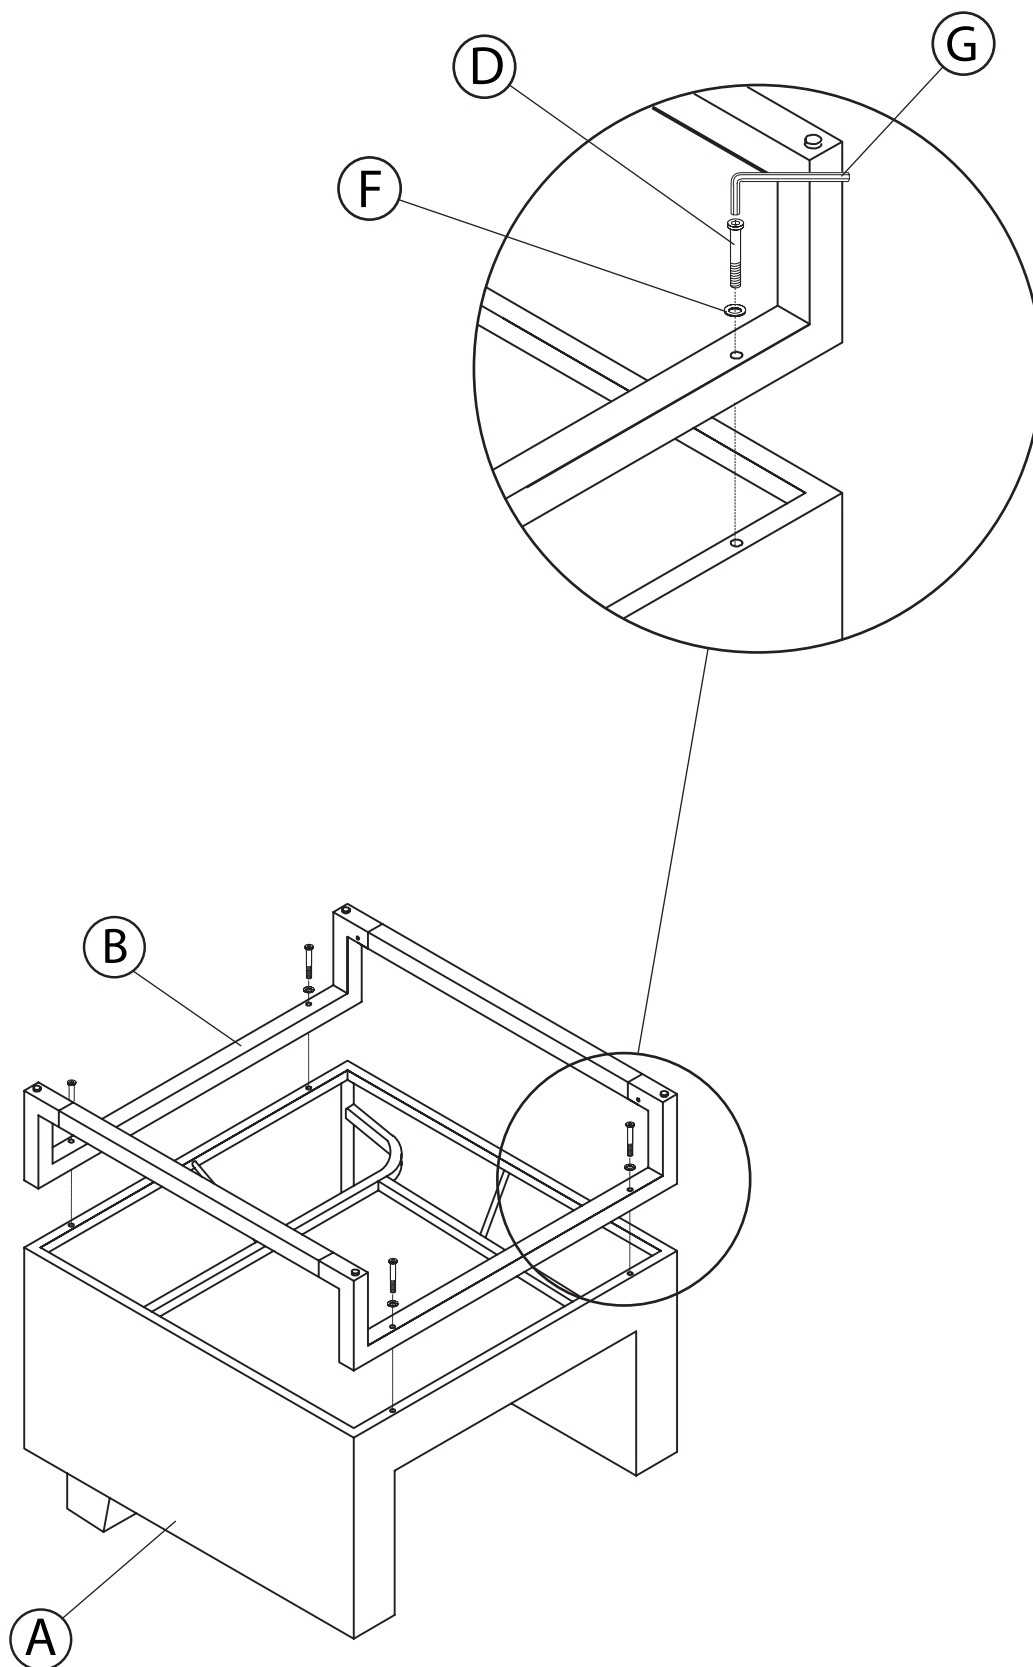


Care and Maintenance

All outdoor furniture is subject to UV rays and weather elements. In order to keep your furniture as long lasting and vibrant as possible, we advise using furniture covers or storing the furniture when not in use.

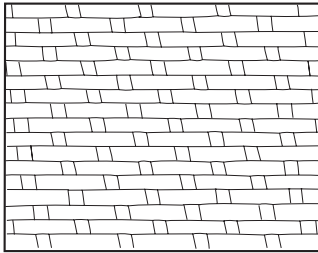


WICKER

Simply washing your wicker with a mild detergent and protecting it as much as possible by covering and or storing it when not in use for long periods of time is sufficient.

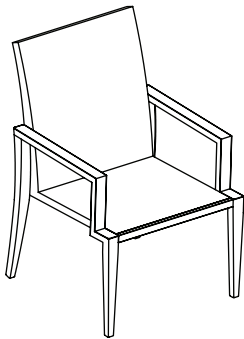


ALUMINUM FRAMES

furniture incorporates aluminum powder coated frames that are designed to require minimum maintenance. Avoid letting too much dirt build up by cleaning with mild soap and water. Never leave furniture standing in water.

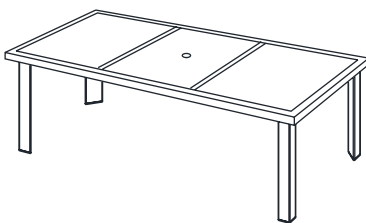

STONE TOPS/TABLE TOPS

Spills should be wiped up quickly to avoid any staining on the surface. Regular cleaning with mild soap and water with a sponge or soft scrub brush is all that is required. Storing or covering your natural stone top when not in use for extended periods of time is recommended.

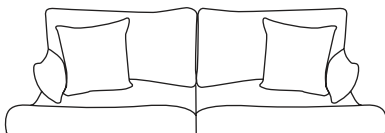

FABRICS

Wipe off spills with a cloth and water. fabrics designed to protect and last for several years. treated with a proprietary water and stain repellent.