

DINING CHAIR IN WHITE COLOR

ASSEMBLY INSTRUCTION



Assembly Instruction

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning !

1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

 
PARTS IDENTIFICATION

A CHAIR BACK




1PC

B SEAT



1PC

 C FRONT LEGS




2PCS

HARDWARE IDENTIFICATION


NO	DESCRIPTION	FIGURE	Q' TY
1	Ø ALLEN KEY 5mm		1PC
2	Ø LOCK WASHER 5/16"		10PCS
3	Ø FLAT WASHER 5/16"		10PCS
4	Ø BOLT-SMALL 5/16"X2"		2PCS
5	Ø BOLT-MEDIUM 5/16"X2-1/4"		4PCS
6	Ø BOLT-LARGE 5/16"X3-1/2"		4PCS

STEP : 1

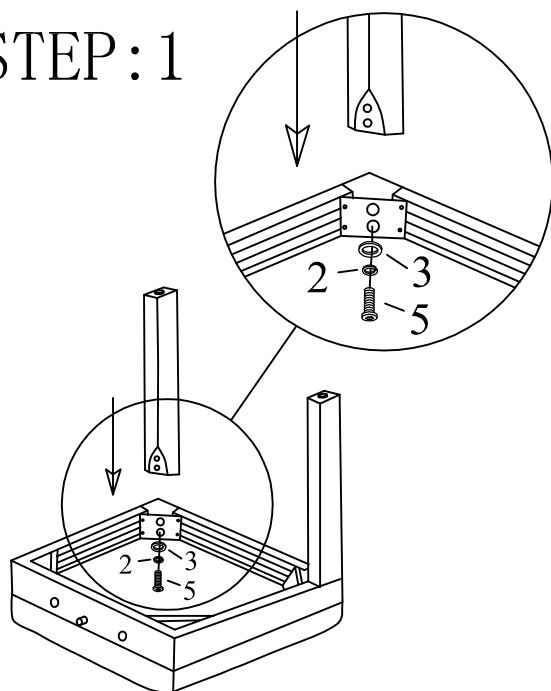

Put the seat (B) on a smooth flat surface. Attach one front leg (C) to the seat (B). Use bolt (5), lock washer (2) and flat washer (3) on both of hole of seat. Turn the Allen wrench (1) in Bolt (5). Do not over tighten.

STEP : 2

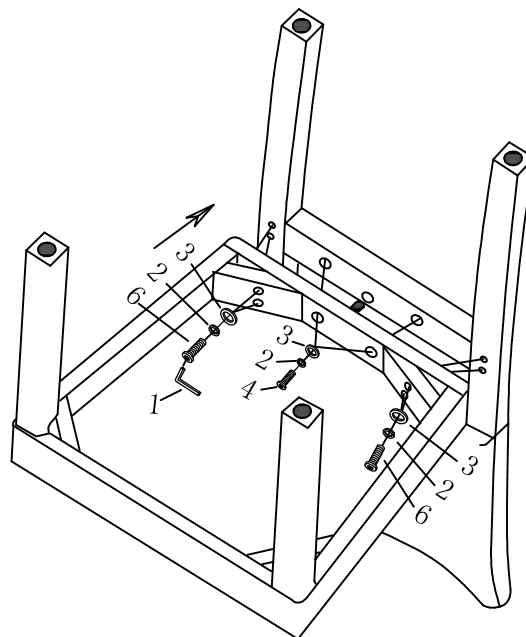

Put chair back (A) on a smooth flat surface. Attach the seat (B) with 2 front legs to the chair back (A). Use the bolt (6), lock washer (2), Flat washer (3) in both holes of the seat (B) and chair back (A). Turn the Allen Wrench (1) in Bolt (6). Do not over tighten.

Use the bolt (4), lock washer (2), flat washer (3) in both of hole of seat (B) and chair back (A); turn the Allen wrench (1) to tighten the Bolt (4).

STEP : 3

