 


## **Brown Christmas Tree with Warm White LED Lights**

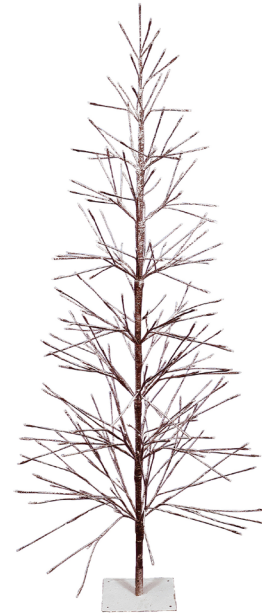

## LIMITED WARRANTY INFORMATION

Thank you for choosing an Alpine product! We aim to please with our wide range of products including Fountains, Birdbaths, Statuary, Pond Supplies & More. All of our products are constructed from the highest quality materials. In the event that we have not achieved our usual standard of excellence, we will repair or replace, at our discretion, within the warranty period. A valid proof of purchase, with the purchase date clearly indicated, must be provided. Photos of defective merchandise will also be required to help distinguish the actual cause of the defect. Please read below for a detailed description of warranty coverage.

- **Water Damage**

Alpine products are not manufactured to withstand extreme temperatures. Improper storage that allows water to freeze within a product may cause damage, is considered negligence, and will not be covered under this warranty. The use of "hard water," and/or caustic cleaners, can affect the painted or other finishes. Failure to keep the unit clean, and use of such additives/cleaners, will also void the warranty. Please note: for fountains, it is normal for some splashing to occur and protecting the immediate surfaces is not the responsibility of Alpine Corporation.

- **Paint & Color (Retention and/or Loss)**

The use of water will cause natural erosion to the color. This area can be touched up using standard paint. The paint is designed to protect the entire finish against breakdown of color. As with any product, all finishes with time will gradually fade and discolor. The warranty will only cover against severe or complete fading, within the first year from date of purchase, with the above exclusion.

- **Not Covered Under Warranty**

The limited warranty will NOT cover cases of damages due to:

 
1. Damages caused in Transit
2. Inadequate care and/or neglect
3. Environmental and/or natural elements
4. Immersion in water, unless specified
5. Improper Installation/Storage and/or Maintenance

*This warranty is void if the product has been damaged by accident, misuse, negligence, improper installation and/or modifications have occurred. This includes any and/or all defects arising out of freezing water damage, hard water damage, failure to keep the unit clean and free of harmful additives such as bleach, chlorine, etc.... which affects the paint and/or parts. This warranty also does not cover any additional charges or installation, removal, disposal and/or shipping costs or consequential damage associated with any warranty claim.*

## CONTENTS

Contents .....	1
What's Included.....	2
Features.....	3
Specifications.....	3
Assembling & Using Your Product .....	4
Replacement Parts.....	6
Caution.....	7
Warranty.....	8

## WHAT'S INCLUDED

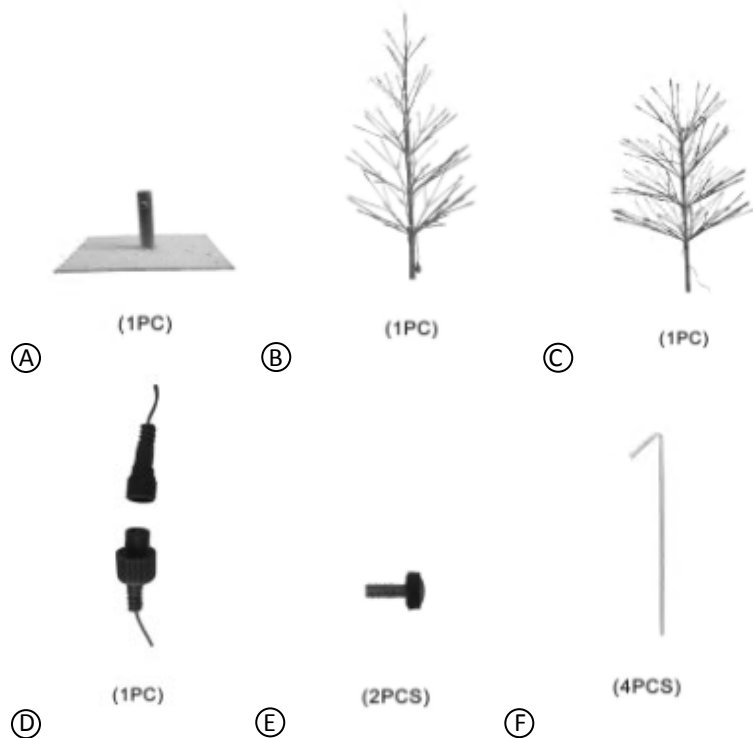

- A) Base Plate  
B) Tree Top Half  
C) Tree Bottom Half  
D) LED Cord  
E) Screws (2)  
F) Ground Support Stakes (4)

## CAUTION

 


- Always unplug the pump from the electrical outlet before cleaning & handling
- Disconnect and store the unit in a dry place when not in use for a long period of time.
- Do not lift, carry or pull the decor by the power cord.
- Do not exceed the maximum voltage & wattage on transformer.

## ASSEMBLING & USING YOUR PRODUCT


Unpack all components carefully. Check to ensure all parts have been removed from the packaging.

1. Find a clean and even surface to place your Christmas décor. Place the base plate (A) on the ground and insert the tree bottom half (C) into the base plate by turning counter-clockwise until tightly secured.

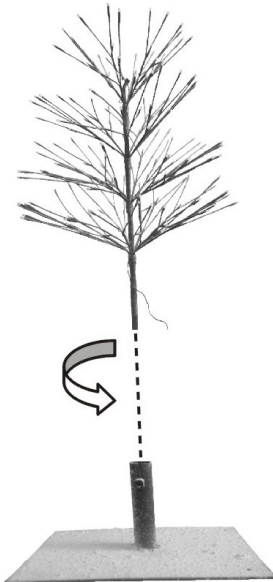


2. Insert the tree top half (B) on top of the tree bottom half (C) by turning counter-clockwise until tightly secured.

 
Then, connect the LED cord (D) that runs through both tree topper components and turn clockwise until tightly secured.

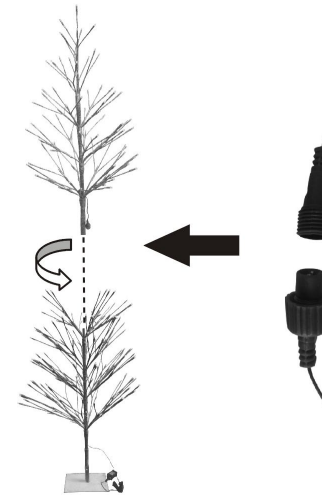

 3. Secure the assembled tree toppers and the base plate area by using the provided screws (E) and inserting one on each hole as indicated and turn clockwise until tightly secured.

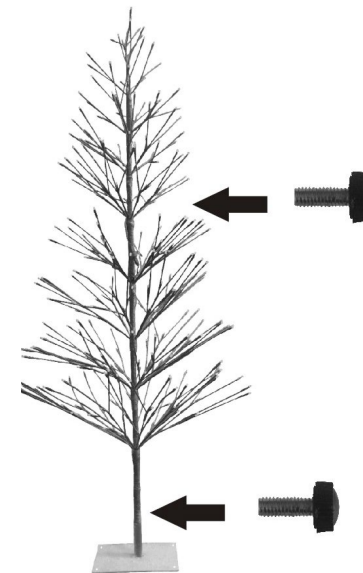

 4. For added support, you may use the ground support stakes (F) and insert it into the hole found on each corner of the base plate (A) all the way into the ground.

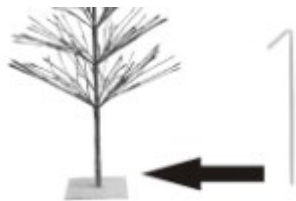

5. Congratulations! Your Christmas tree décor is now completely assembled. Plug the power cord into the nearest outlet for a stunning light display.

**Relax and enjoy your new holiday décor**



 
#### REPLACEMENT PARTS

For parts or additional help with your new product, please contact Alpine customer service.

#### FEATURES

- 296 Warm White LED Lights

- Collapsible design

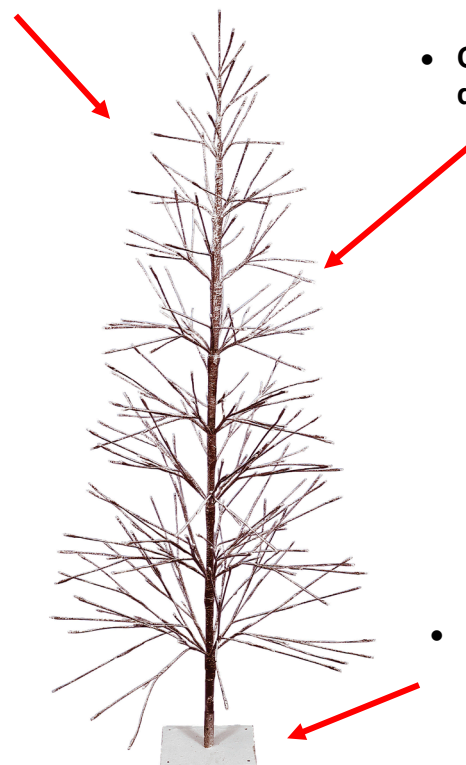

- Heavy duty base with ground stakes

#### SPECIFICATIONS

Power Requirements...Standard Household 120V-60Hz  
Cord Length ..... 16.4 FT.