


ASSEMBLY INSTRUCTION

DESCRIPTION: LADDER BACK COUNTER CHAIR (RTA)

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts List Below:

PART LIST:

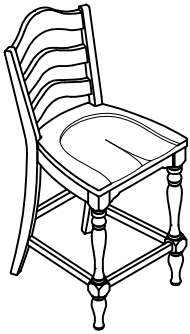

①	②	③	④	⑤	⑥	⑦
BACK FRAME: 1PC	SEAT CUSHION: 1PC	FRONT LEFT LEG: 1PC	FRONT RIGHT LEG: 1PC	CENTER STRETCHER : 1PC	LEFT SIDE STRETCHER : 1PC	RIGHT SIDE STRETCHER : 1PC

NOTE:

1. REMOVE LEGS FROM INNER BOX
2. DO NOT FULLY TIGHTEN SCREW, BOLTS UNTIL ALL PARTS COMPLETE ASSEMBLY.

⑧ HARDWARE LIST			
NO.	Drawing	Description	Q'ty
A		Bolt (Φ5/16"×3")	4pcs
B		Bolt (Φ5/16"×2-1/4")	4pcs
C		Bolt (Φ5/16"×1-3/4")	1pc
D		Flat washer (Ø5/16"×19mm)	9pcs
E		Spring washer (Ø5/16")	9pcs
F		Allen wrench (5mm)	1pc
G		Wood screw (Φ8x1-1/4")	6pcs

STEP 1

STEP 1.1

STEP 1.2

STEP 2

STEP 3

STEP 4

STEP 4.1

STEP 4.2

CLEANING INSTRUCTION

Clean the Ladder Back Counter Chair (RTA) surface with a furniture polish and a soft cloth.

Chair Assembly Tips

Having some trouble putting together your new furniture? We can help! The key to correct chair assembly is to loosely attach all of the bolts, then gradually tighten them in succession until all of them are secure. Completely tightening one or more bolts prematurely can result in the following:


ISSUE: CHAIR IS UNLEVELED

Cause:

. Chairs can be wobbly or unlevelled if one or more bolts are fully tightened before all bolts are attached and/or tightened.

Solution:

. Loosen each bolt in the seat box (front legs, back corner-blocks and back apron) until they're finger tight. Place the chair upright on the floor. Press firmly and evenly on the seat edges until the product sits level but do not lean against the chair back. Once the chair sits level on the desired surface, fully tighten each bolt.

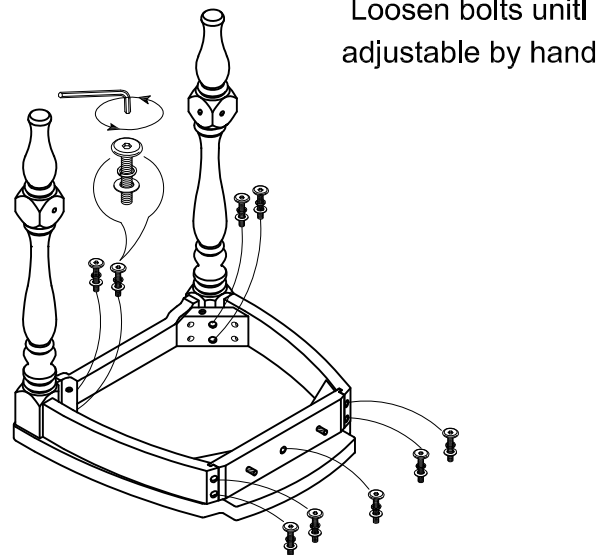

Cause:

. Chair can be wobbly or unlevelled if assembly is completed in a different room or surface than where the product is intended to primarily reside.

Solution:

. When assembling your chair, make sure to do it in the location that the chair will most often be used. Uneven flooring frequently accounts for wobbling issues.

ISSUE: HOLES ARE MISALIGNED

Cause:

. This issue can occur when some bolts are tightened fully before all other bolts are tightened or attached.

Solution:

. Loosen each bolt in the seat box (front legs, back corner-blocks and back apron) until finger tight. This will allow you to realign the holes and properly fasten the bolts to the frame.