

 

 
 

 

 
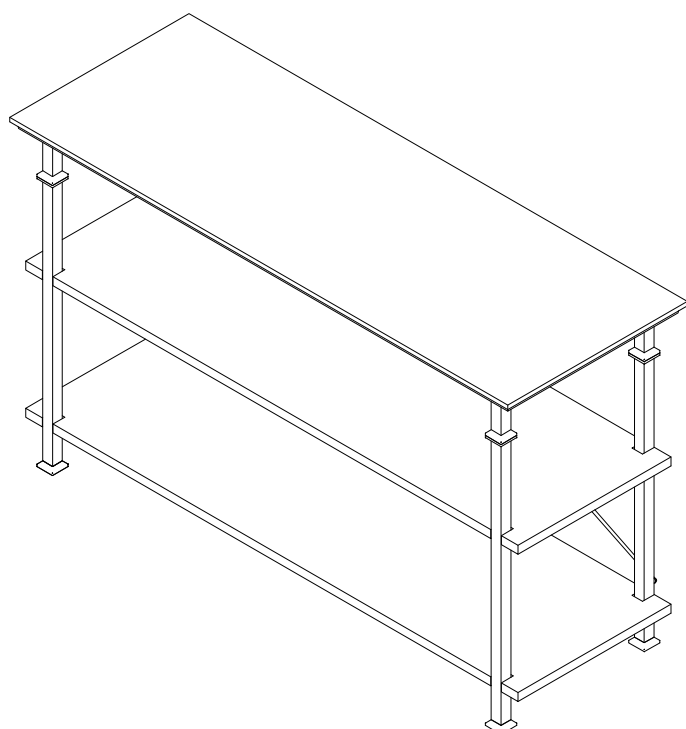


ASSEMBLY INSTRUCTION

FINISH SMALL TV STAND

A Top panel	B Lower panel	C Side frame	D Tension bar
			
1PC	2PCS	2PCS	2PCS
E Screw 1/4"X1"XØ16	F Allen wrench	G Wood screw	H Machine screw 3/16"X1/2"
			
4PCS	1PC	8PCS	5PCS
I Nut	J Spanner wrench		
			
1PC	1PC		

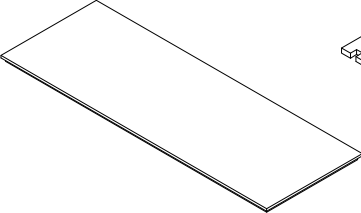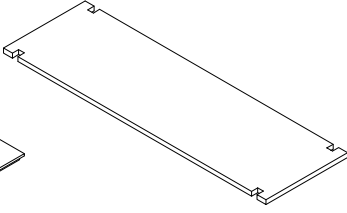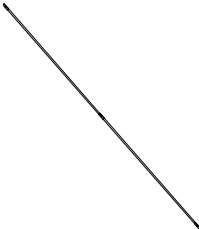


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

***Do not tighten screws & bolts until the entire unit is completely assembled.

1


Attach Tension bar (D) to Side frame (C) using Machine screw (H) and Phillips Head Screwdriver. The secure MIDDLE using Machine screw (H) and (I) Nut. While holding Nut (I) with Spanner wrench (J), but not tighten it.

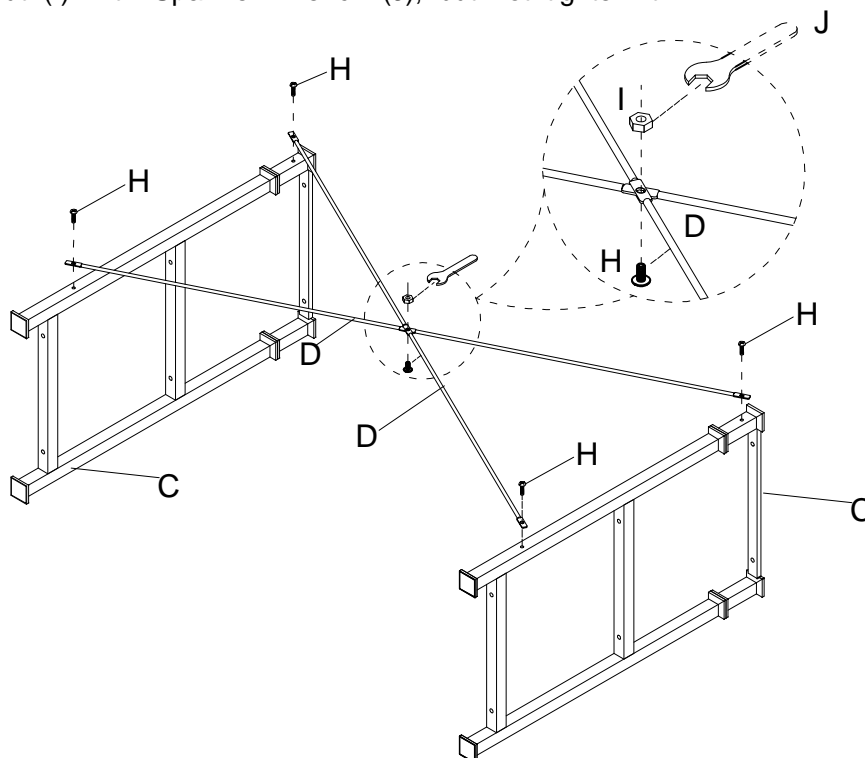

2

Attach Side frame (C) to Top panel (A) using Screw (E) and Allen wrench (F) as shown. Attach Side frame (C) to Lower panel (B) using Wood screw (G) and a Phillips Head Screwdriver as shown.

Tight all Screws and Carefully turn the assembled unit upright

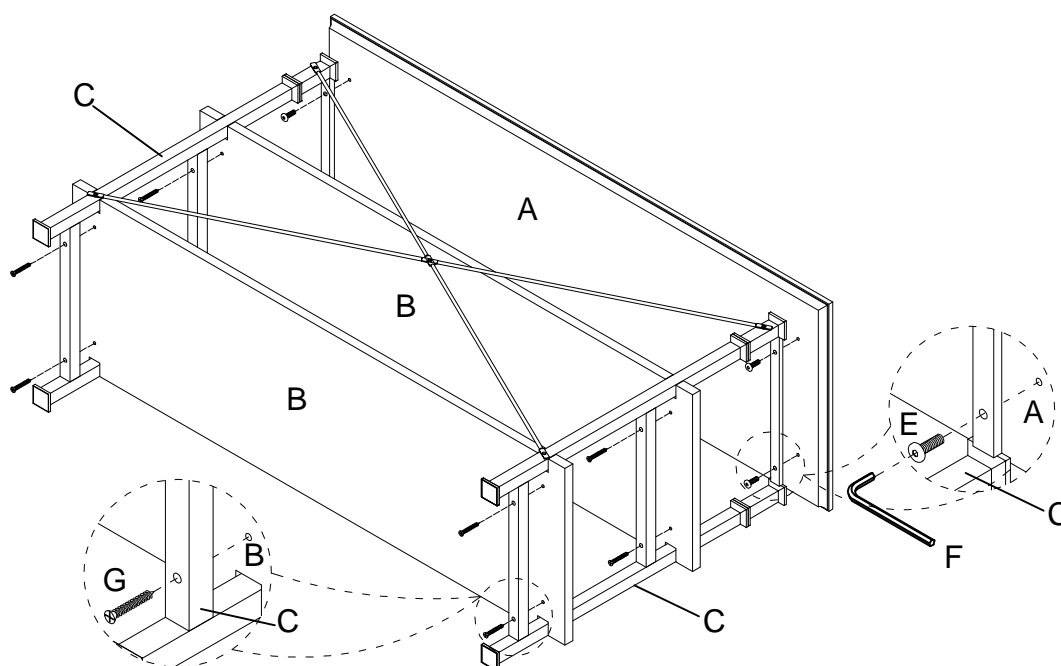

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.