
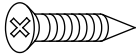

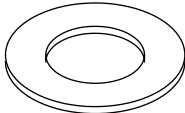
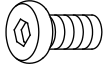
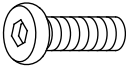
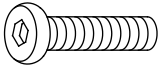
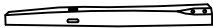
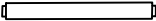

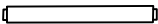

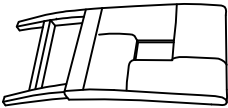
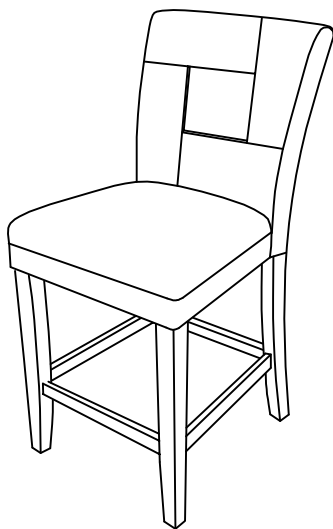 


# ASSEMBLY INSTRUCTION

## COUNTER HEIGHT KEYHOLE VINYL PARSON STOOL, BLACK LEGS

 
<b>A</b> Allen Wrench	<b>B</b> Screw 8x1-3/4"	<b>C</b> Lock Washer	<b>D</b> Flat Washer	<b>E</b> Bolt 5/16"x2"
				
1pc	6pcs	10pcs	10pcs	2pcs
<b>F</b> Bolt 5/16"x3-1/2"	<b>G</b> Bolt 5/16"x2-1/2"	<b>H</b> Front Leg	<b>I</b> Front Stretcher	<b>J</b> Left Stretcher
				
4pcs	4pcs	2pcs	1pc	1pc
<b>K</b> Right Stretcher	<b>L</b> Seat Frame	<b>M</b> Chair Back		
				
1pc	1pc	1pc		



This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1

Find out 2pcs of front legs (H) 1pc of front stretcher (I), see the drawing, attach the 2 front legs (H) and front stretcher (I). Put the seat frame (L) on a smooth flat surface. Attach the two front legs (H) with front stretcher (I) to the seat frame (L), use bolt (G), lock washer (C) flat washer (D) in the both of hole of seat frame (L) and the front leg (H), turn the allen wrench (A), in bolt (G),but not too tight.

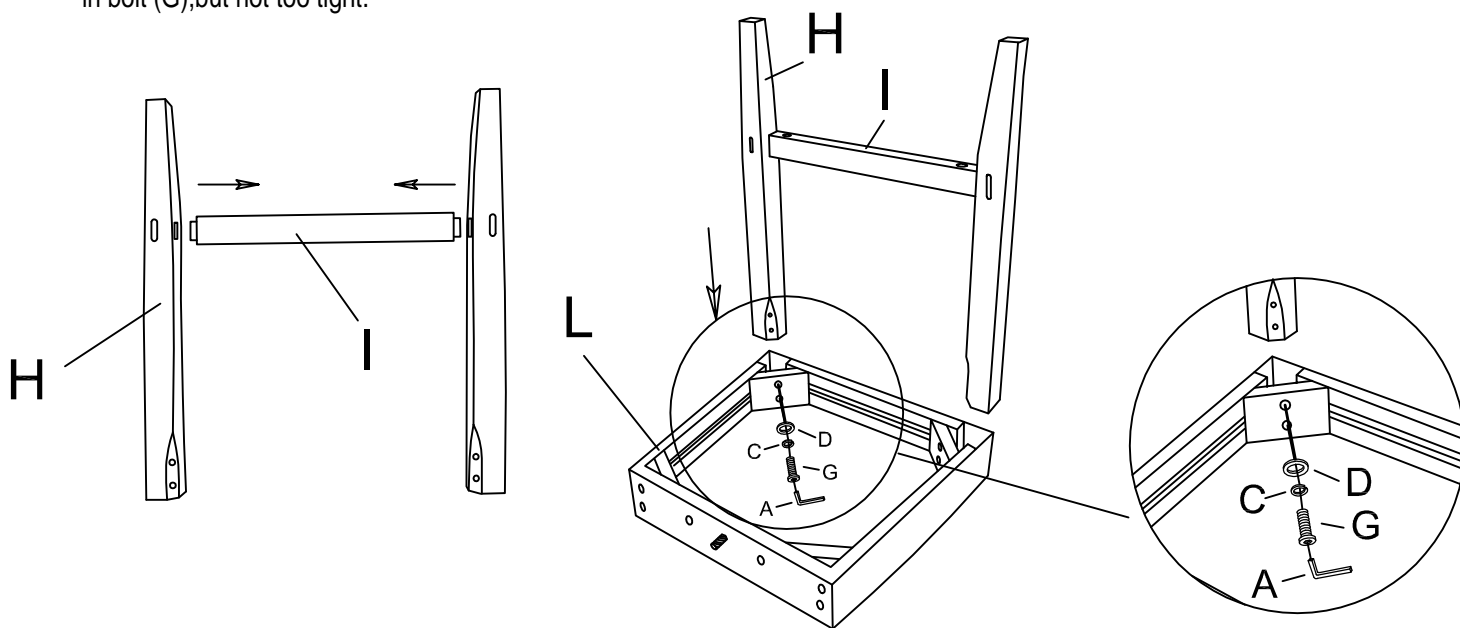


2

 Put the chair back (M) on a smooth flat surface, attach the seat frame (L) to the chair back (M), use bolt (E), lock washer (C) and flat washer (D) in both of hole of seat frame (L) and chair back (M), turn the allen wrench (A) in bolt (E). But not too tight. Use the bolt (F), lock washer (C) and flat washer (D) in the both of hole of seat frame (L) and chair back (M), turn the allen wrench (A) in bolt (F). But not too tight.

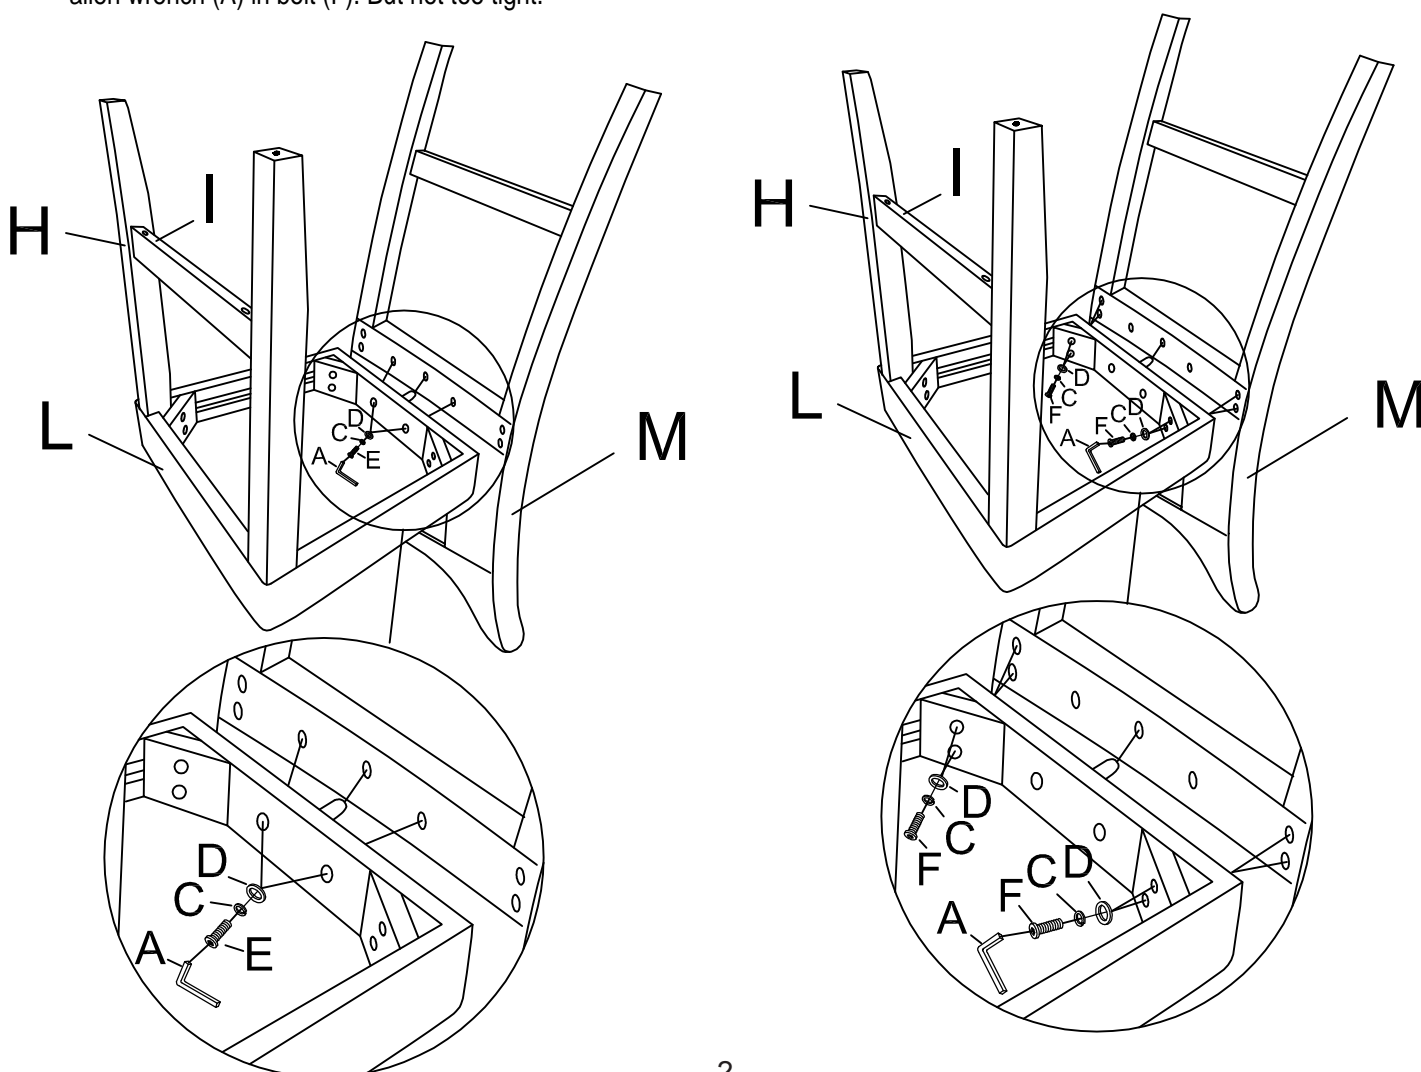

 See drawing, assemble the left stretcher (J) and the right stretcher (K) . Use screw (B) to secure all stretcher.

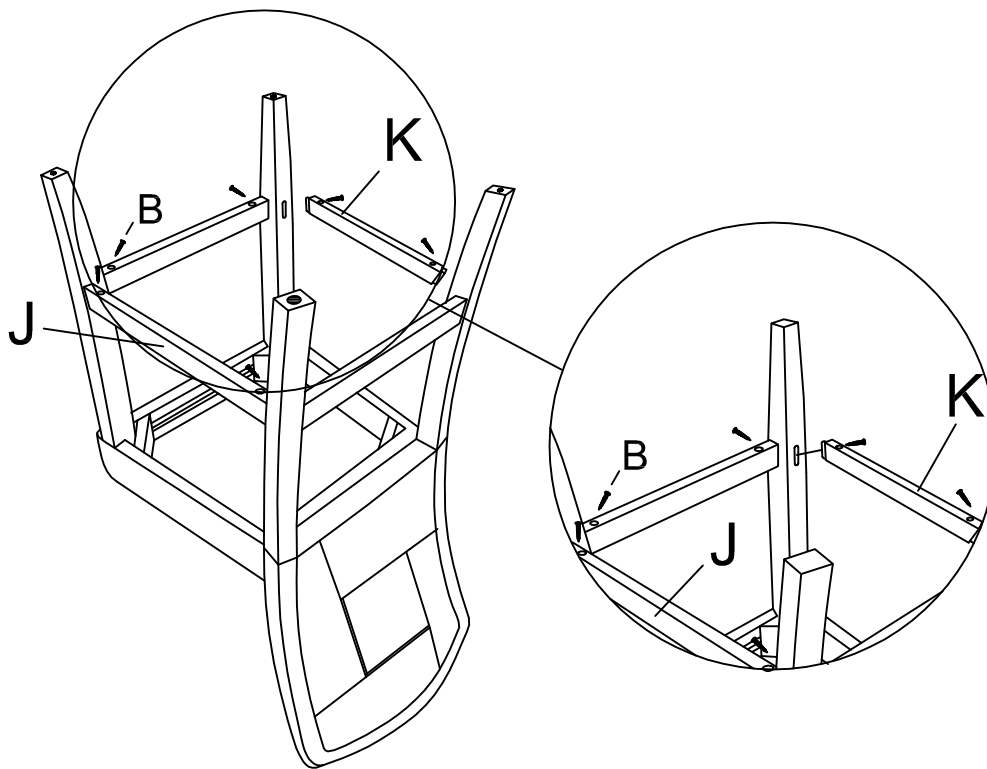

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.