

# ASSEMBLY INSTRUCTIONS

## DINING TABLE

### ASSEMBLY REQUIREMENTS

 
2-Person  
Assembly

Assembly Time  
(Approximate) 30  
Minutes

### Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

### We appreciate your business!

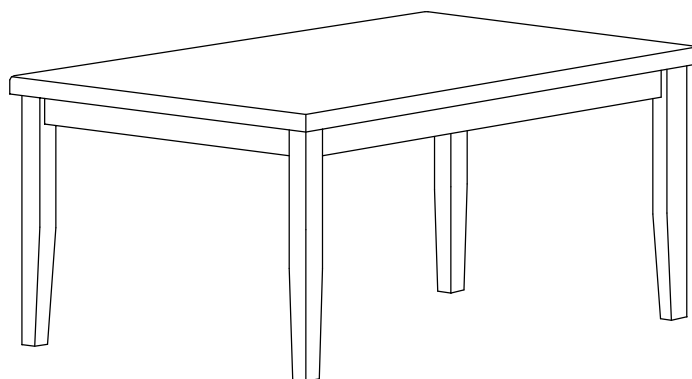

### ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Part List and Hardware List, and ensure parts and hardware are complete before you start assembling. Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

### SAFETY PRECAUTION:

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

### TIPS FOR ASSEMBLY:

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Check all of the parts and quantities are included before assembly.
4. Identify all of the parts, hardware and quantities required for each step.
5. During assembly, do not over-tighten any fittings as this may cause damage.
6. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
7. Always place the product on a flat, level surface.
8. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

### CARE AND MAINTENANCE

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.


 


# ASSEMBLY INSTRUCTIONS

## DINING TABLE

 
### PART LIST (FOR 1 TABLE)

NO.	COMPONENT	QTY.
P1	TABLE TOP WITH APRON	1 PC.
P2	TABLE LEG	4 PCS.

### HARDWARE LIST (FOR 1 TABLE)


NO.	DESCRIPTION	QTY.
H1	HEX BOLT 5 / 16" x 2-1/2" 	8 PCS.
H2	SPRING WASHER 5 / 16" 	8 PCS.
H3	FLAT WASHER 5 / 16" 	8 PCS.
H4	WRENCH 	1 PC.

## STEP 1

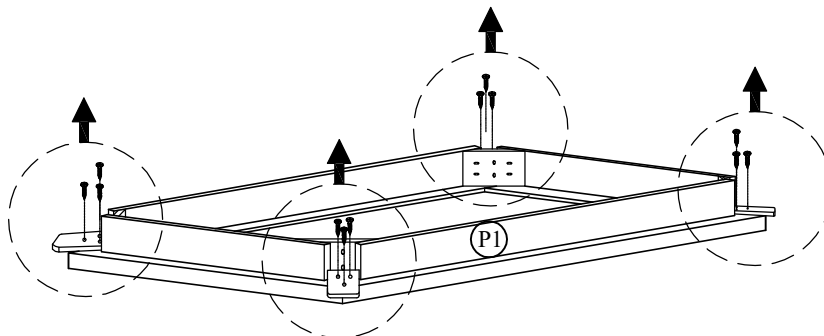

- With the assistance of another person, place the Table Top (P1) bottom-side up on an elevated surface that does not scratch or damage the exterior gloss and finish.
- Remove the protruding wood blocks at each corner of the table by unscrewing the wood screws. Discard the wood blocks. These protruding wood blocks are used for shipping purpose only.

## STEP 2

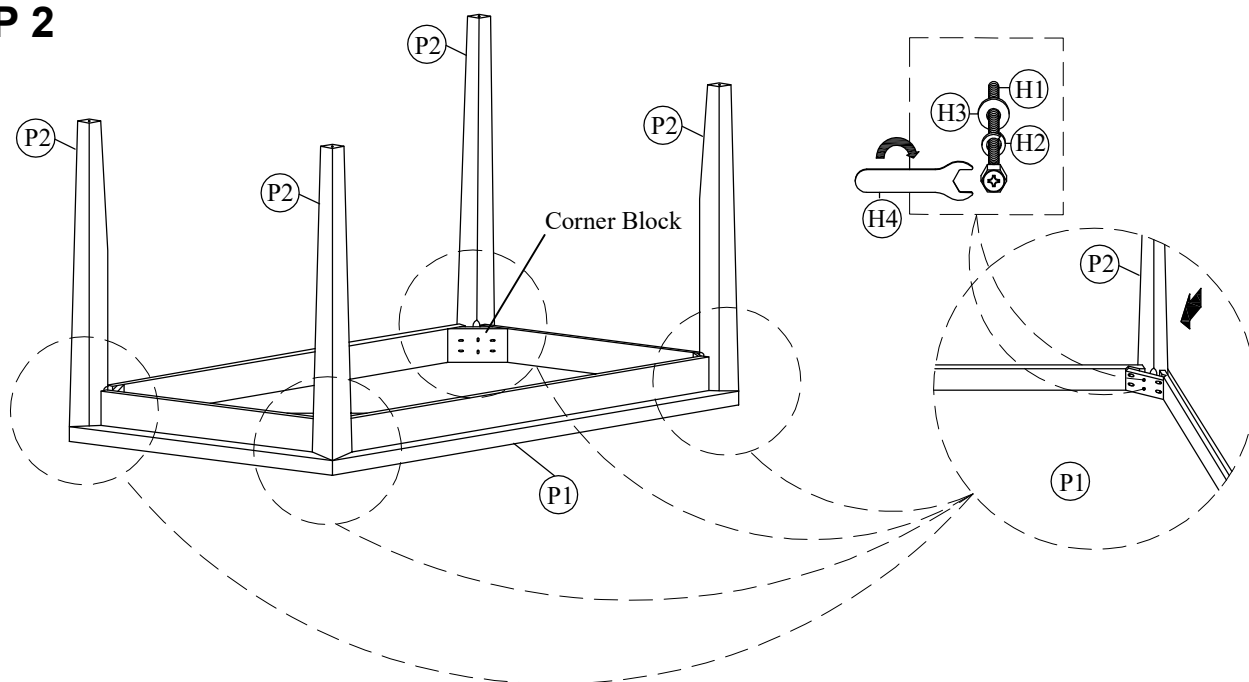 

- Position Table Leg (P2) against the corner of the table apron and align the screw holes on (P2) to the screw holes on the corner block.
- Insert Hex Bolt (H1) fitted with Spring Washer (H2) and Flat Washer (H3) into each hole. Use Wrench (H4) to drive (H1) to fasten Table Leg (P2) to corner block. Do not tighten (H1) completely until both bolts are in place - do not over-tighten.
- Repeat the above assembly procedures for the other three legs.