BOOKCASE ASSEMBLY INSTRUCTION



ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!


- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.






ASSEMBLY TIME PER UNIT: 40 MINUTES

PARTS IDENTIFICATION:

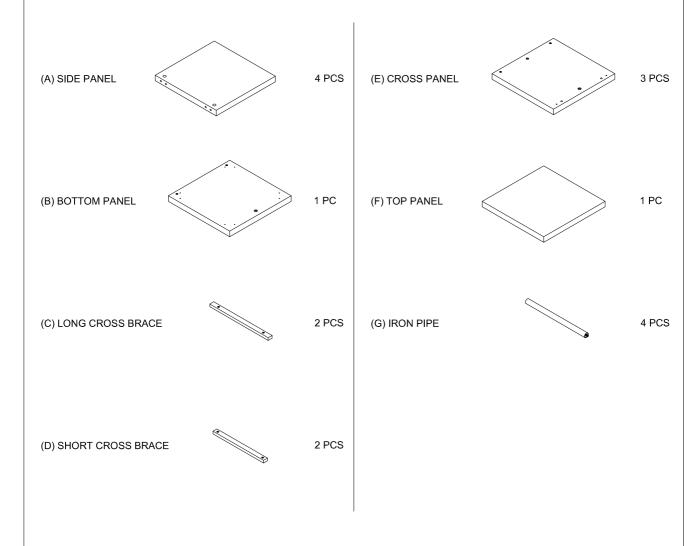


Z	HARDWARE PACKAGE										
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY				
1	GLUE 15g		1 PC	6	SCREW Ø4.3x35mm	ACTULUTURE (F)	8 PCS				
2	WOODEN DOWEL		16 PCS	7	BOLT M6x62mm		4 PCS				
3	CAM BOLT Ø7x35.5mm		8 PCS	8	ALLEN WRENCH		1 PC				
4	CAM LOCK Ø15x12mm		8 PCS	9	STICKER Ø20mm		2 PCS				
5	BOLT Ø9.5x55mm	and an	8 PCS								


Z	HARDWARE PACKAGE										
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY				
10	ANTI-TIP STRAP 170x15mm		2 PCS	12	WALL SCREW	ATTITUTU &	2 PCS				
11	WALL PLUG 6x30mm	S. Land	2 PCS	13	SCREW Ø4x16mm	ATTUTU M	2 PCS				

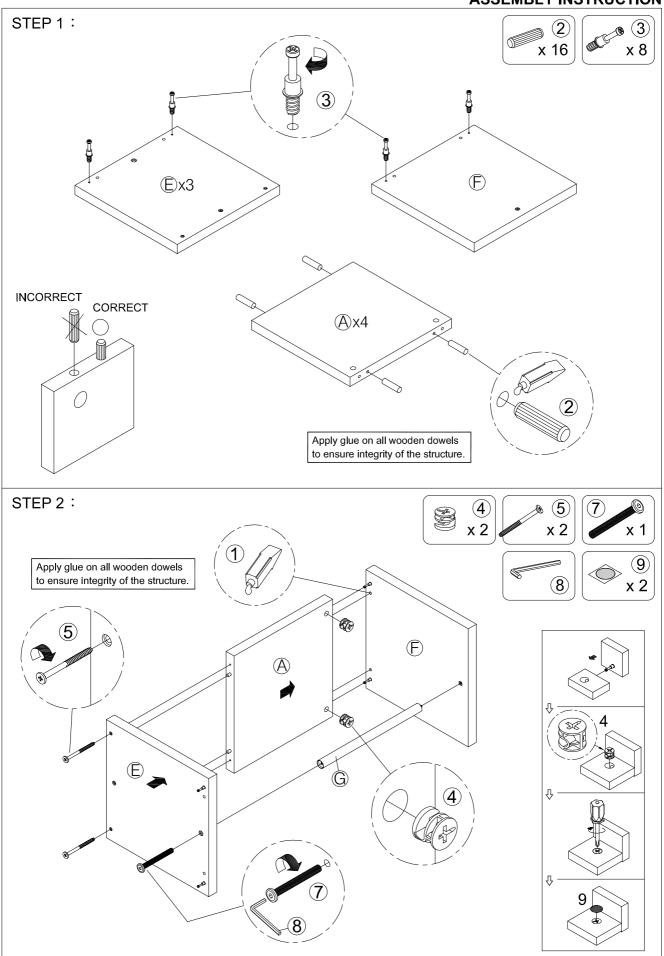



page 4 of 7

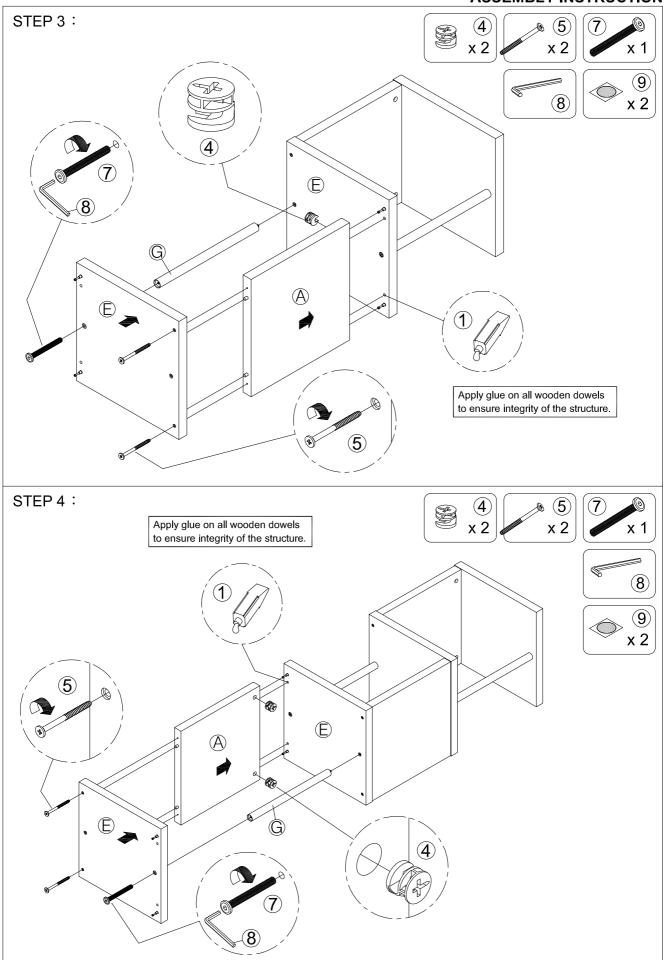

page 5 of 7

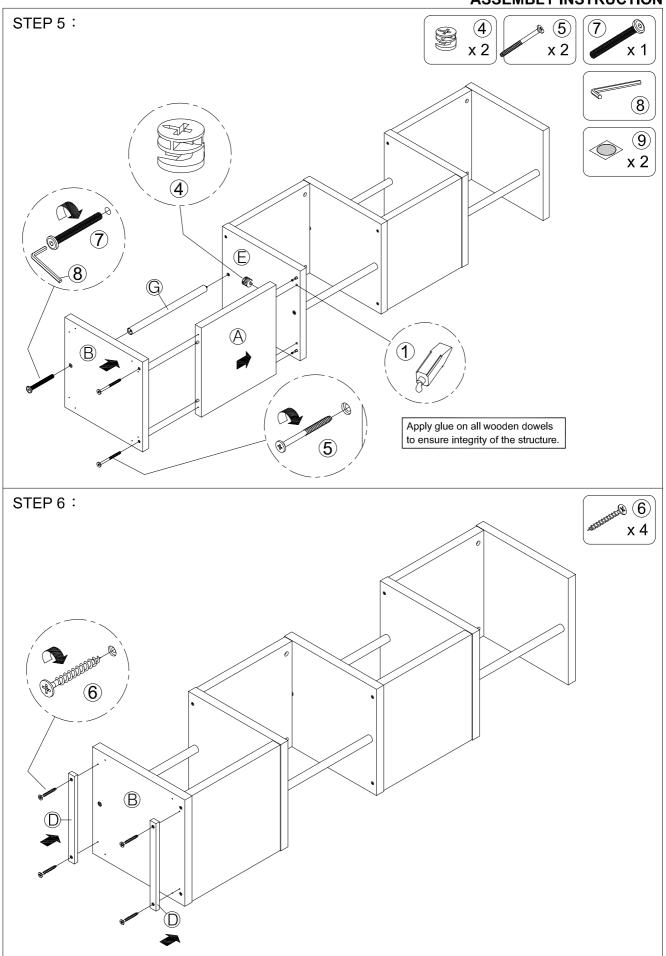


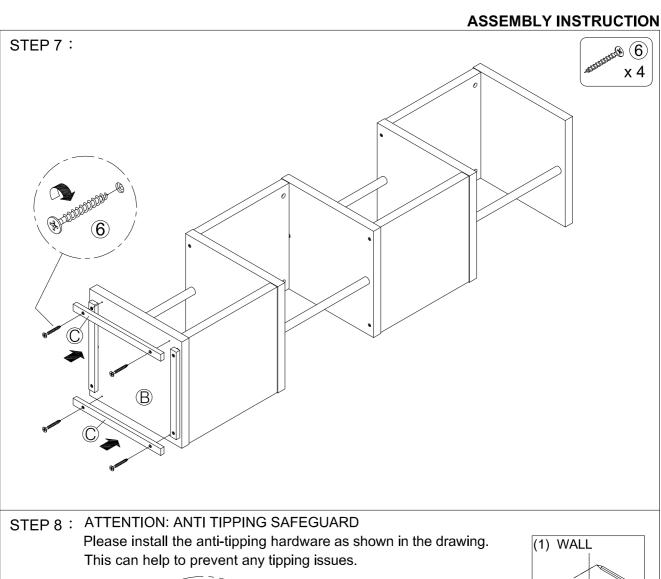


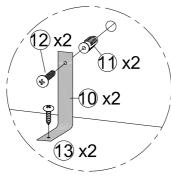





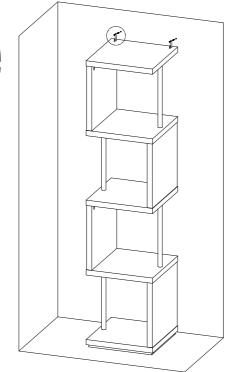

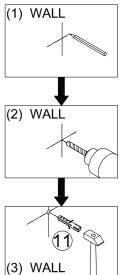

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture

This restraint is not a substitute for proper adult supervision.

This restraint may provide ptotection against tipping furniture.

Do not allow children to climb on furniture.

Failure to detach this restraint before moving furniture may result in injury and damage