 


TV STAND

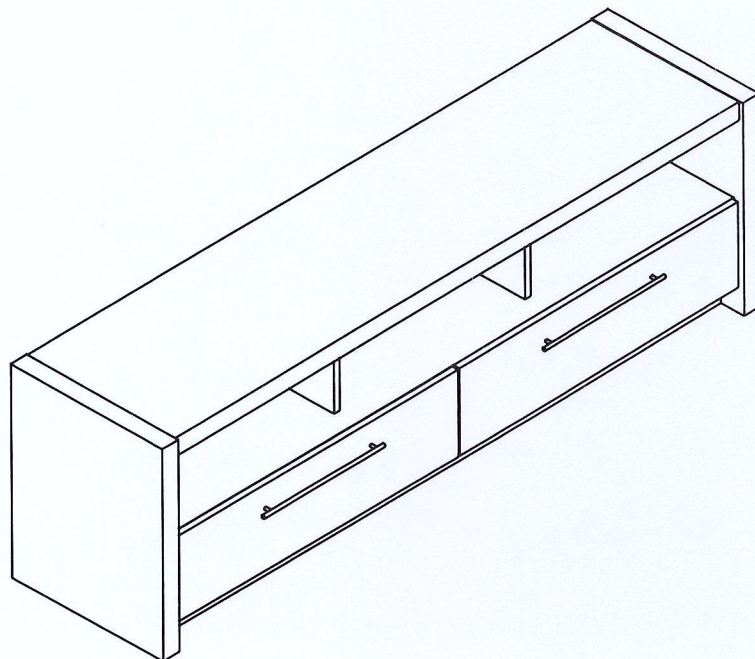

 
Assembly instructions

We have designed our furniture with you, the customer in mind. Our clear space easy to follow. step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give you years of enjoyment.



Please do not return to the store
Broken or missing Hardware?
Need help with Assembly?

 


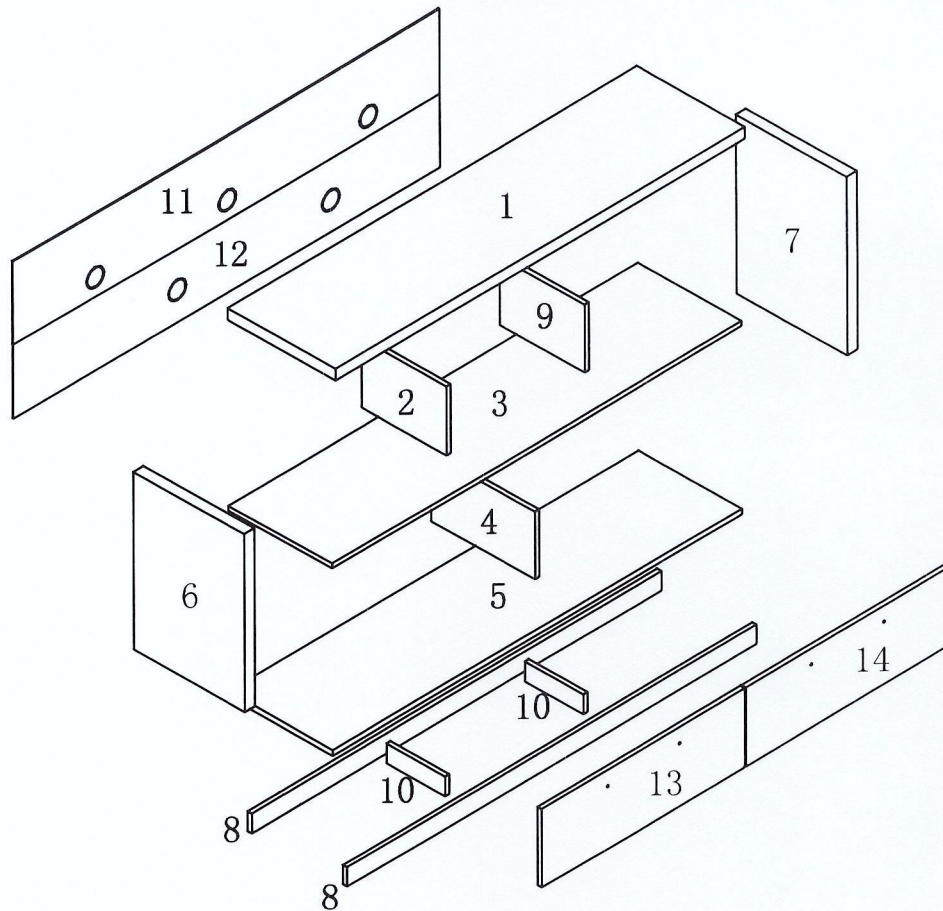












PARTS IDENTIFICATION








Please count and verify all parts before assembly

(1) Top Panel	1pc	(8) Front Support	2pcs
(2) Left Upper Divider Panel	1pc	(9) Right Upper Divider Panel	1pc
(3) Shelf	1pc	(10) Medium Support	2pcs
(4) Lower Divider Panel	1pc	(11) Upper Back Panel	1pc
(5) Bottom Panel	1pc	(12) Lower Back Panel	1pc
(6) Left Side Panel	1pc	(13) Left Door	1pc
(7) Right Side Panel	1pc	(14) Right Door	1pc

HARDWARE IDENTIFICATION

A		Cambolt	L29	36pcs
B		Camlock	Ø15	36pcs
C		Dowel	Ø8×25	22pcs
D		Large Screw	Ø4×35	6pcs
E		Stretch Pin	8"	2pcs
F		Smaller Screw	Ø3×14	18pcs
G		Door Magnets		2pcs
H		Small Screw	Ø3×16	4pcs
I		Handle	#256	2pcs
J		Handle Screw	M4x22	4pcs
K		Hinge	51x31	4pcs
L		Medium Screw	Ø4x16(BK)	20pcs
M		Sticker	Ø20	6pcs
O		Nail		30pcs
P		Foot Pin		8pcs
Q		Glue	Glue: For securing please apply to wood dowel first before inserting into panel.	1pc

     Assembling the unit with camlocks and wood dowels.

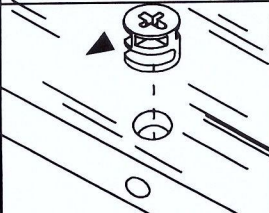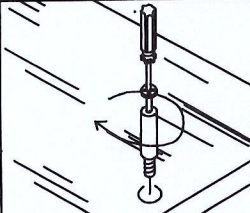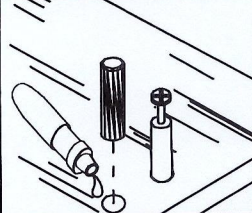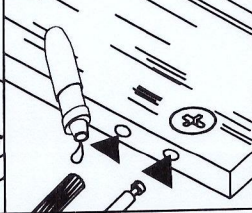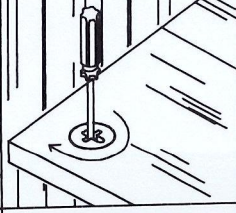
				
Insert camlock, camlock must face bolt hole	Gently screw cam dowel into the threaded anchor	lightly glue one end of wood dowel and tap into hole.	lightly glue dowel and connect to second panel by inserting dowels into holes	Gently screw the cam clockwise into locked position. Do not overtighten.

Step1

PAGE: 4 of 7


Note: * Place item on a smooth/soft surface, such as a towel or carpet to avoid scratch.

 1. Attach door magnets (G) to unit with small screws (H) as shown.
2. Attach hinges (K) to unit with medium screws (L).
3. Attach handles to drawer fronts as shown. Gently tighten screws.

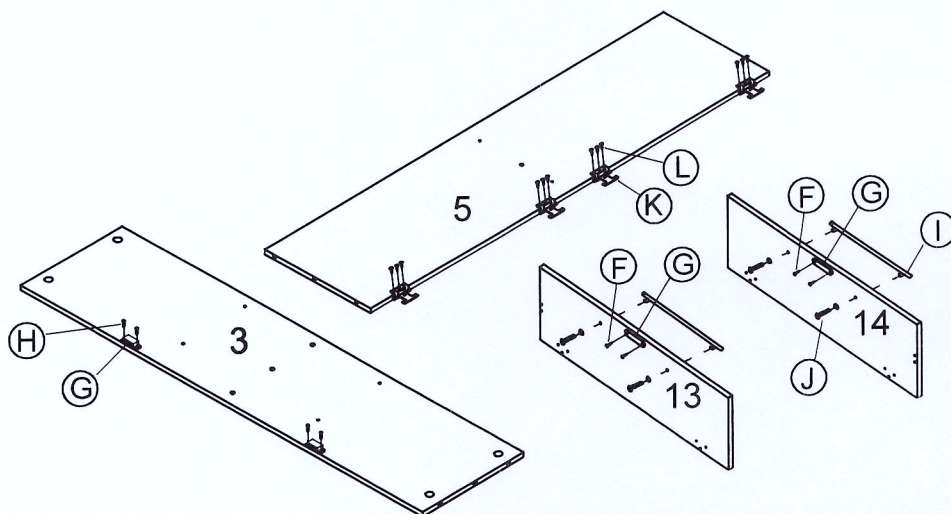

Step2

 1. Attach dowels (C) and cambolts (A) into top panel (1).
2. Assemble pieces as shown.
3. Gently tighten camlocks (B) and screws (D).
4. Place stickers over holes.

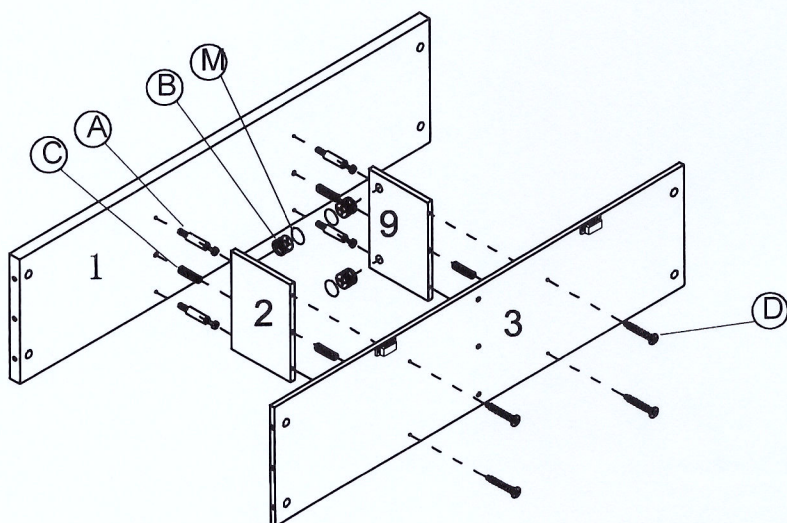


Step3

PAGE: 5 of 7

1. Attach dowels (C) into divider panel (4), attach cambolts (A) into shelf and bottom panel (3,5).

 
2. Assemble pieces as shown. Gently tighten camlocks (B) and screws (D).

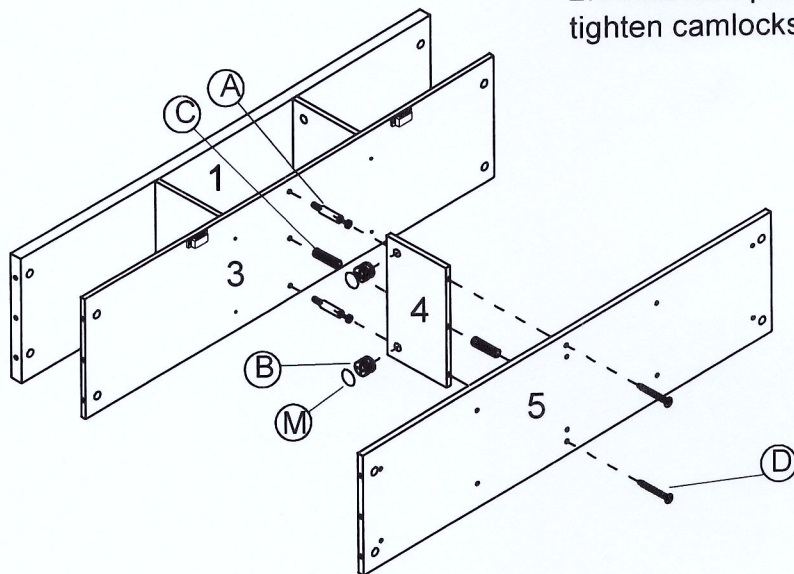

Step4

1. Attach cambolts (A) into supports (8, 10).

 
2. Connect supports (8) to medium supports (10) as shown. Gently tighten camlocks.

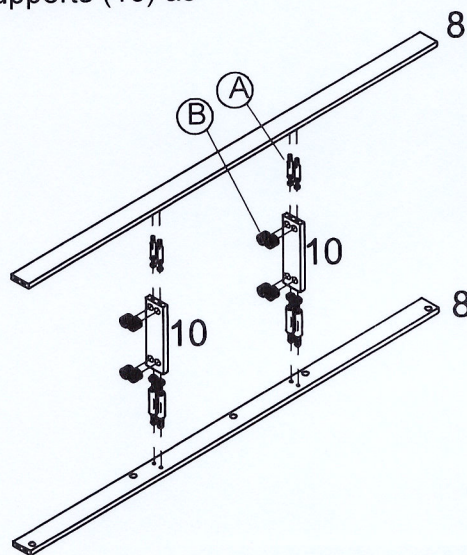

Step5


PAGE: 6 of 7

 1. Attach dowels (C) and cambolts (A) into bottom panel (5).
2. Attach supports (8,10) assembly to main unit and gently tighten camlocks.

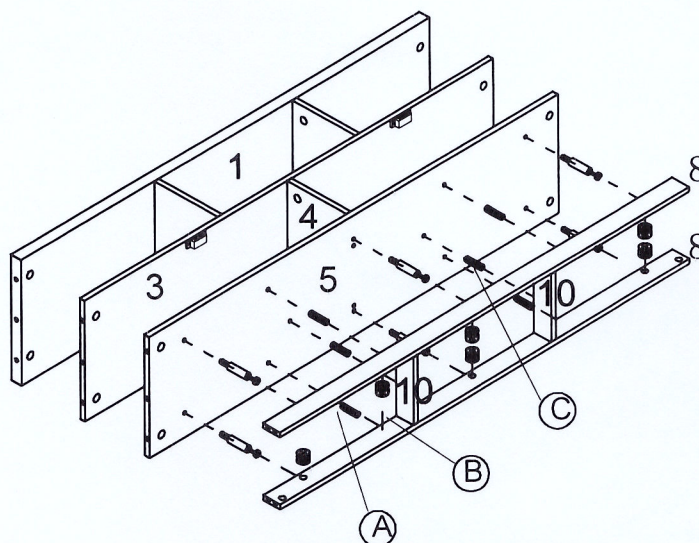

Step6

 
1. Attach dowels (C) and cambolts (A) into left and right side panel (6,7).
2. Attach side panels to assembly. Gently tighten camlocks.

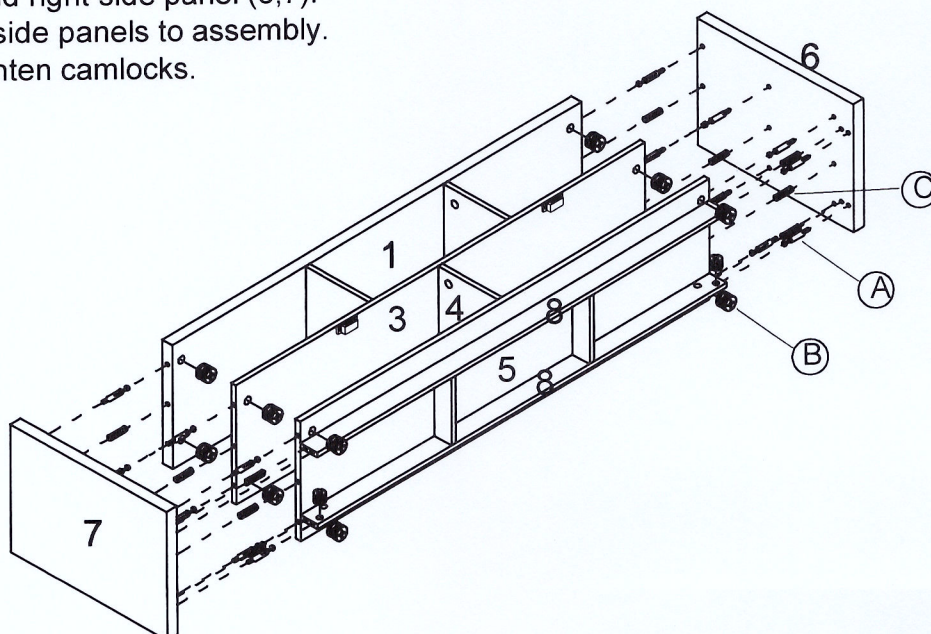

Step7

PAGE: 7 of 7

 1. Attach back panels (11,12) to TV stand using nail (O).
2. Carefully tap foot pins (P) into base of unit.

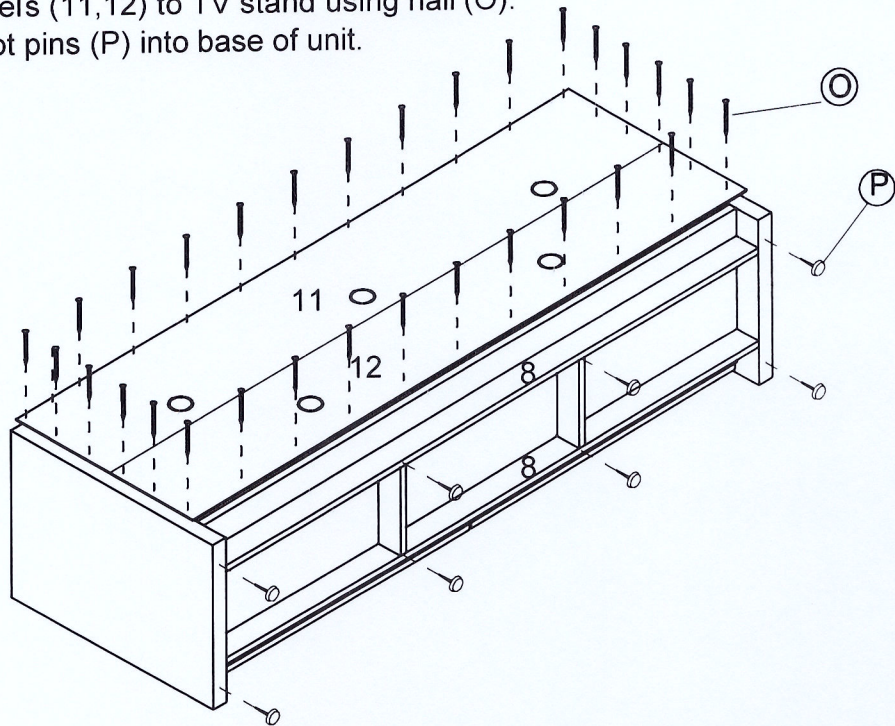

Step8

1. Attach hinges (K) to unit with medium screws (L).
2. Attach stretch pins (E) to unit using screws (F).

