

STEP 5

Attach Panel (B) to Panel (D) with Screw (1).

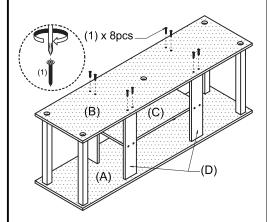

STEP 6


- 6.1 Tighten Pole (3) with Square Leg (5), as shown.
- 6.2 Fix Square Leg (5) at center of Panel (B) with Top Cap (6), as shown.

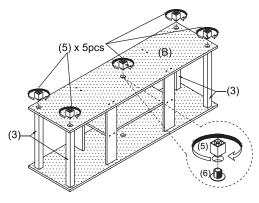


STEP 7

Upright the unit.

Unfold the Bins (7) and slide into the storage. Cover the screw position with Screw Cap (9).

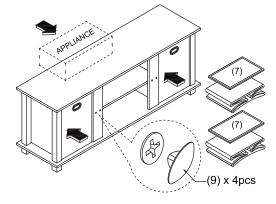

RECOMMENDED MAXIMUM WEIGHT

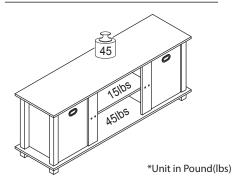

NOTE:

- >This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.
- >DO NOT allow children to climb on unit.
- >Put heavier items on lower shelves.
- >Recommended to install the appliances from the back of unit.

Assembly Instruction

Entertainment Center w/Storage Bins


DIMENSION: 41.7"(W) x 15.8"(H) x 11.7"(D)






Recomm. 1 Person



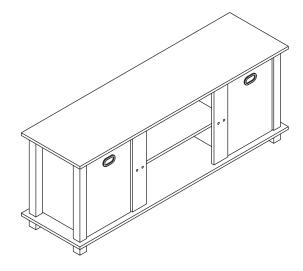

No	Hardware List	Qty
1	Screw M4x32mm	16pcs
2	Dowel	8pcs
3	Square Long Pole —	4pcs
4	Insert Cap	4pcs
5	Square Leg	5pcs
6	Top Cap	1рс
7	Non-Wooven Bin	2pcs
8	White Glue	1рс
9	Screw Cap Cover	4pcs
10	L-Bracket	4pcs
11	Screw M3.5x10mm	8pcs

No	Parts List	Qty
Α	Top Panel	1pc
В	Bottom Panel	1pc
С	Shelf Panel	1pc
D	Leg Panel	4pcs

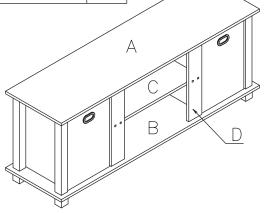


USEFUL HINTS BEFORE YOU START:

- 1. Read each step carefully before starting.
- 2. It is important that each step is performed in correct order to avoid difficulties.
- 3. Identify, sort and count the parts before assembly.
- 4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
- 5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
- 6. Using uncompatible hardware might cause damage to product.


STEP 1

Insert Dowel (2) to Panel (D) with Glue (8). Tighten Bracket (10) to Panel (D) with Screw (11).

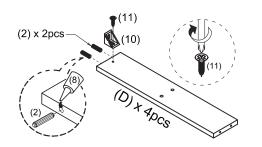


STEP 2

Install Insert Cap (4) to Panel (A) with hammer.

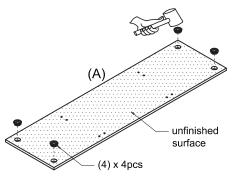

STEP 3

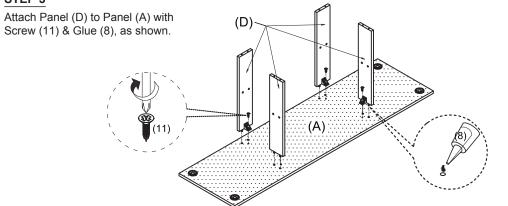

STEP 4

4.1 Attach Panel (C) to Panel (D) with Screw (1).

