



 

 


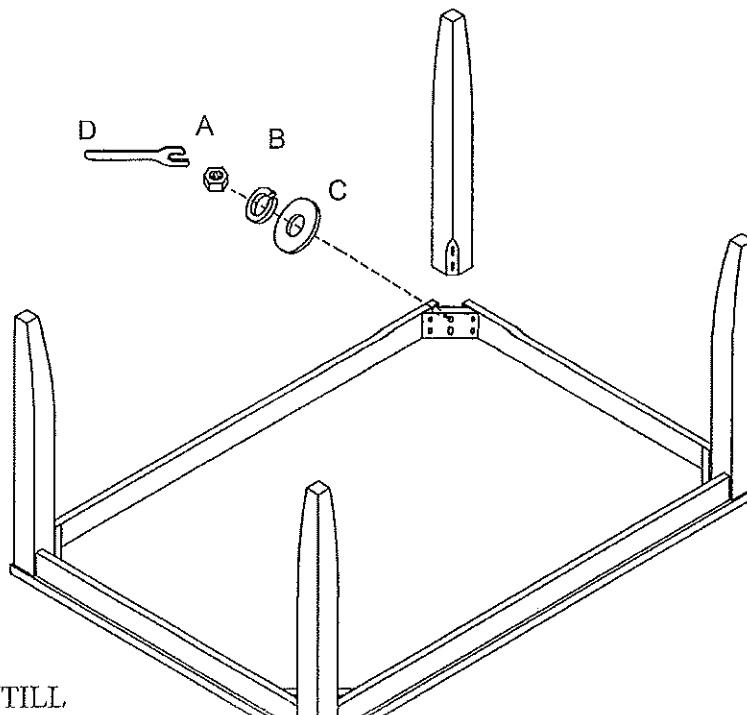


 

ASSEMBLY INSTRUCTION


A	HEX NUT 5/16" X 12 MM	8 pcs
B	LOCK WASHER 5/16"x1/2"	8 pcs
C	FLAT WASHER 5/16"X3/4"	8 pcs
D	HEX WRENCH 12MM X 90 MM	1 pc

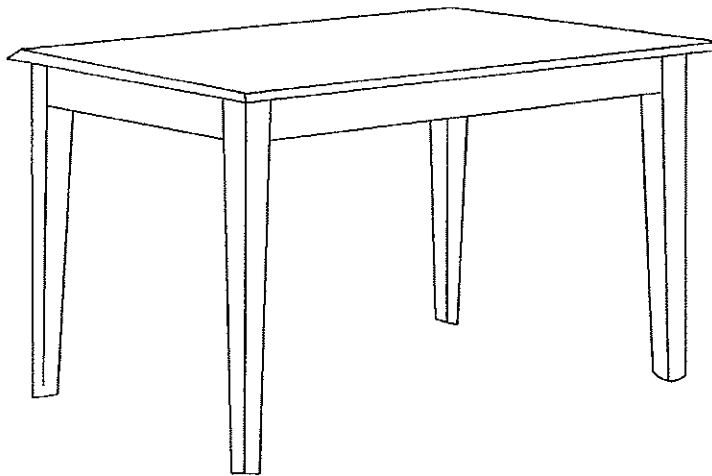

NOTE: DO NOT TIGHTEN UNTILL


ASSEMBLY INSTRUCTION

A CHAIR BACK  1PC	B SEAT CUSHION  1PC	C FRONT LEG  2PCS	D LOCK WASHER 5/16"  9PCS
E FLAT WASHER 5/16"  9PCS	F BOLT 5/16"X3-1/2"  4PCS	G BOLT 5/16"X2-1/2"  4PCS	H BOLT 5/16"X2"  1PC
I ALLEN KEY 5MM  1PC	J WOOD PLUG Ø10*35MM  2PCS		

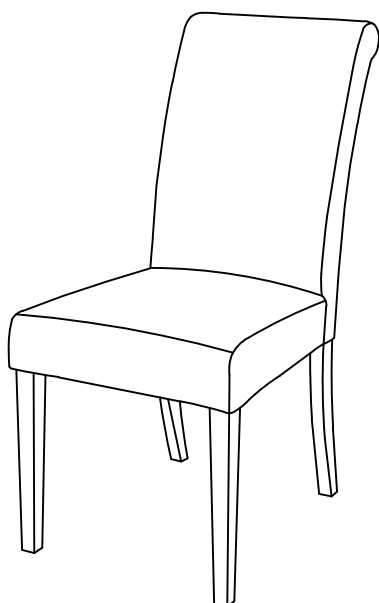


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

-
- 1** Attach the Front legs(C) to Seat(B) with Lock washer(D) and Flat washer(E) and Bolt(G) by Allen key(I).

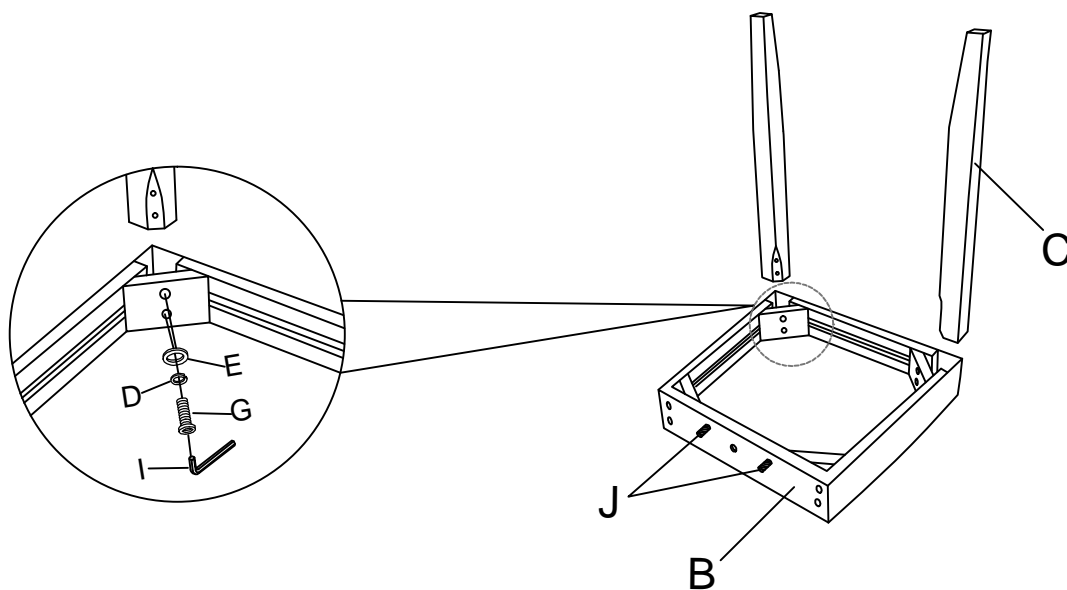

-
- 2** Attach the Chair back(A) to Seat(B) with Wood plug(J), then lock them using Lock washer(D) , Flat washer(E), Bolt(F) and Bolt(H) by Allen key(I).

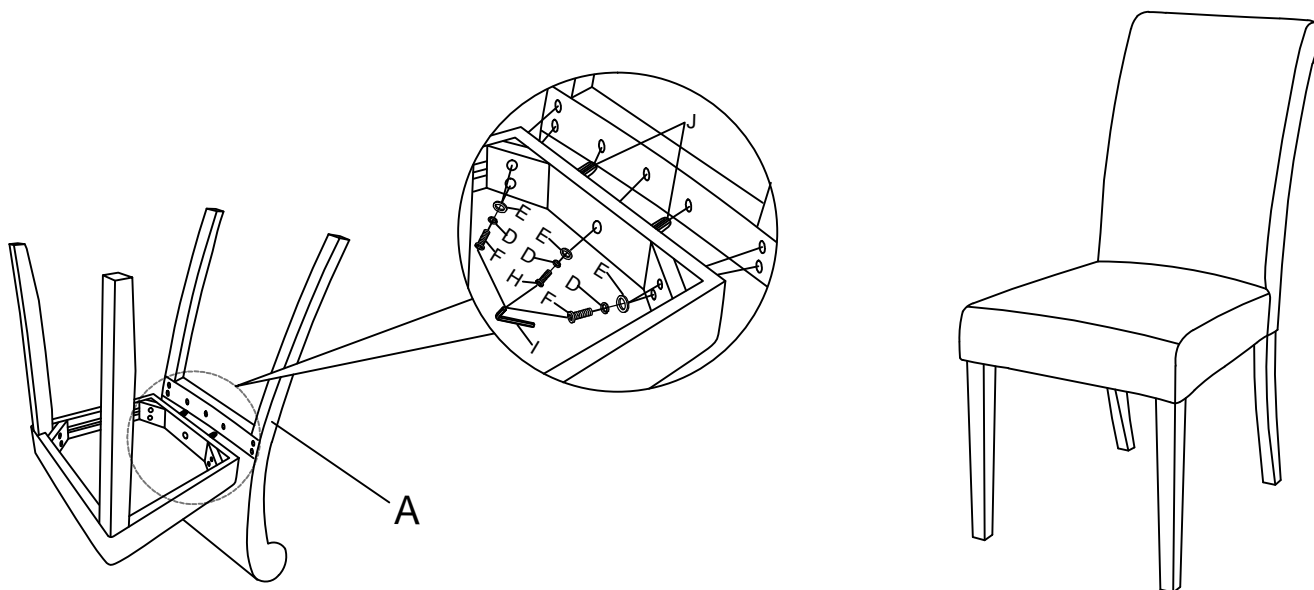

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.