

#### STEP 4

Attach Panel (B) to Panel (C) and tighten it using Screw (1).

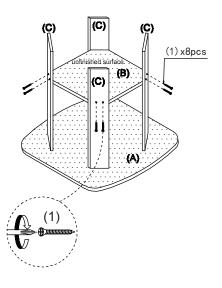


### STEP 5

Install Nail Leg (3) to the bottom of Panel (C) using hammer, as shown.

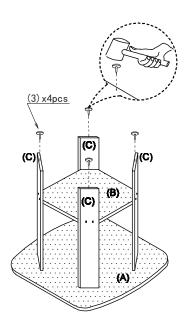

## Recommended Maximum Weight

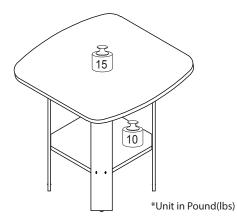

### **WARNING:**

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

>Put heavier items on lower shelves.


# **Assembly Instruction**

Simple Design End/SideTable







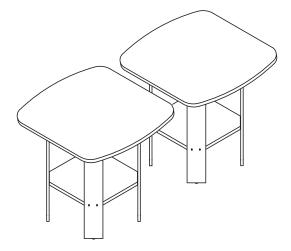


## **Customer Support**

**NEED HELP?** For replacement requests or product inquiries, please contact our Customer Service Team by emailing us. Thank you for selecting!

No	Hardware I	Qty	
1	Chipboard Screw		16pcs
2	Dowel	0	16pcs
3	Nail Leg	Q	8pcs
4	Cam-Lock Nut		8pcs
5	Cam-Lock Screw		8pcs

No	Parts List		Qty
Α	Top Panel	$\bigcirc$	2pcs
В	Shelf Panel	$\bigcirc$	2pcs
С	Leg Panel	$\cdot$	8pcs

<sup>\*</sup>All the hardware quantity are for two sets.

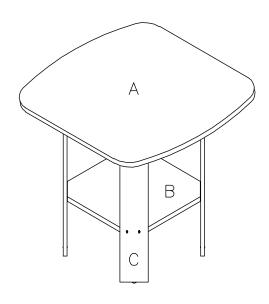


#### **USEFUL HINTS BEFORE YOU START:**

- 1. Read each step carefully before starting.
- 2. It is important that each step is performed in correct order to avoid difficulties.
- 3. Identify, sort and count the parts before assembly.
- 4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
- 5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
- 6. Using uncompatible hardware might cause damage to product.


## STEP 1

Insert Dowel (2) and Cam-Lock Nut (4) to Panel (C).
NOTE: Arrow on Cam-Lock Nut (4) should be pointing towards hole.

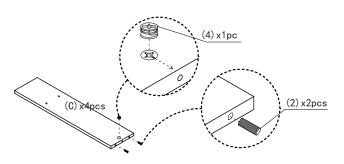

### STEP 2

Insert Cam-Lock Screw (5) into pre-drilled holes on Panel (A).

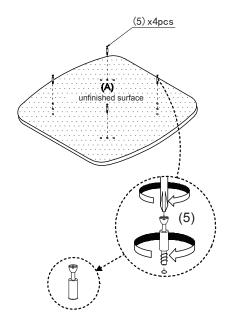

## STEP 3

Attach Panel (C) to Panel (A) and tighten Cam-Lock Nut (4) using screwdriver.

