

2-Cube Organizer

INSTALLATION INSTRUCTIONS

BEFORE BEGINNING

- Please read all instructions carefully.
- · Familiarize yourself with all parts (see "PARTS") and check quantities.
- Follow all safety precautions (see "SAFETY PRECAUTIONS").

- CHOKING HAZARD FOR SMALL CHILDREN. This unit contains small parts which could be a choking hazard for small children. Children should be under adult supervision at all times or serious injury could occur.
- ALWAYS UNLOAD UNIT PRIOR TO MOVING THE UNIT. The weight of personal belongings can cause the unit to become unstable and either tip or collapse. Serious bodily injury and/or damage to personal belongings may occur.
- DO NOT OVERLOAD UNIT. If any shelf, top, or bottom of unit bows or bends, it is overloaded. The shelf, top, or bottom could collapse and cause serious bodily injury and/ or damage to personal belongings.
- DO NOT CLIMB OR STEP ON THE UNIT. The unit may become unstable and either tip or collapse. Serious bodily injury and/or damage to personal belongings may occur.
- DO NOT USE THIS UNIT AS A TELEVISION STAND. Serious bodily injury and/or damage to personal belongings may occur.

- DO NOT MOUNT OR ATTACH ANYTHING TO THE SIDES, REAR, OR FRONT OF THE UNIT. This can create a force which can cause the unit to tip. Serious bodily injury and/or damage to personal belongings may occur.
- DO NOT STACK UNITS. Stacking of units can cause an unsafe tip-over hazard which may cause serious bodily injury and/or damage to personal belongings.
- DO NOT HANG THIS UNIT ON THE WALL. The product structure is not designed for wall hanging. Serious bodily injury, damage to personal belongings, and/or damage to the wall may occur.
- FOLLOW PROPER SAFETY PROCEDURES WHEN USING POWER TOOLS AND LADDERS.
- **PROTECT YOUR WORK SURFACE DURING ASSEMBLY.** This can prevent scratching or damage to table tops, wood floors, etc.



FOLLOW INSTRUCTIONS CAREFULLY

Please do not return product to the retail store. For product assistance and warranty information please call us.

Manufacturer Warranty

Manufacturer will replace any missing or damaged part due to manufacturer defect for one year after purchase. Please have proof of purchase for warranty claims.

- Do not let any sharp objects touch or rub the surface of the product.
- When assembling, do not let children play around the working area.
- Please confirm all parts are correct before starting the assembly process.
- DO NOT OVERTIGHTEN. DO NOT USE POWER TOOLS. Power tools can overtighten screws and strip threads.
- Only use hex wrench provided.

We recommend you hand-tighten screws. Please note location of predrilled holes.

PARTS

Call **us** for parts and service. For faster service, have the style number ready when calling.

TOOLS REQUIRED




HARDWARE PROVIDED

	Name	Size (Qty)	Part Number
AA	Allen Wrench	4 mm. (1)	65649
BB	Hex Screw	M6 x 15 mm. (8)	65629
сс	Long Screw	M7 x 48 mm. (4)	65624
DD	X Brace Screw	M4 x 9 mm. (4)	62284
EE	X Brace Cap Nut	M4 x .7 mm. (4)	62285
FF	Stamped Wrench	M4 (1)	73498
GG	L-Bracket	51 mm. (1)	62280
нн	L-Bracket Screw	M4 x 15 mm. (1)	62281
"	Wall Mount Screw	M4 x 35 mm. (1)	62283

PARTS

Call **us** for parts and service. For faster service, have the style number ready when calling.

PRODUCT

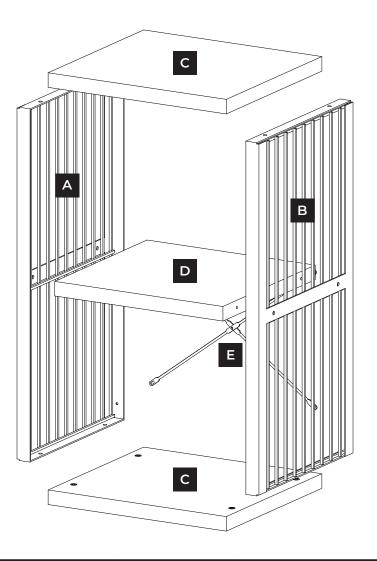


	Name	Qty	Part Number
А	Left Metal Side Panel	1	62391
В	Right Metal Side Panel	1	62301
с	Top/Bottom Wood Panel	2	61150 61151 61152
D	Wood Shelf	1	61177 61178 61179
Е	X Brace	1	62303

STEP

Align both metal side panels (A & B) with the bottom wood panel (C) as shown. The top/bottom wood panels (C) will only have holes on one side. Make sure the horizontal bars on each metal side panel are below the screw holes and facing toward the inside of the assembly (fig. 1). The two X brace holes on the side of each panel should be facing toward the back of the assembly.


Use the supplied allen wrench (AA) to secure both metal side panels (A & B) to the bottom wood panel (C) using two hex screws (BB) per side.

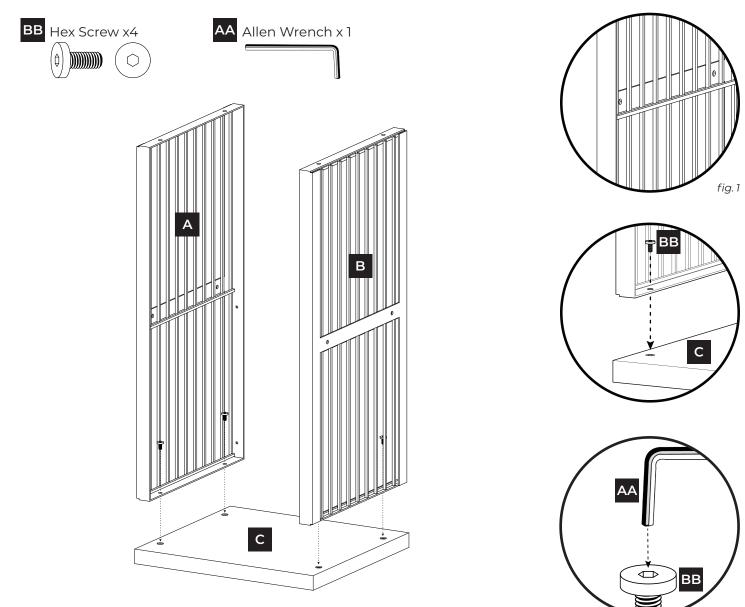


```
STEP 2
```

Place the wood shelf (D) on the lower horizontal bars of the metal side panels (A & B).

Use the supplied allen wrench (AA) to secure both metal side panels (A & B) to the wood shelf (D) using two long screws (CC) per side.

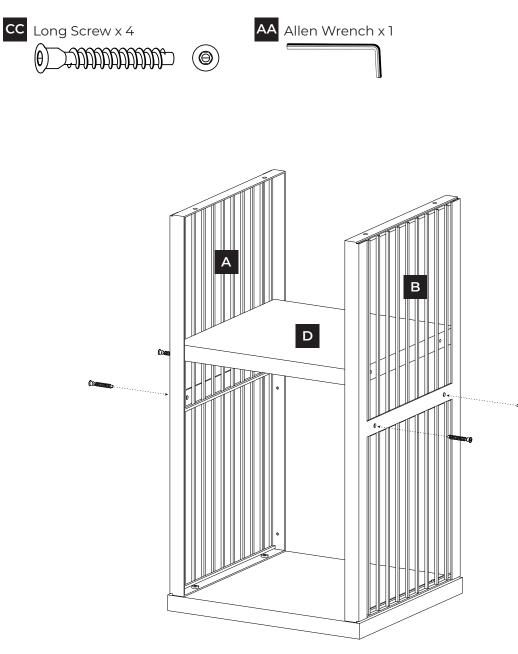


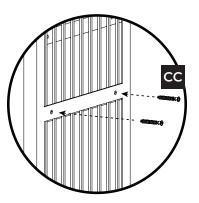


ST	EΡ	3
----	----	---

Align both metal side panels (A & B) with the top wood panel (C) as shown.

Use the supplied allen wrench (AA) to secure both metal side panels (A & B) to the top wood panel (C) using two hex screws (BB) per side.

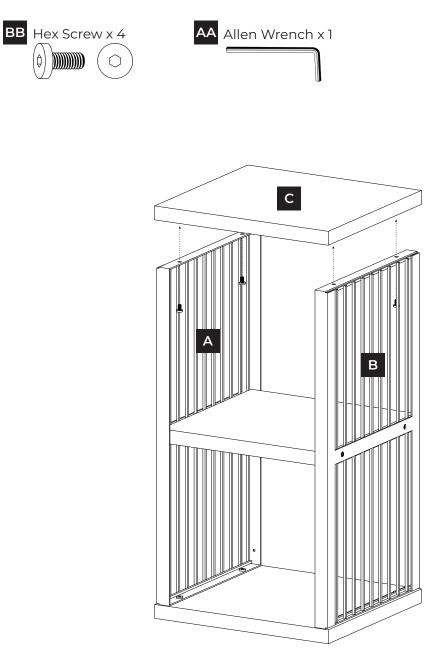

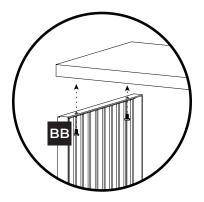


Align the X brace (E) with the predrilled holes on the left metal side panel (A).

Secure the X brace to the left metal side panel (A) by using the stamped wrench (FF) to attach two X brace cap nuts (EE) to two X brace screws (DD).

Align the X brace (E) with the predrilled holes on the right metal side panel (B).

Secure the X brace to the right metal side panel (B) by using the stamped wrench (FF) to attach two X brace cap nuts (EE) to two X brace screws (DD).

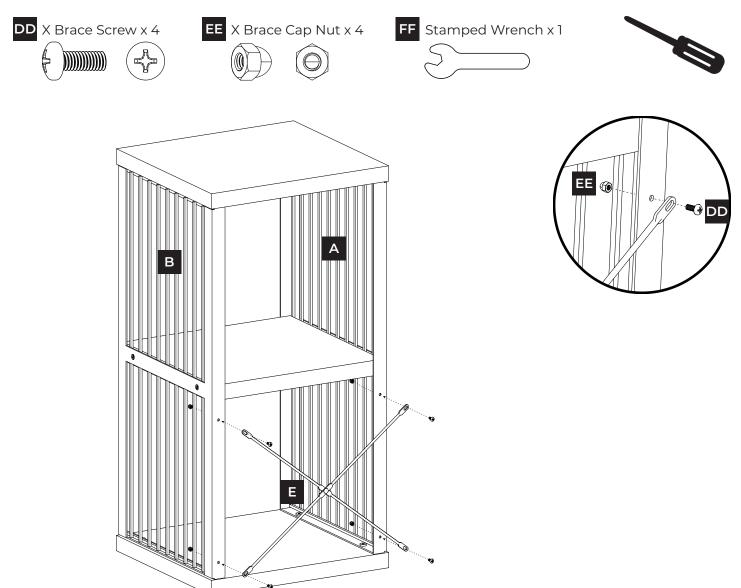

STEP 5

Align top of unit with wall stud. Position L-bracket (GG) on wall stud and bottom of the top wood panel (C). The longer side of the bracket will connect to the top wood panel and the shorter side will connect to the stud.

Secure the bracket (GG) to the top wood panel (C) using one L-bracket screw (HH). The screw should be mounted 1/2 in. from the back edge of the top wood panel to ensure stability.

Secure the bracket to the stud using one wall mount screw (II).

