
 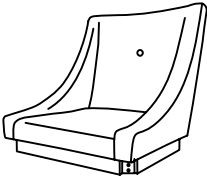



 
 

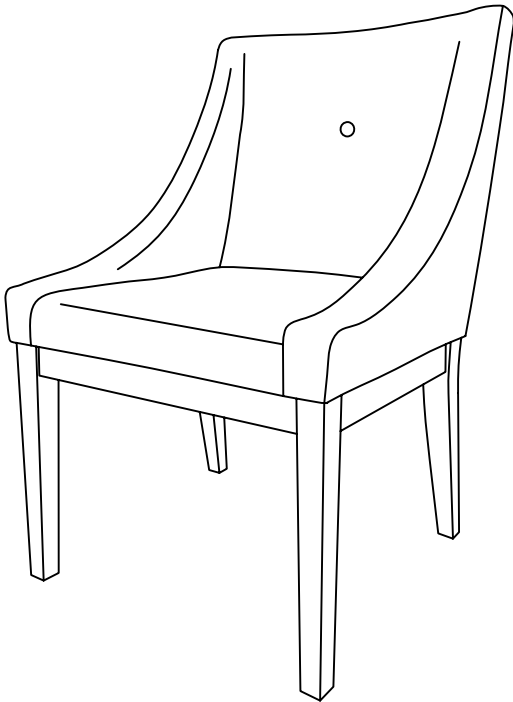


ASSEMBLY INSTRUCTION

CURVED ARM DINING CHAIR

A Cushion	B Front Legs	C Left Back Legs	D Right Back Legs	E Lock Washer 5/16"
				
1pc	2pcs	1pc	1pc	8pcs
F Flat Washer 5/16"	G Bolts 5/16"*2-1/4"	H Allen Wrench 5/16"		
				
8pcs	8pcs	1pc		




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1

Put the seat (A) on a smooth flat surface, attached one front leg (B) to the seat (A) use bolt (G), lock washer (E) and flat washer (F) on both of hole of seat. Turn the allen wrench (H) in bolt (G). But not too tight.

Attached left back leg (C) and right back leg (D) to the seat (A) use bolt (G), lock washer (E) and flat washer (F) on both of hole of seat. Turn the allen wrench (H) in bolt (G). But not too tight.

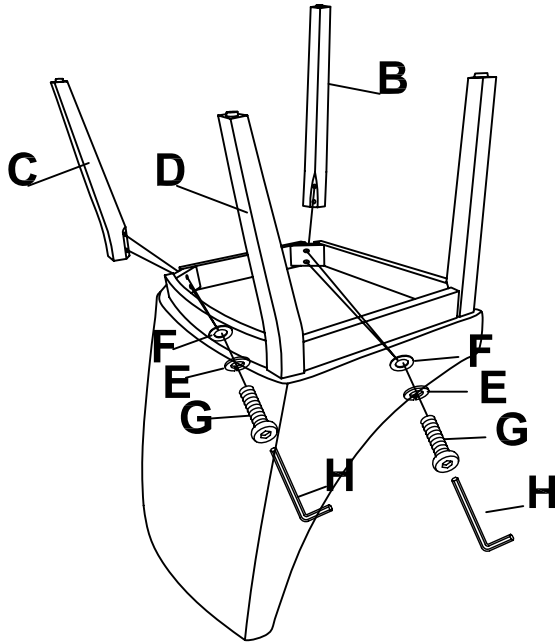

Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

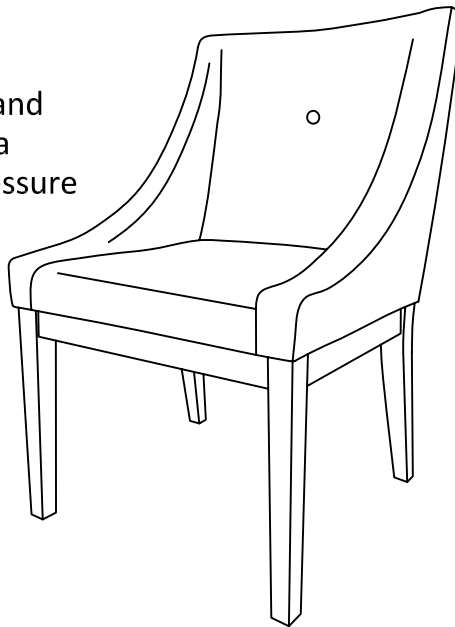

Helpful Tip:

-Instead of applying downward pressure while reaching under to tighten bolts, have someone sit in the chair while you tighten the bolts.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.