 


Installation

7500 Series 7501 Series 7502 Series

7545 Series



5

Д Ж

CENTERSET LAVATORY FAUCETS WITH GOOSENECK SPOUT

Thank you for selecting American-Standard... the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothlyplease read these instructions carefully before you begin.


CAUTION

Turn off water at

- Assemble GASKET (1) to SHANKS (2) and insert FAUCET SHANKS through holes of SINK.
- Assemble LOCKNUTS (3) from underside of SINK. Align BODY as far forward as possible and secure position by tightening LOCKNUTS (3).
- Connect the HOT water supply to the left SHANK and the COLD water supply to the right SHANK using sealant, appropriate connectors, and COUPLING NUTS (4).


To change spout to a swivel spout: (7500, & 7502)

- Unscrew SPOUT NUT (5) and remove SPOUT (6).
- Take SPOUT CLIP (7) off SPOUT (6) and remove RUBBER RING (8).
- Replace RUBBER RING (8) with seperate PLASTIC RING (9) packed with faucet.
- Put SPOUT CLIP (7) on SPOUT.
- Reassemble SPOUT (6) to BODY.

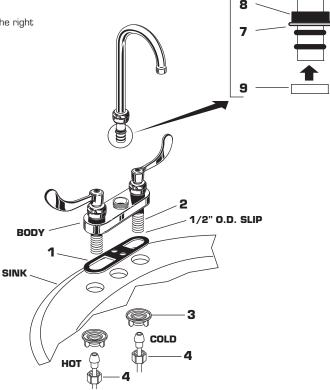

GRID DRAIN ASSEMBLY (Model 7502 only)

- Apply a bead of PUTTY around underside of DRAIN PLUG FLANGE (1). Insert DRAIN PLUG (2) into SINK drain hole.
- Hold DRAIN PLUG (2) to prevent turning and assemble GASKET (3), WASHER (4) and LOCKNUT (5) from underneath sink.
- Insert threaded end of TAILPIECE (6) into lower end of DRAIN PLUG (2). Connect other end to trap.

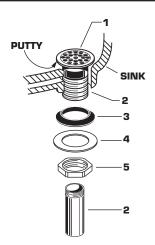

TEST INSTALLED FAUCET


- Remove AERATOR.
- With handle in OFF position, turn on water supplies and check all connections for leaks.
- Operate both handles to flush water lines thoroughly. Check spout mounting and hose connections for leaks.
- Operate LIFT ROD and check DRAIN for leaks.
- Turn handles into OFF position and replace AERATOR.


SERVICE


- To change direction of handle rotation, proceed as follows:

 - Turn valve to OFF position.
 Remove HANDLE and BONNET NUT.
 Remove SPRING CLIP.
 Lift STOP WASHER, turn 90° and replace.
 - Replace SPRING CLIP.
 - Replace BONNET NUT, HANDLE, SCREW, and INDEX.
- AERATOR may accumulate dirt causing distorted and reduced water flow. Remove AERATOR and rinse clean.
- If spout drips, operate handles several times from OFF to ON position. Do not force handles turn only 90°.
- Plastic SCREEN in CARTRIDGE may accumulate dirt causing reduced water flow. To clean, first turn off hot and cold water supplies, then:

 - Remove HANDLE and BONNET NUT.
 Remove CARTRIDGE by pulling up.
 Thoroughly rinse plastic SCREEN at base of CARTRIDGE.
 - Replace CARTRIDGE until flange is tight against valve body.
 - Turn valves OFF.
 - Replace BONNET NUT, HANDLE, SCREWand INDEX.

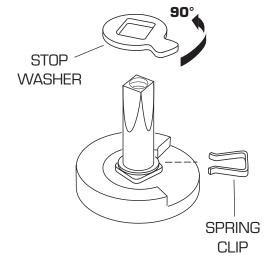

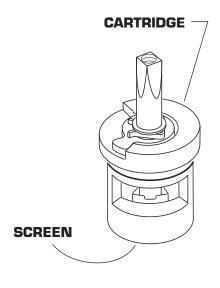

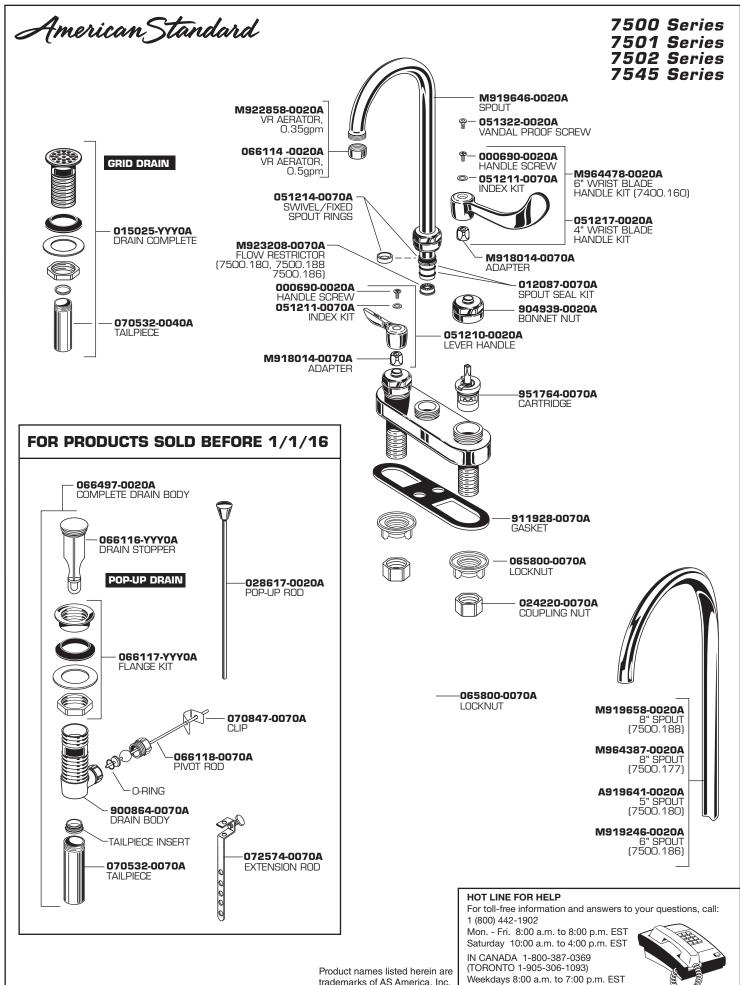

trademarks of AS America, Inc. © AS America, Inc. 2015

IN MEXICO 01-800-839-1200

60185 Rev. 1.7 (11/15)