



FOR REPLACEMENT PARTS OR HELP WITH ASSEMBLY PLEASE CONTACT US

PLEASE ENSURE TO HAVE THE MODEL # FROM THE PACKAGING OR INSTRUCTION BOOKLET

TO RETURN THE PRODUCT: PLEASE CONTACT THE RETAILER WHERE THE ITEM WAS PURCHASED FROM



Upload an image of our furniture in your home with a short review to our facebook page for a chance to

Win up to \$3000 !!!



IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.


CARE and MAINTENANCE


To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish. Do not leave liquids or damp cloths on this furniture.


To avoid dulling of the finish, do not place furniture in direct sunlight.

Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

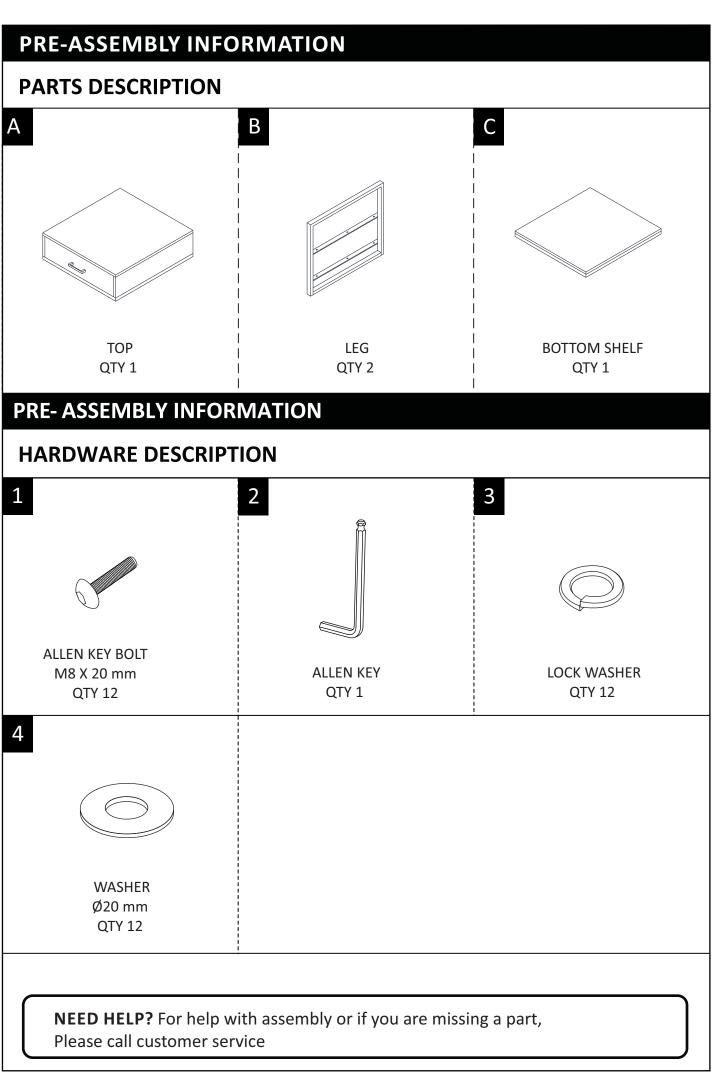

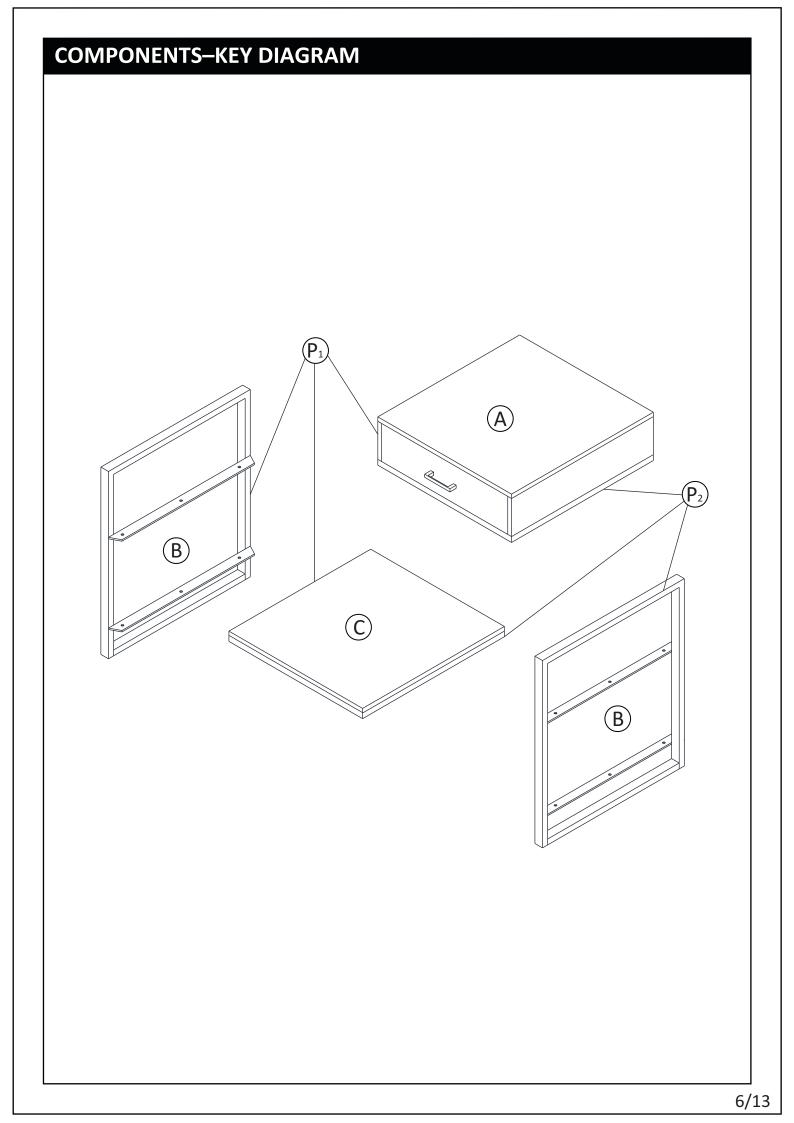


STEP 1

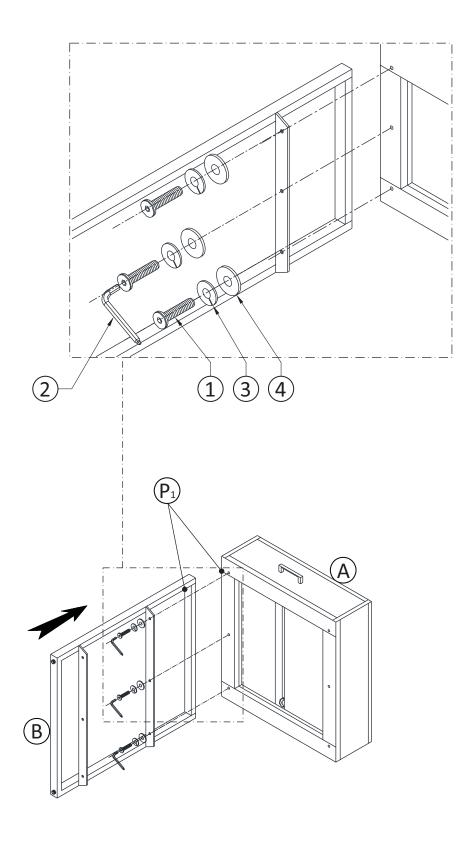


- 1. Align one Leg B to Top A by matching the letters P1 to P1.
- 2. Use three Allen Key Bolts (1), three Lock Washers (3) and three Washers (4) to attach Top (A) and Leg (B).
- 3. Use Allen Key 2 to tighten bolts. Do not over-tighten.

STEP 2

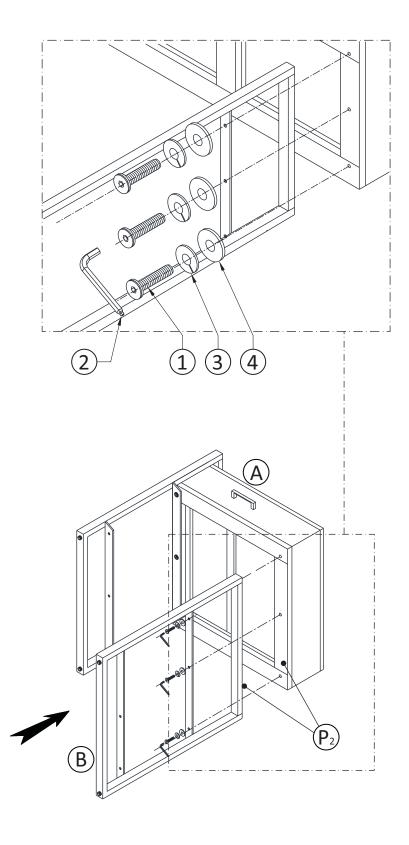

- 1. Align other Leg(B) to Top(A) by matching the letters P2 to P2 .
- 2. Use three Allen Key Bolts 1, three Lock Washers 3 and three Washers 4 to attach Top A and Leg B.
- 3. Use Allen Key 2 to tighten bolts. Do not over-tighten.


STEP 3

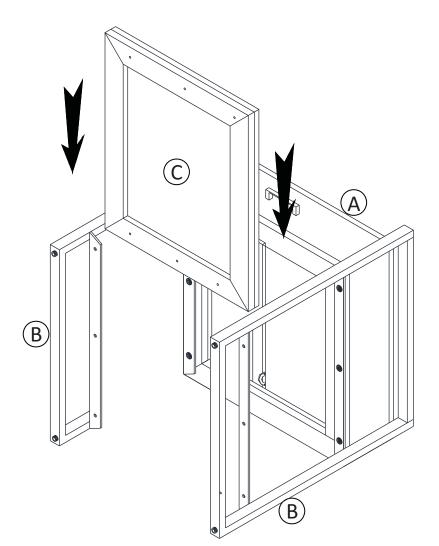


1. Place end table assembly on its side on a flat smooth surface.

2. Slide Bottom Shelf \bigcirc in leg slots.

STEP 4

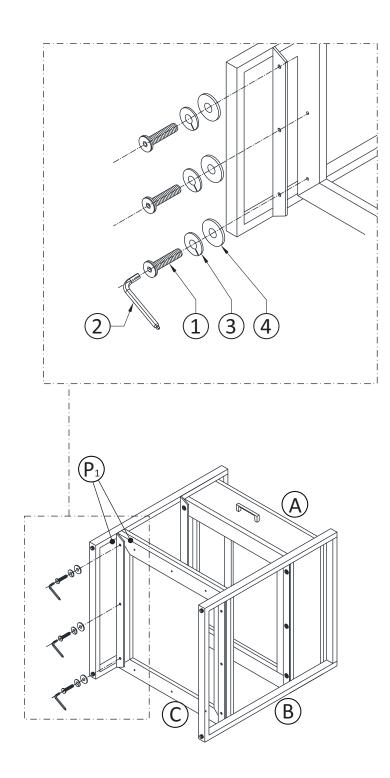

- 1. Align Bottom Shelf C to Leg B by matching the letters P1 to P1.
- 2. Use three Allen Key Bolts (1), three Lock Washers (3) and three Washers (4) to attach Leg (B) and Bottom Shelf (C).
- 3. Use Allen Key (2) to tighten bolts. Do not over-tighten.

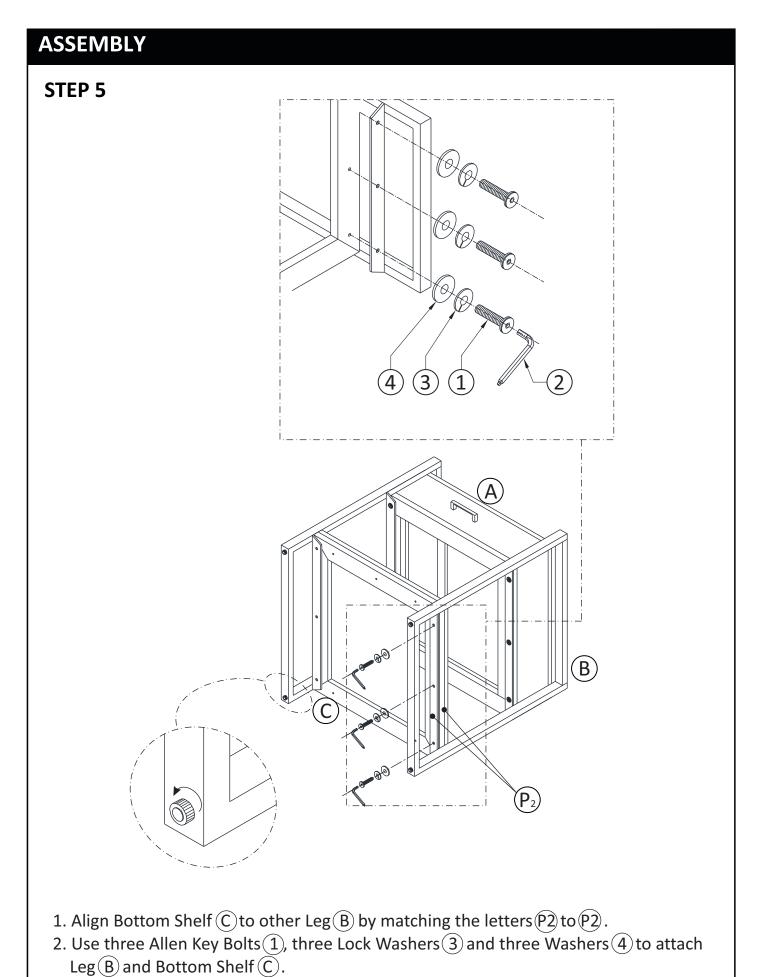

3. Use Allen Key (2) to tighten bolts. Do not over-tighten.

Note: Levelers on bottom of legs can be adjusted if floor is uneven.

WARRANTY

Thank you for purchasing our product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line or by email.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.

Question, problems, missing parts?

Before returning your product

please email Customer Support or call Customer Support

For more information visit us on our website Like us on facebook