





WARRANTY PART REPLACEMENT GUIDE

MODEL | MODELO

463246018 463246118


MODULAR OUTDOOR KITCHEN

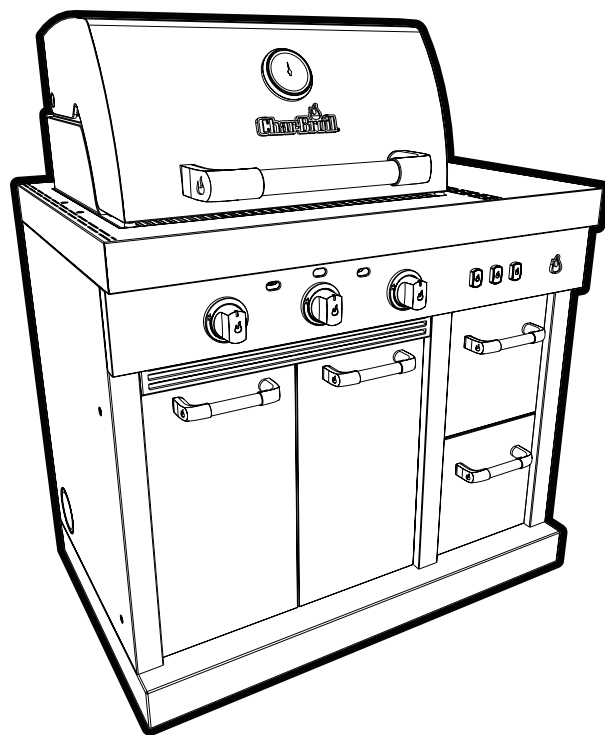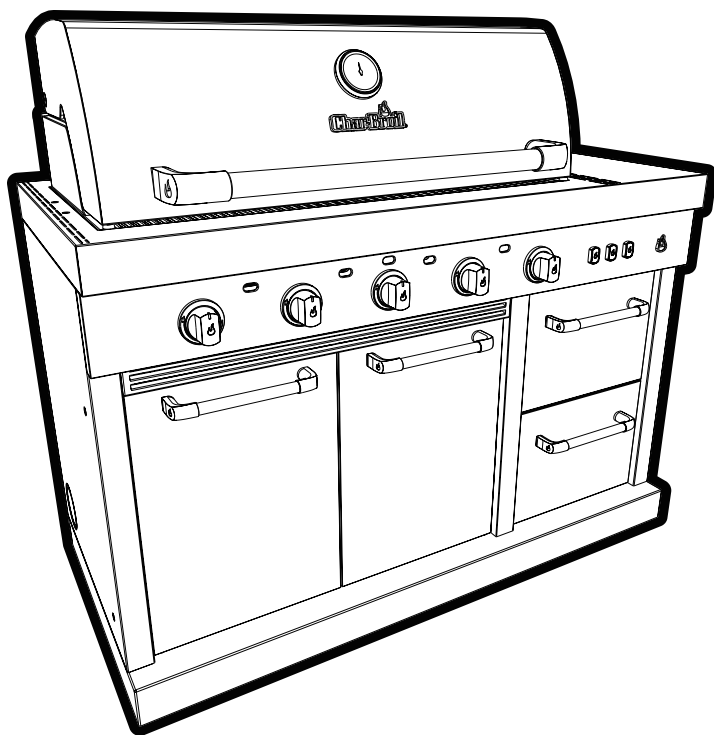

Each step shows removal and replacement of parts. Follow the steps in order to remove parts, then reverse the steps to replace all parts.


1

Remove and replace WARMING RACK.

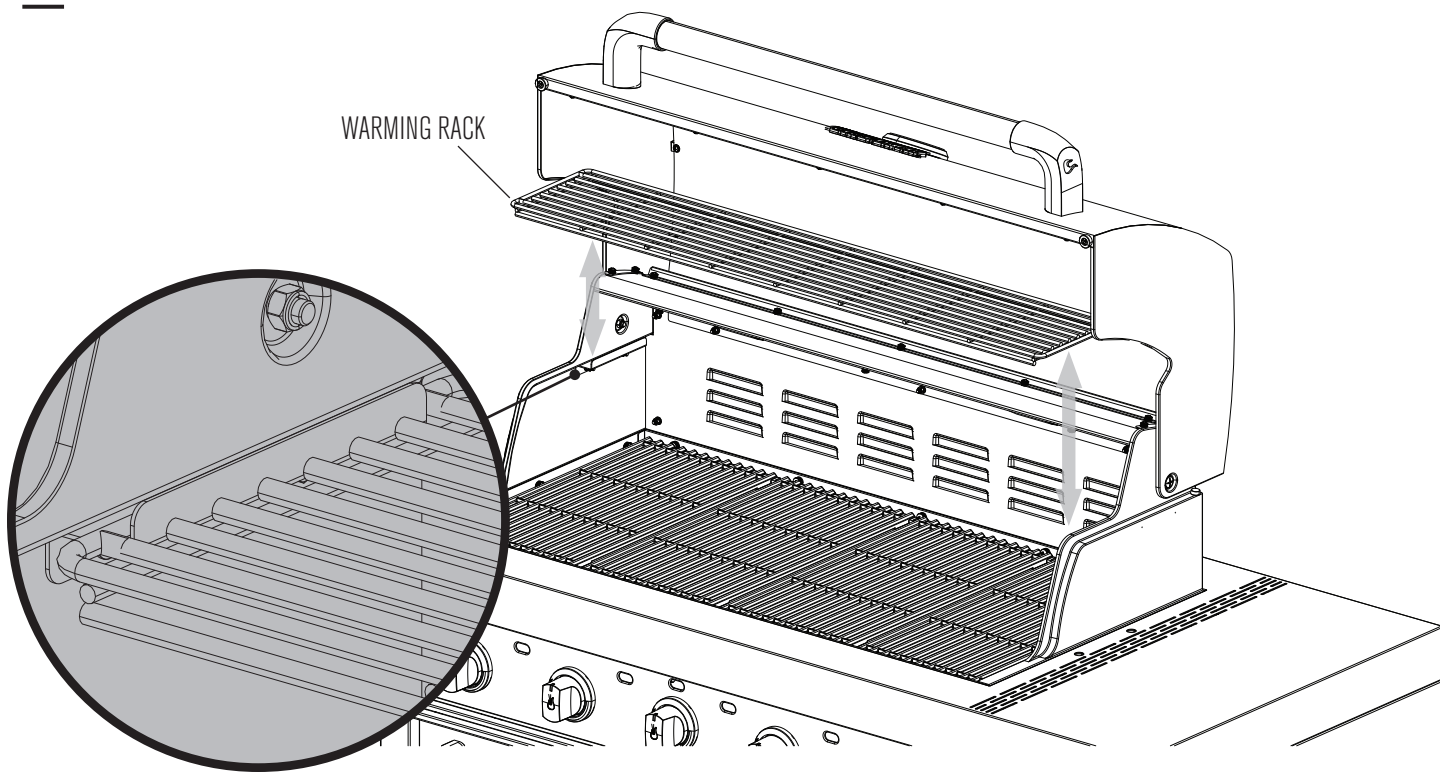


2

Remove and replace COOKING GRATES.

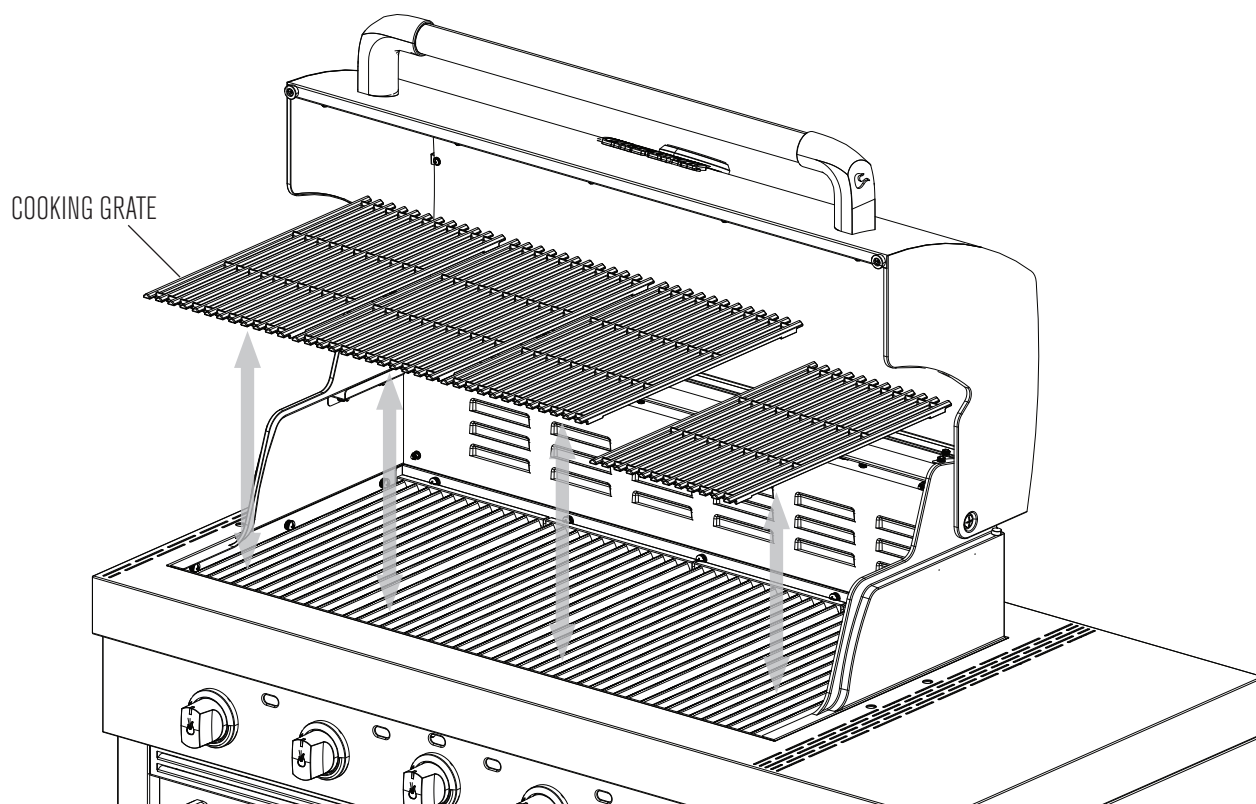


3

Remove and replace IR GRATES.

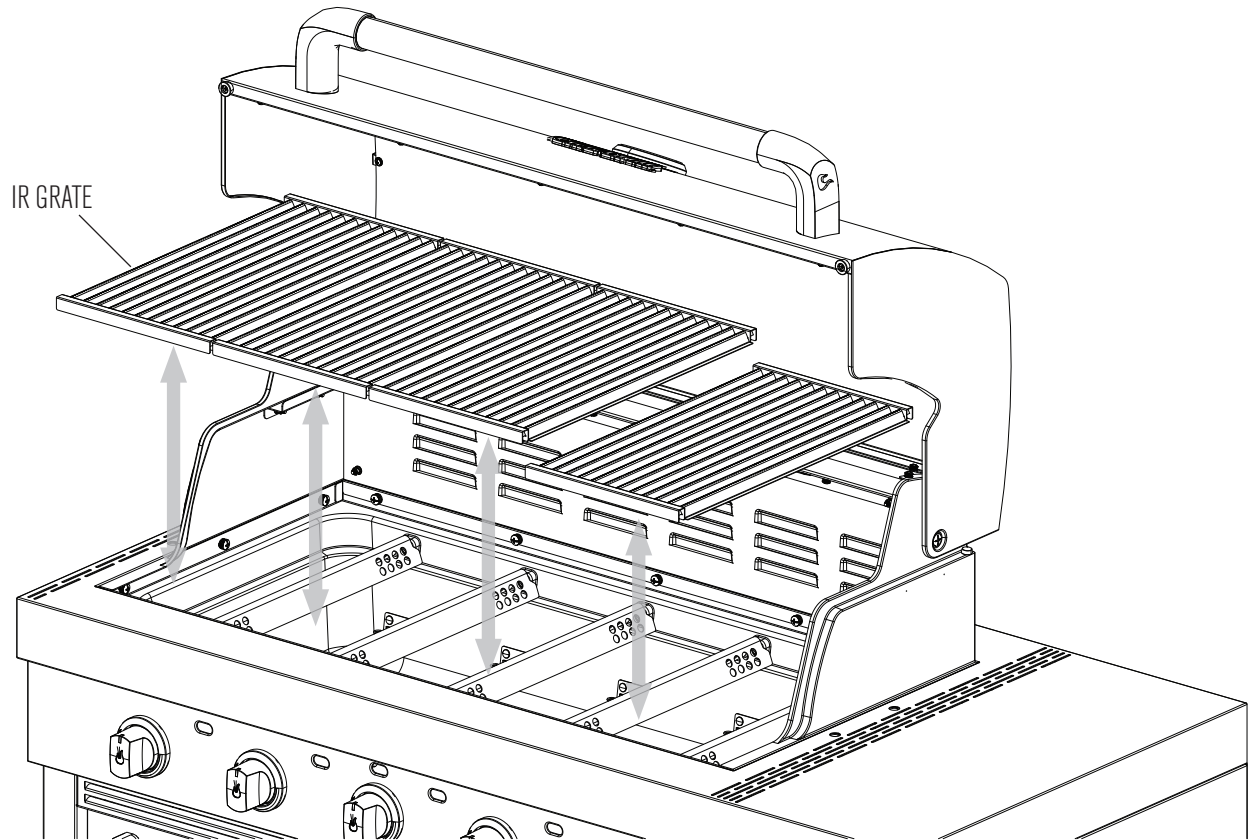



4

Remove and replace HEAT TENTS.

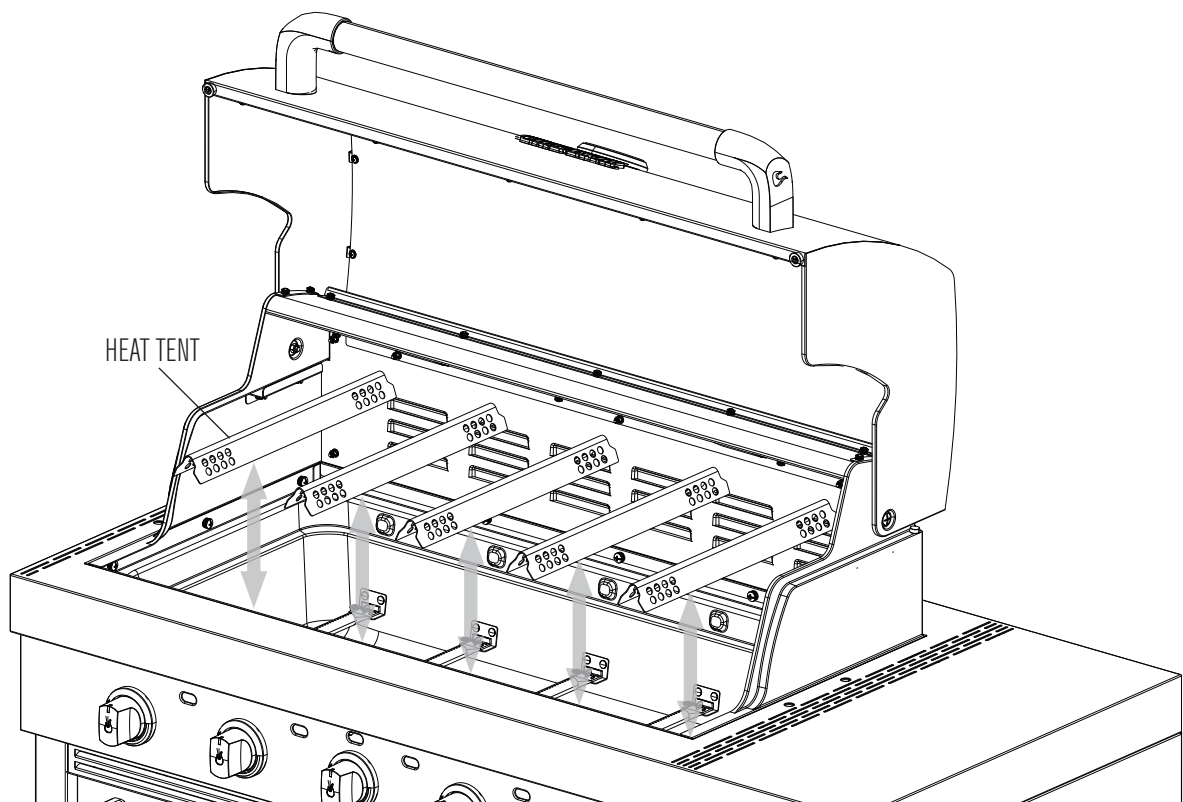

5



Remove and replace CARRY OVER TUBES and PORT CAPS.

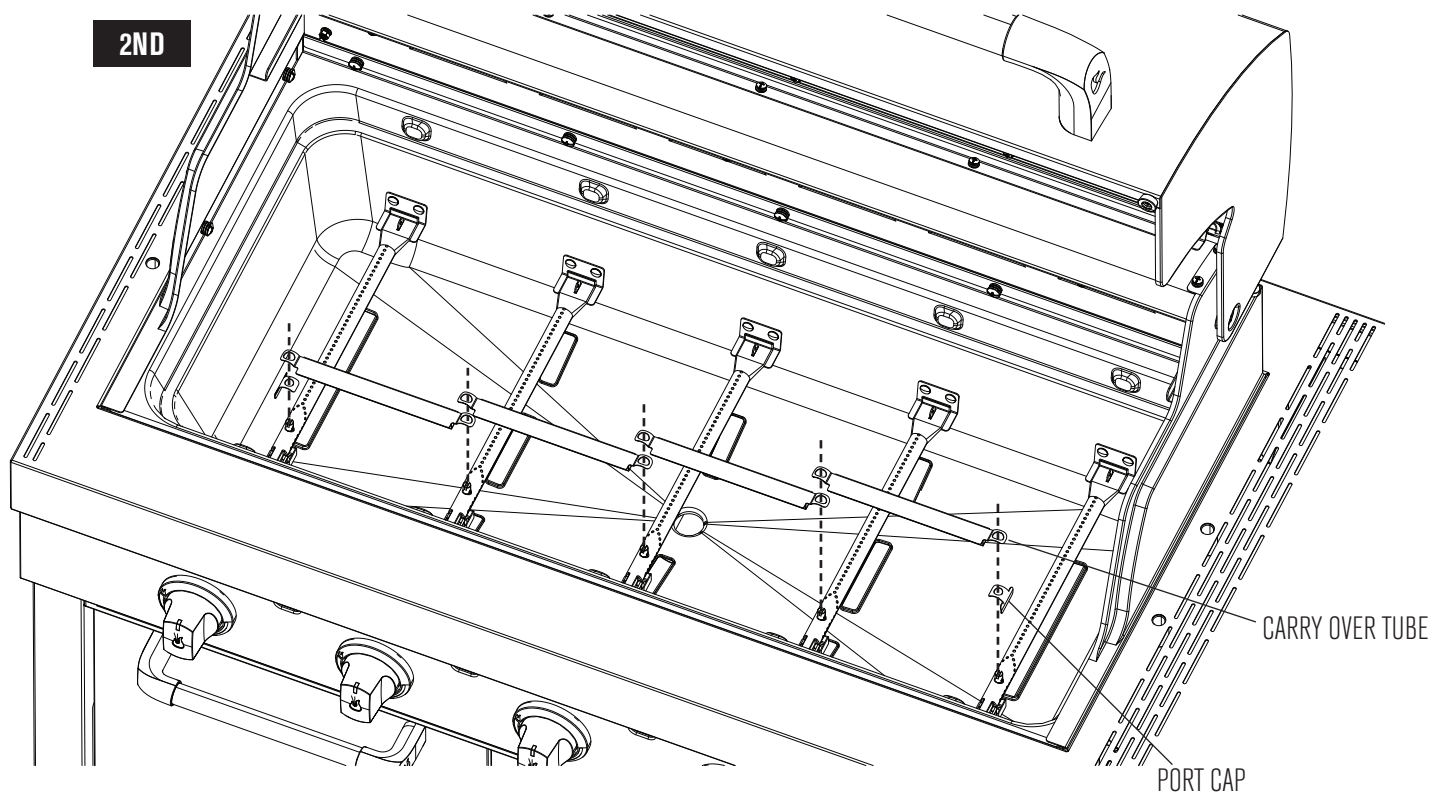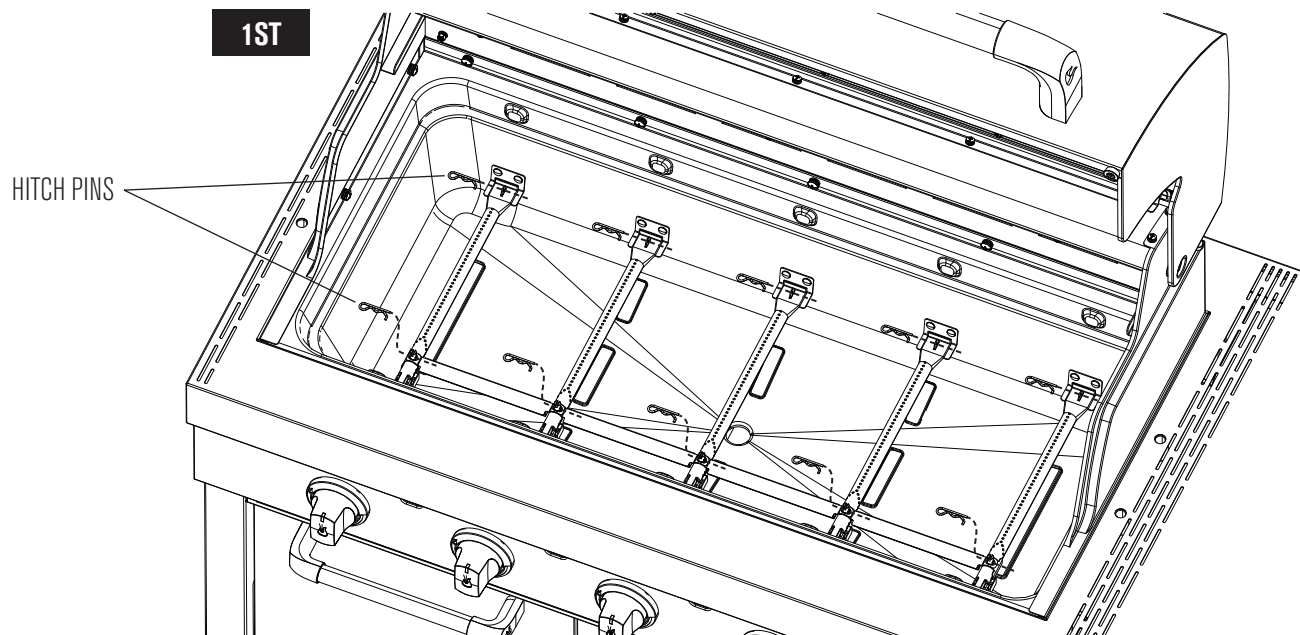

6


Unplug and replug ELECTRODE WIRES and LIGHT WIRE.

- Unplug/ replug ELECTRODE WIRES.
- Unplug/ replug LIGHT WIRE.
- Remove/ replace Tie Wrap to unbundle/ bundle ELECTRODE WIRES.
- Remove/ replace LIGHT WIRE from rear of TOP SHELF.

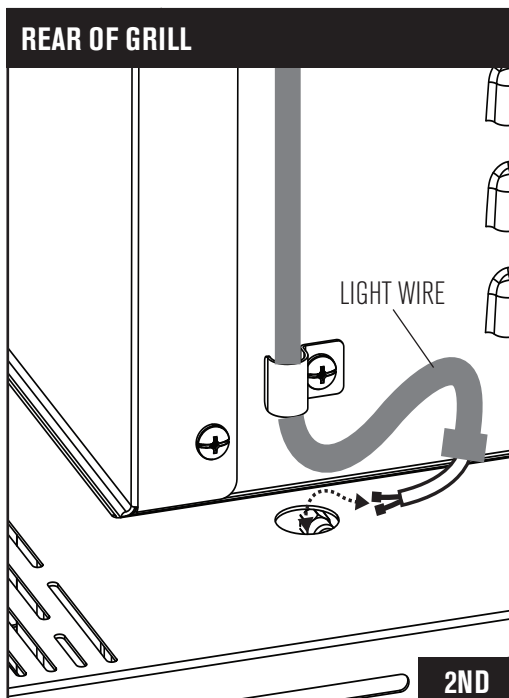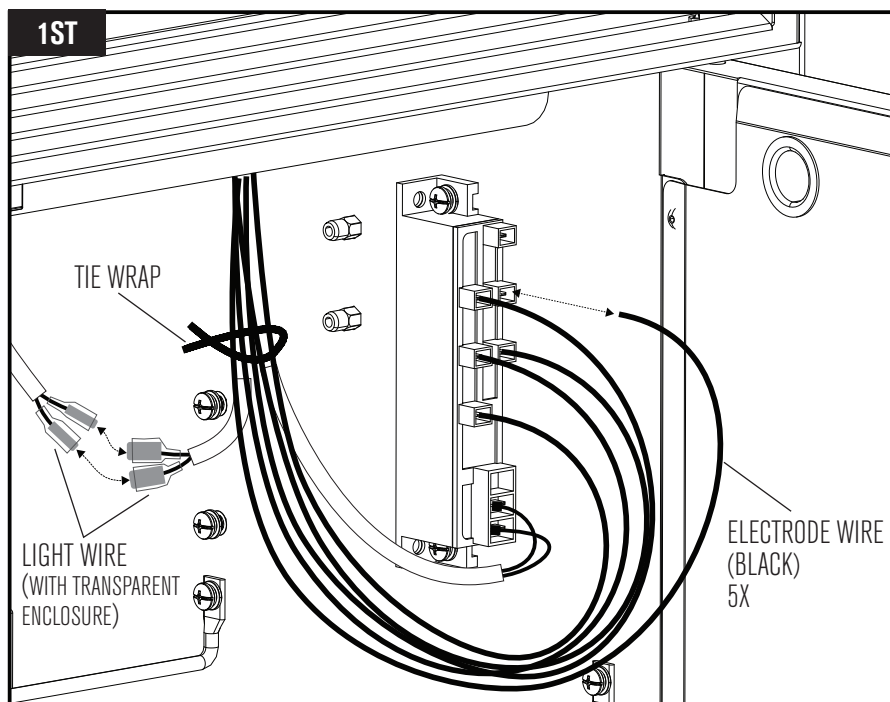

7


Remove and replace MAIN BURNERS.

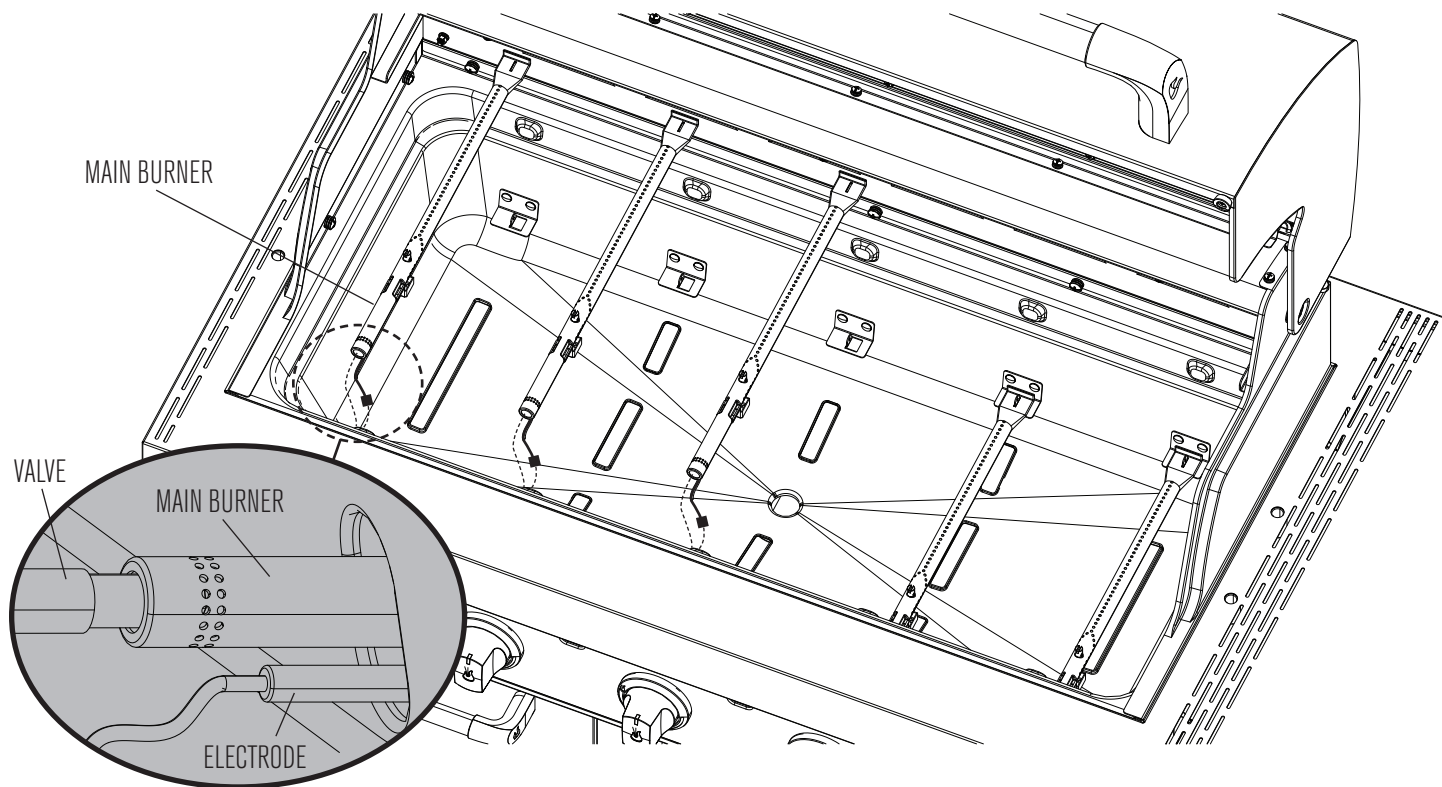

VALVES MUST BE PROPER ENGAGED WITH BURNER TUBES


8

Remove and replace TOP LID ASSEMBLY.

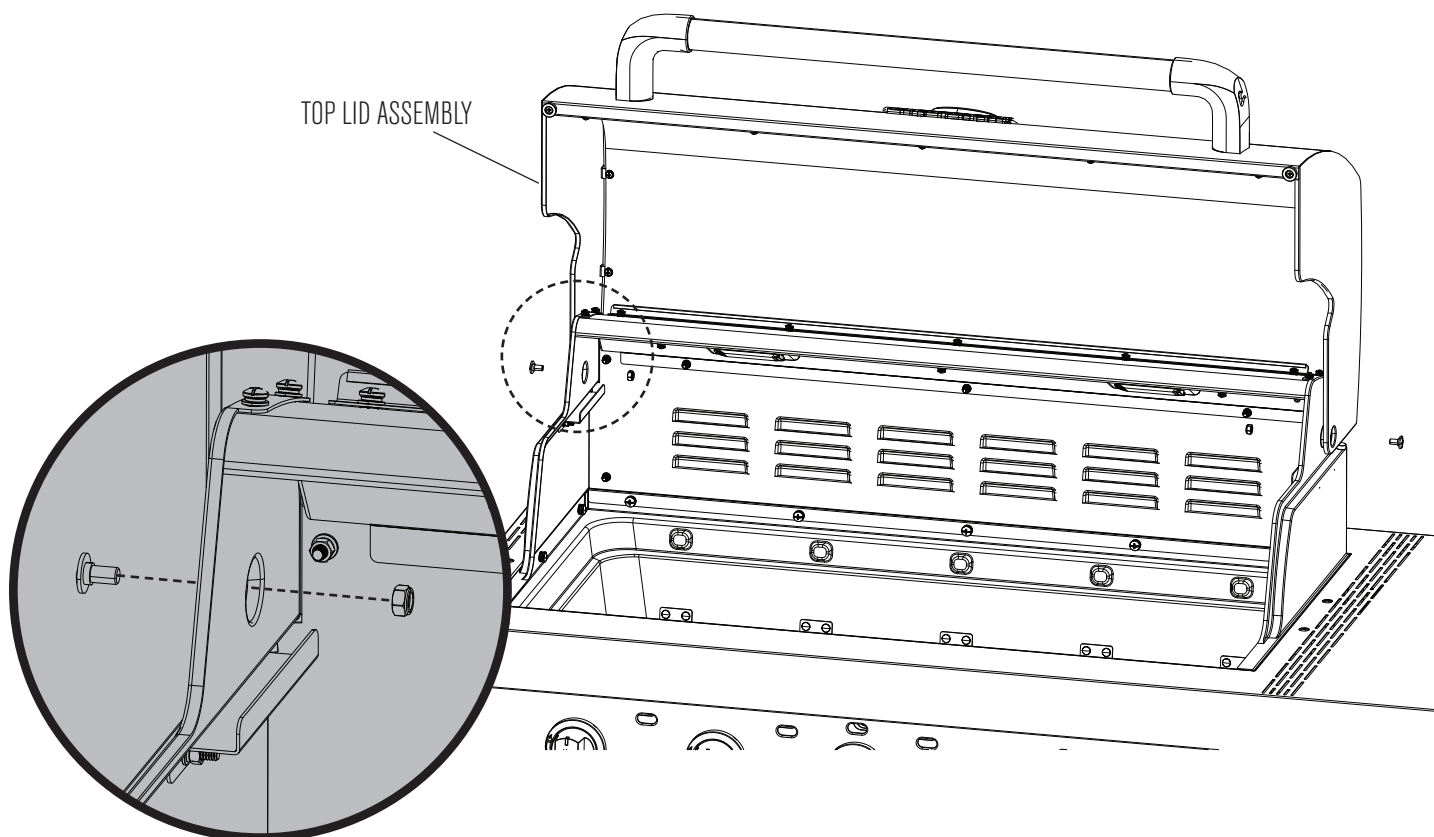


9

Remove and replace FIREBOX ASSEMBLY.

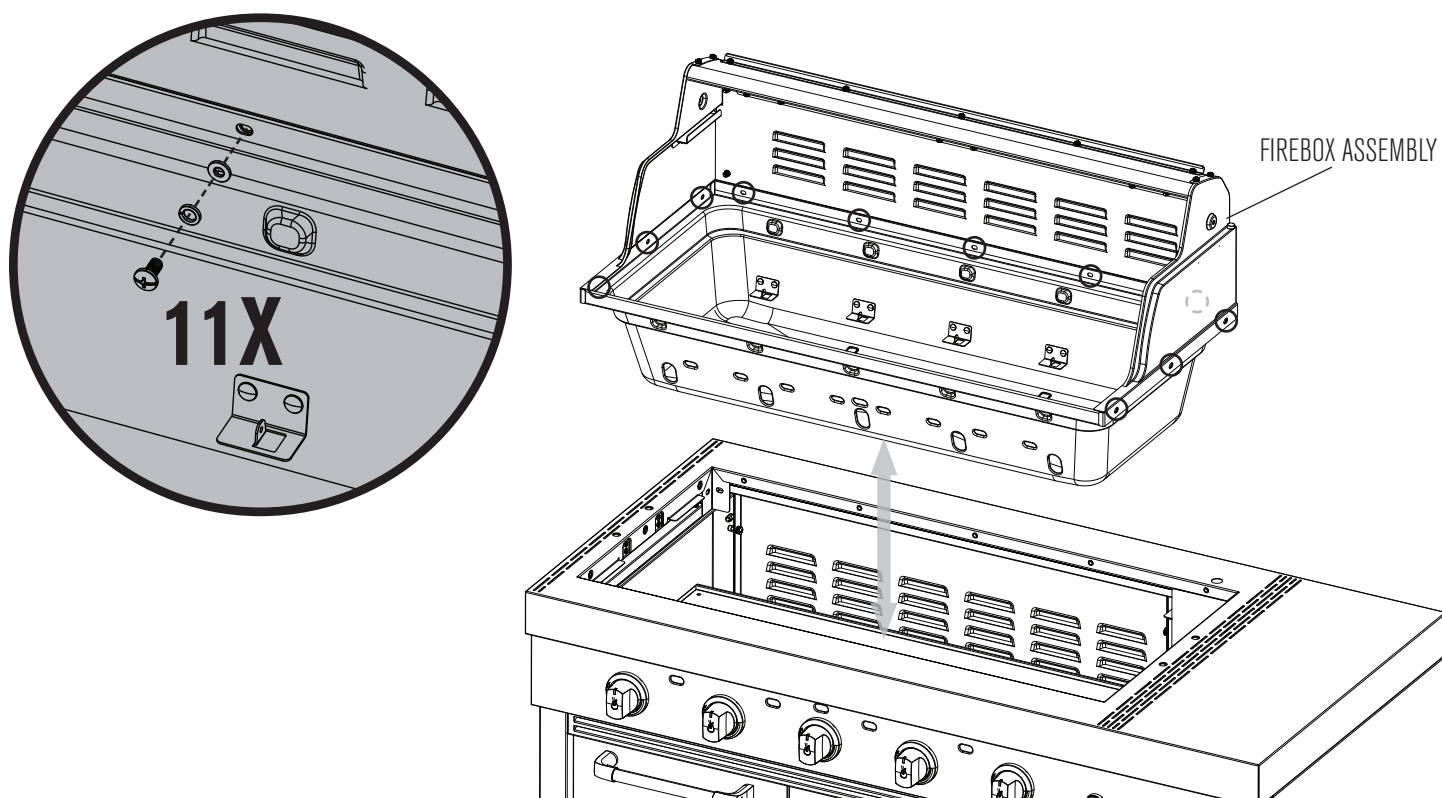




10

Remove and replace HEAT SHIELD.

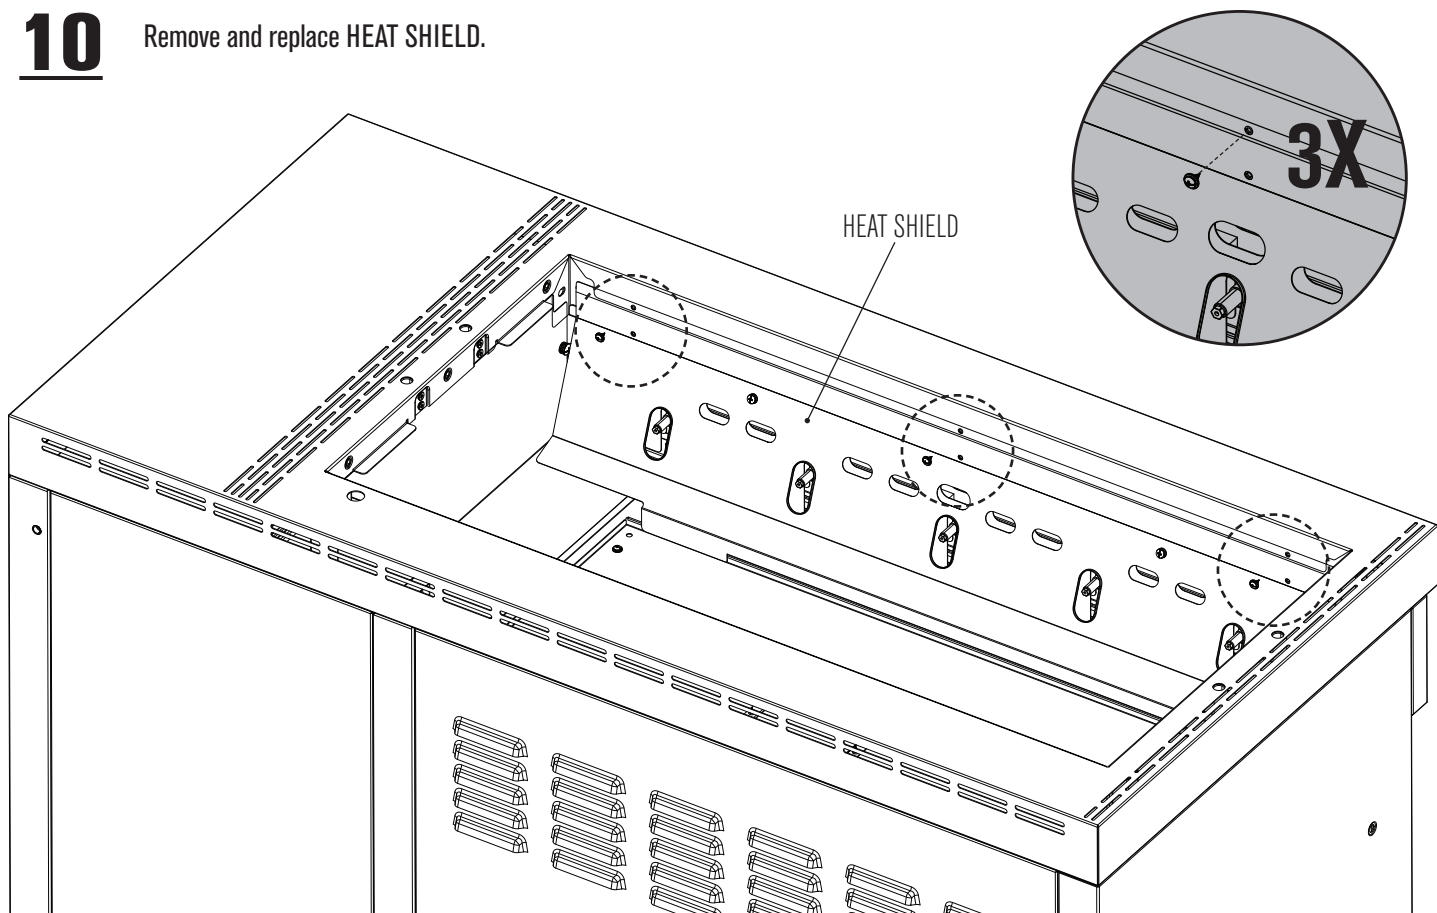**11**



Remove and replace GREASE BOX.

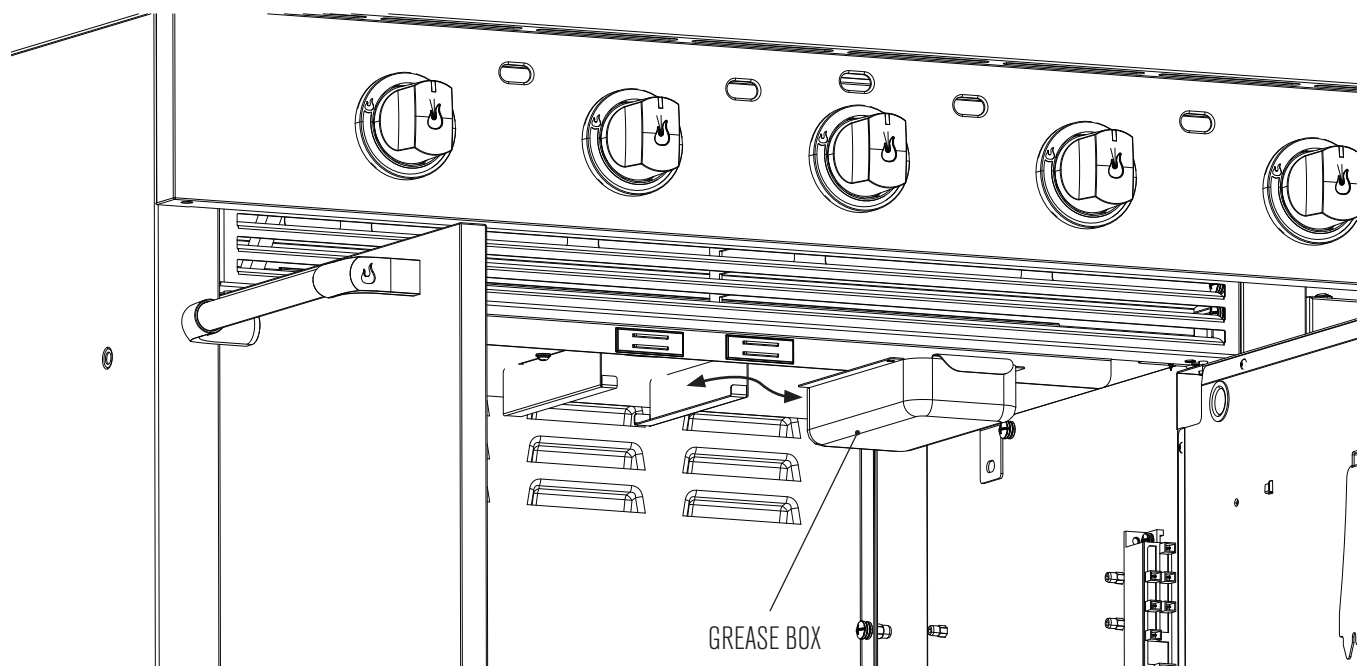

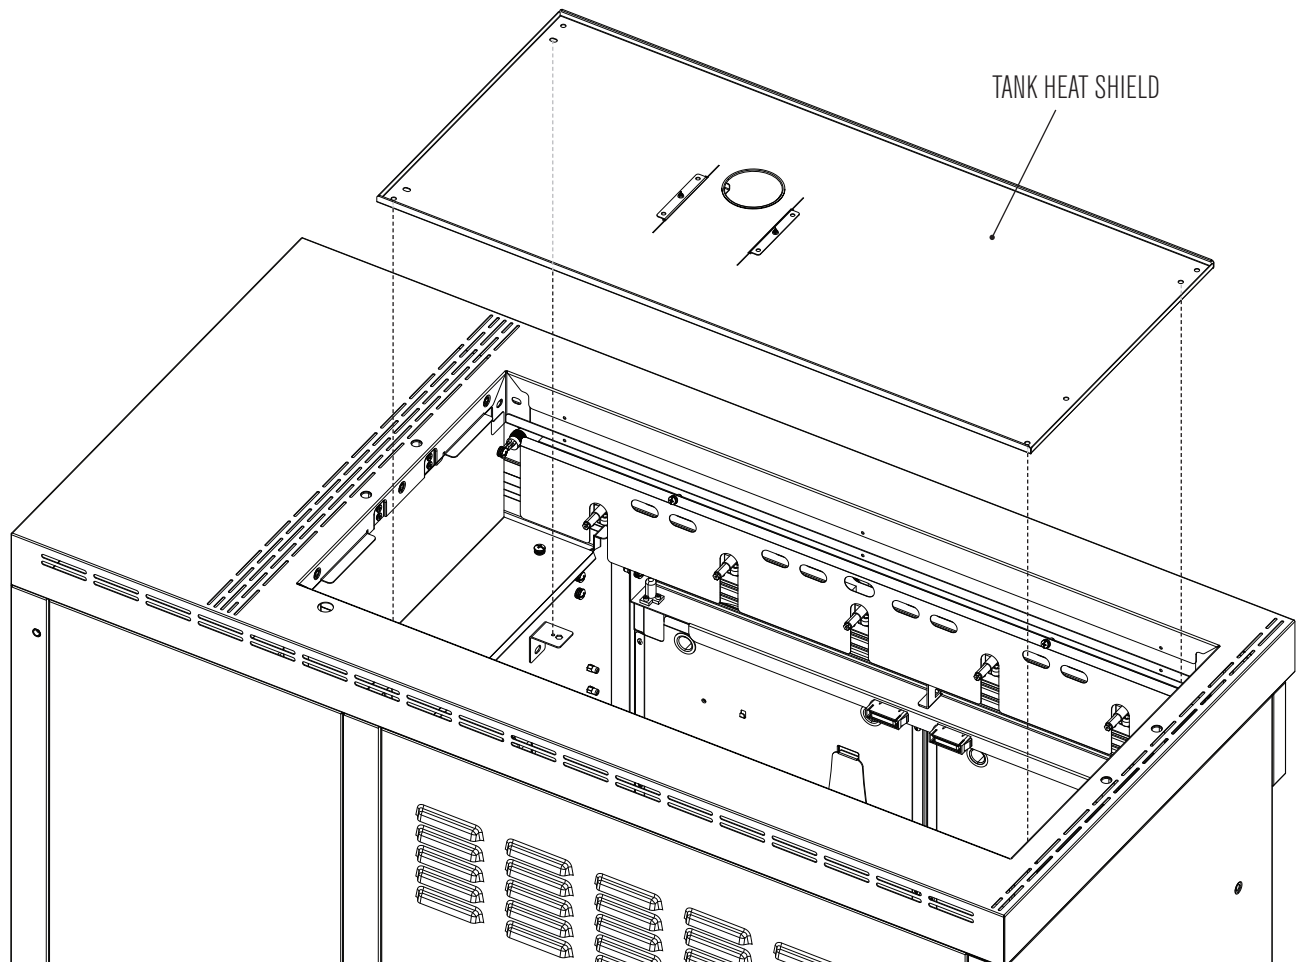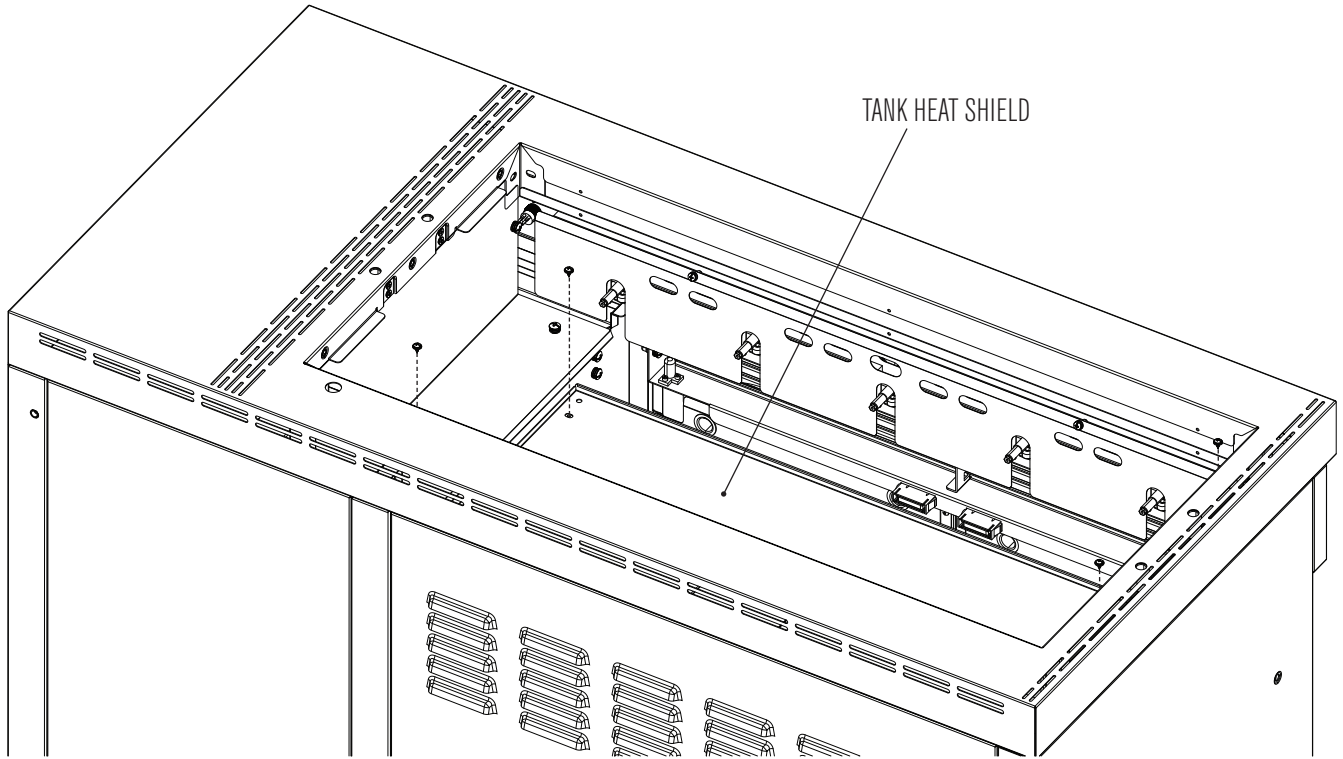


13

Remove and replace DRAWERS.

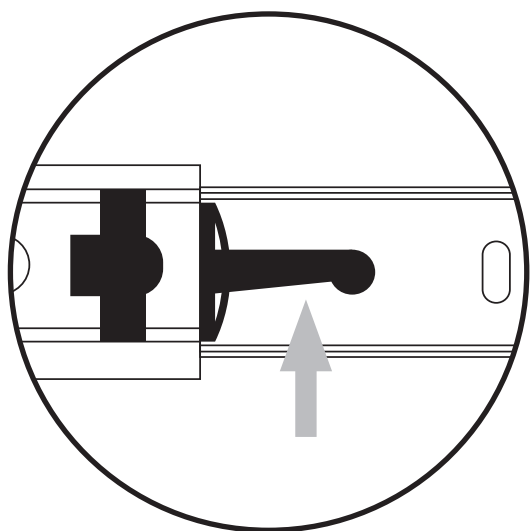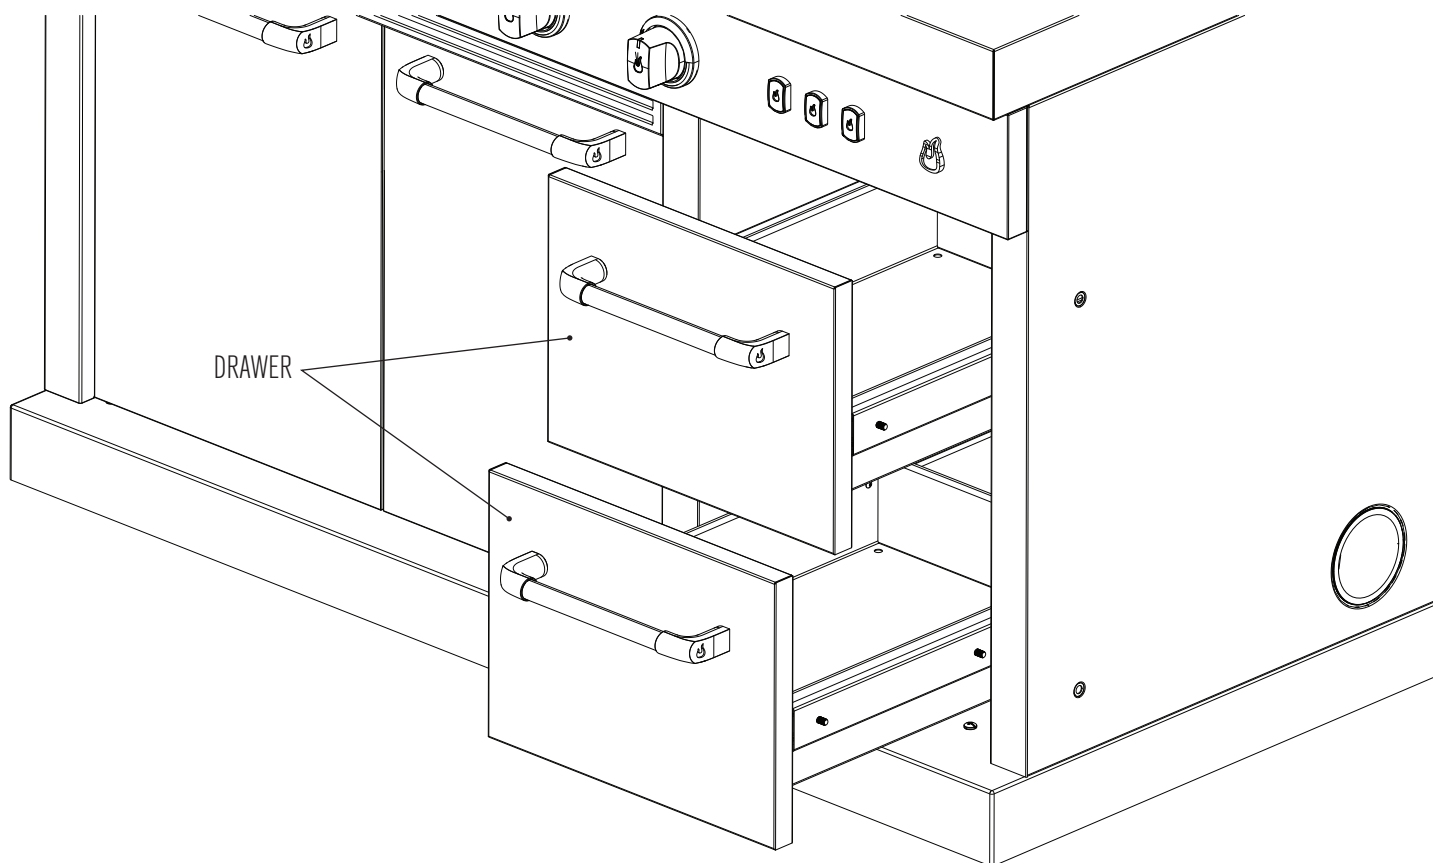

Left rail of drawer

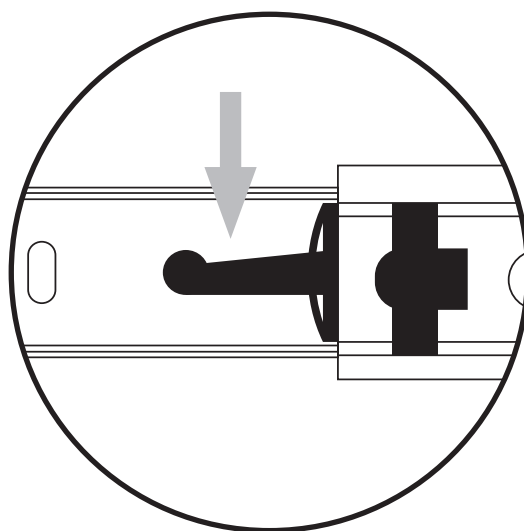


Right rail of drawer


NOTE: press the clips on left and right rails as the arrows indicate to remove drawers.

14

Remove and replace SHELF FRAME.

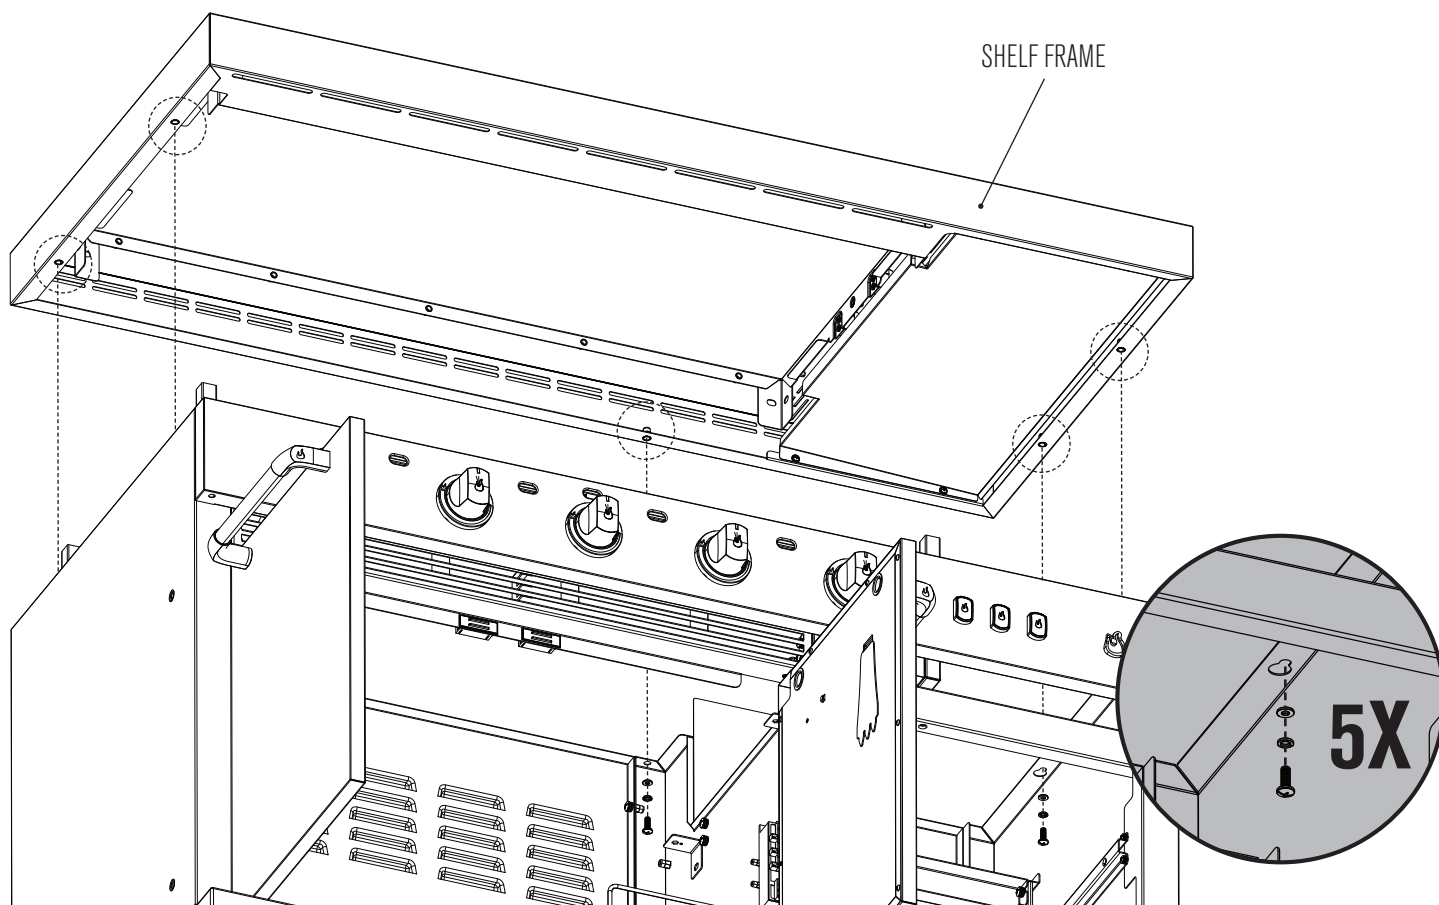**15**

Remove and replace DRAWER RAIN SHIELD.

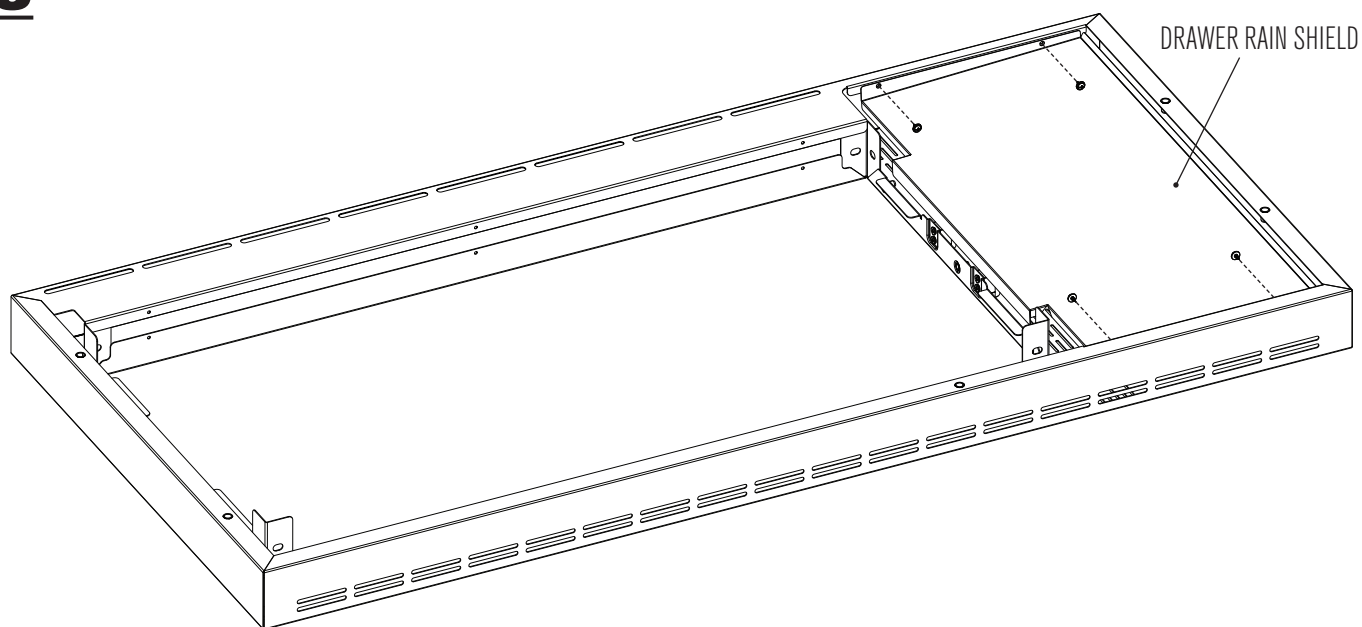

REVERSE THE STEPS TO ASSEMBLE THE GRILL.

NOTE: READ THE USE AND CARE GUIDE IN INSTRUCTION MANUAL PRIOR TO LIGHTING THE GRILL.