## **Assembly Instruction**

Computer Desk with 3 bins


DIMENSION: 39.4"(W) x 29.3"(H) x 15.7"(D)









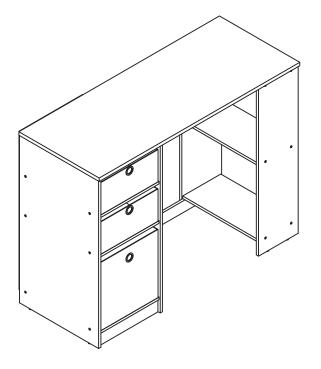








Α	TOP PANEL	1pc
В	LEFT SIDE LEFT PANEL	1pc
С	LEFT SIDE RIGHT PANEL	1pc
D	LEFT SHELF PANEL	3pcs
Е	LEFT LEG PANEL	1pc
F	LEFT BACK PANEL	1pc
G	RIGHT TOP SUPPORT PANEL	1pc
Н	RIGHT SIDE FRONT PANEL	1pc
I	RIGHT SIDE BACK PANEL	1pc
J	SHELF PANEL	2pcs
K	BACK SUPPORT BAR	1pc
	1	

**Parts List** 

Qty

No


No	Hardware List		Qty
1	MINI FIX BOLT	i	5pcs
2	MINI FIX CAM	<b>9</b>	5pcs
3	SCREW A	<b>\</b>	24pcs
4	SCREW B		6pcs
5	SCREW C	<b>~</b>	2pcs
6	DOWEL		20pcs
7	NAIL LEG	₫	8pcs
8	POWER PIN	0-	14pcs
9	ROUND STICKER	8888	18pcs
10	NON WOVEN BIN (SMALL)	<b>\$</b>	2pcs
11	NON WOVEN BIN (BIG)	$\bigcirc$	1pc

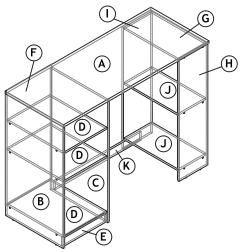



## **USEFUL HINTS BEFORE YOU START:**


- 1. Read each step carefully before starting.
- 2. It is important that each step is performed in correct order to avoid difficulties.
- 3. Identify, sort and count the parts before assembly.
- 4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
- 5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
- 6. Using uncompatible hardware might cause damage to product.

PAGE 1/6

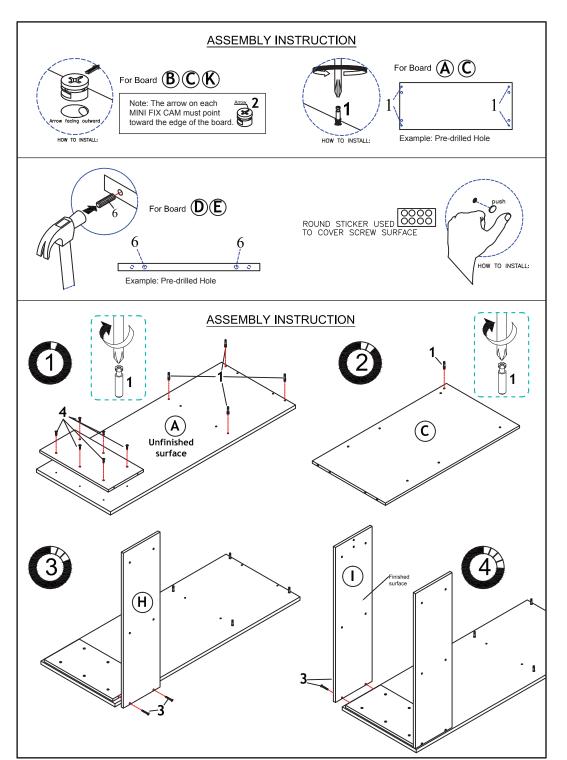


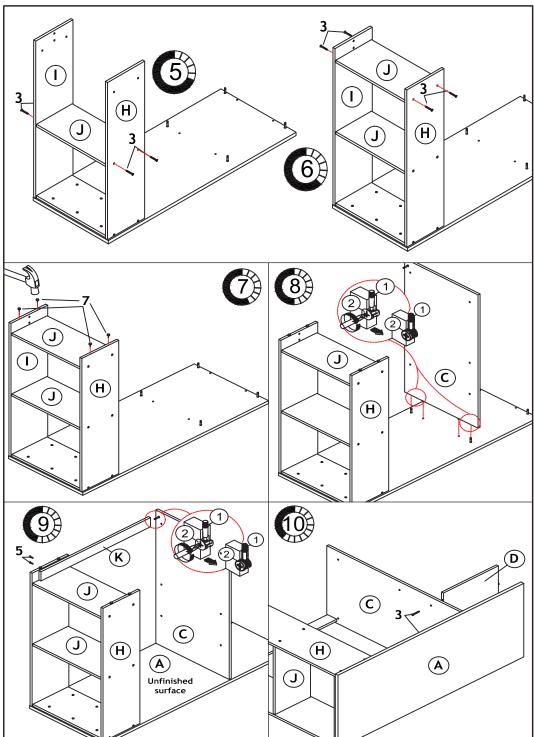

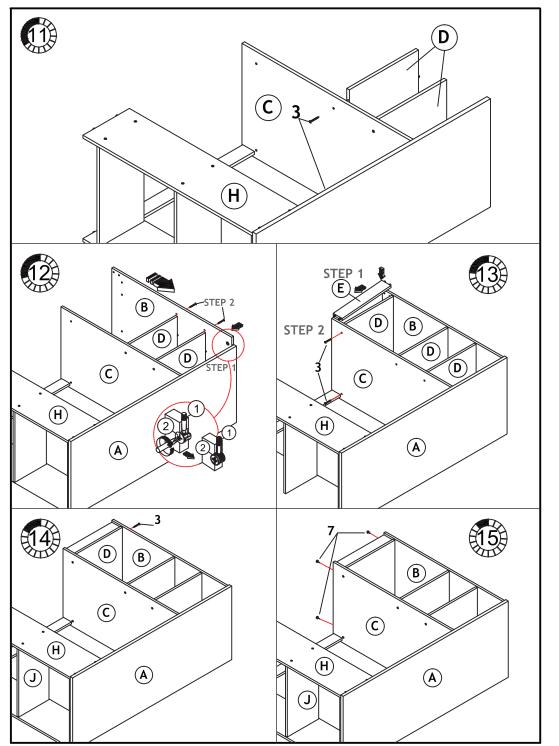

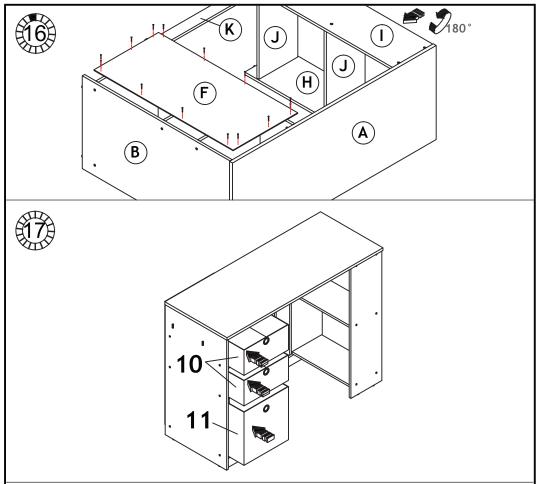

## Recommended Maximum Weight

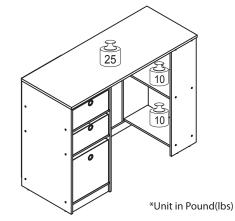

## **WARNING:**

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

>Put heavier items on lower shelves.