
MODEL: PACKING DIAGRAM -CARDBOARD SHADE ASSEMBLY COLUMN -CARDBOARD EXTENSION TUBES (4 PCS) CANOPY AND OTHER PARTS -STYROFOAM: 12 KGS. RED RIBBON-PE BAG 0 -DIFFUSER STYROFOAM: 12 KGS.

USE AND CARE GUIDE

3 LIGHT PENDANT

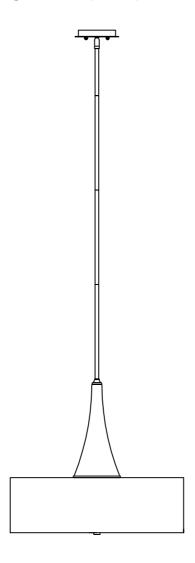

THANK YOU

Table of Contents

Safety Information	
Warranty	
Pre-Installation	
Planning Installation	
Package Contents	
Assembly 5	5
Installation	7
Care and Cleaning	,
Troubleshooting	7

Safety Information

☐ Consult a qualified electrician with any electrical questions you may have.



IMPORTANT: Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have occurred during shipping. If there is a defect in the wire, do not continue the assembly process. Please call our Customer Service Team.

Warranty

1-YEAR LIMITED WARRANTY

WHAT IS COVERED

The manufacturer warrants this pendant to be free from defects in the materials and workmanship for a period of one (1) year from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, assembled, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship.

WHAT IS NOT COVERED

This warranty shall not apply to the finish on any portion of the product due to weathering, as this is considered normal wear. The manufacturer does not warrant and specifically disclaims any warranty, whether expressed or implied, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to, any labor or expense costs involved in the replacement or repair of the product.

Pre-Installation

PLANNING INSTALLATION

Read all instructions before assembly.


To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard. Inspect each part for defects that may have occurred during shipping.

Keep your receipt and these instructions for proof of purchase.



NOTE: This pendant requires the use of three 120V, 60HZ, 100-Watt max, medium-base type A bulbs (not included). Do not exceed the recommended wattage.

TOOLS REQUIRED

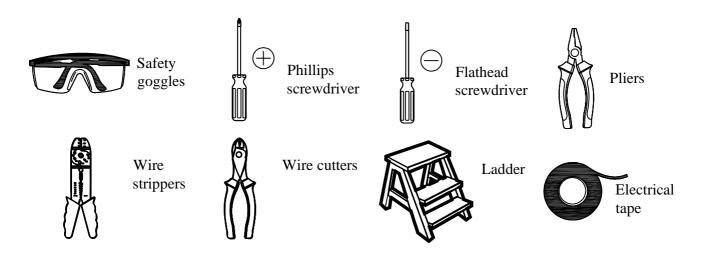

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.



Part	Description	Quantity
AA	Wire nut	3
BB	Mounting plate	1
CC	Outlet box screw	2
DD	Mounting screw	2
EE	Ground screw	1
FF	Small nut	2
GG	Ball finial	2

Pre-Installation (continued)

PACKAGE CONTENTS

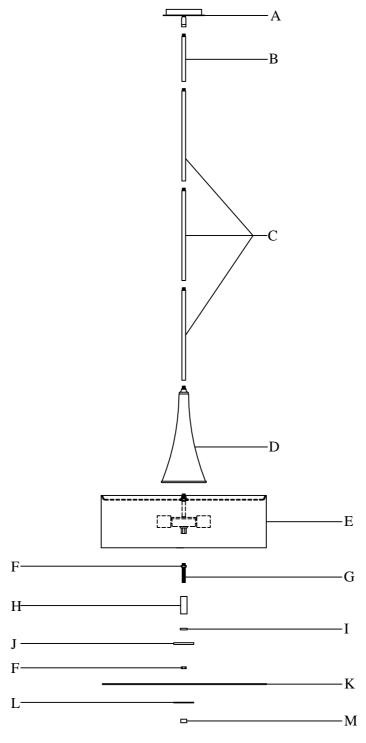


Part	Description	Quantity
A	Canopy	1
В	6 inches tube	1
С	12 inches tube	3
D	Column	1
Е	Shade assembly	1
F	Nut	2
G	Nipple	1

Part	Description	Quantity
Н	Tube	1
I	Cap	1
J	Stabilizer	1
K	Diffuser	1
L	Metal washer	1
M	Finial	1

Assembly instructions


1. Assembling the fixture body

- ☐ Carefully unpack the fixture, lay out all parts on clean surface.
- □ Screw nipple (G) to bottom of the shade assembly (E) and secure with a nut (F), adjust the exposed length of the nipple (G) if needed.
- □ Slide tube (H), cap (I), stabilizer (J) over the nipple (G) and secure with a nut (F).
- □ Slide diffuser (K), metal washer (L) over end of the nipple (G) and secure with finial (M).

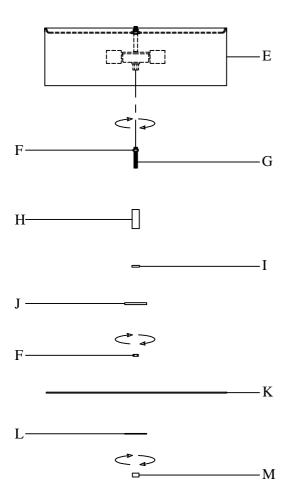

2. Assembling the column & tubes

- □ Screw column (D) to top of shade assembly (E).
- □ Feed the wires up through the 12 inches tubes (C) and then the 6 inches tube (B). The number of tubes you use depends on the length you desire for the installed light fixture, remove the nipple from tube if needed.
- □ Attach the desired number of tubes (B and C) to top of the column (D) by twisting the tubes in a clockwise direction.
- ☐ Attach the canopy (A) to the end of the tube assembly by twisting in a clockwise direction.

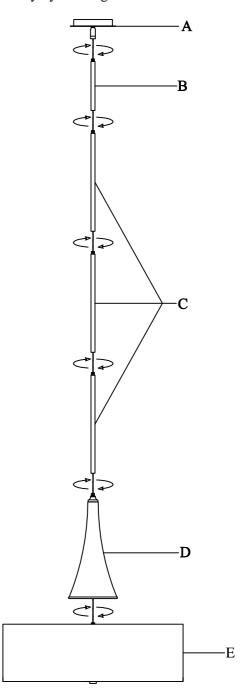


Installation instructions

1 . Installing the mounting plate




CAUTION: Ensure the power is off at the main fuse box prior to beginning installation.


- □ Turn off the switch at the wall.
- □ Turn the power off at the main fuse box.
- ☐ Attach the mounting plate (BB) to the outlet box using the outlet box screws (CC).

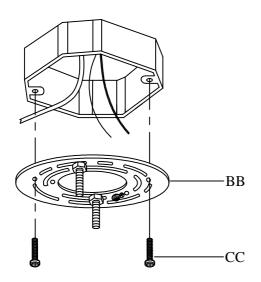

2. Connecting the wires

- ☐ Install the fixture bare copper wire (1) under the ground screw (EE) on the mounting plate (BB).
- □ Connect the fixture bare copper wire (1) to the green (or bare, or green & yellow) supply ground wire (2) in the outlet box using a wire nut (AA).
- □ Connect the white fixture wire (3) to the white (or ribbed) supply wire (4) in the outlet box using a wire nut (AA).
- □ Connect the black fixture wire (5) to the black (or red, or blue) supply wire (6) in the outlet box using a wire nut (AA).

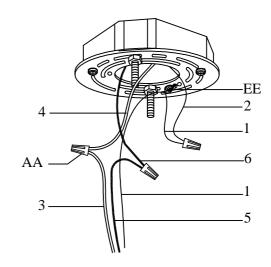


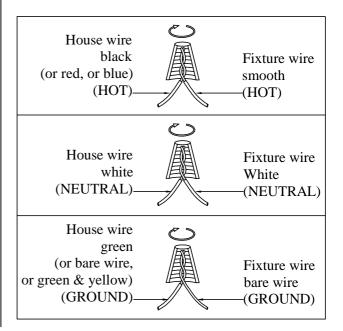

Installation instructions (continued)

3. Installing the fixture and bulb

- □ Push all excess wires into the outlet box.
- □ Raise the fixture to the ceiling and secure the canopy (A) in place with ball finials (GG).
- Prior to installing the bulbs, please inspect sockets for silica packet, if packet is present, remove and throw away, do not expose to children and pets.
- □ Install a 120V, 60HZ, 100-watt max. medium-base type A bulb (not included) in to each socket of the light fixture.

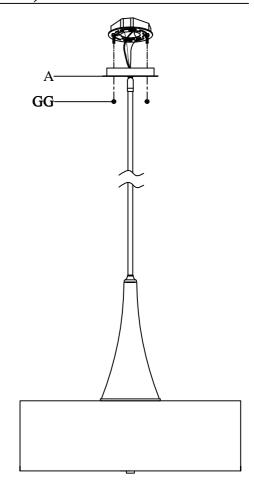

Care and Cleaning

□ Clean the light fixture with a soft, dry cloth. Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution	
The bulb will not light.	☐ The bulb is burned out.	□ Replace the light bulb.	
	☐ The power is off.	☐ Ensure that the power supply is turned on.	
	☐ There is a faulty wire connection.	□ Check the wiring.	
	☐ The circuit breaker is off.	☐ Ensure that the circuit breaker is set in the on position.	
The fuse blows or a circuit breaker trips when the light is turned on.	☐ There is an exposed wire. ☐ There are too many items on one circuit.	☐ Discontinue use of the light fixture. ☐ Contact a qualified electrician or call the Customer Service Team at ☐ Unplug other items on the circuit.	
		□ Unplug other items on the circuit.	