


ASSEMBLY INSTRUCTIONS
TEAK 4' GLIDER BENCH

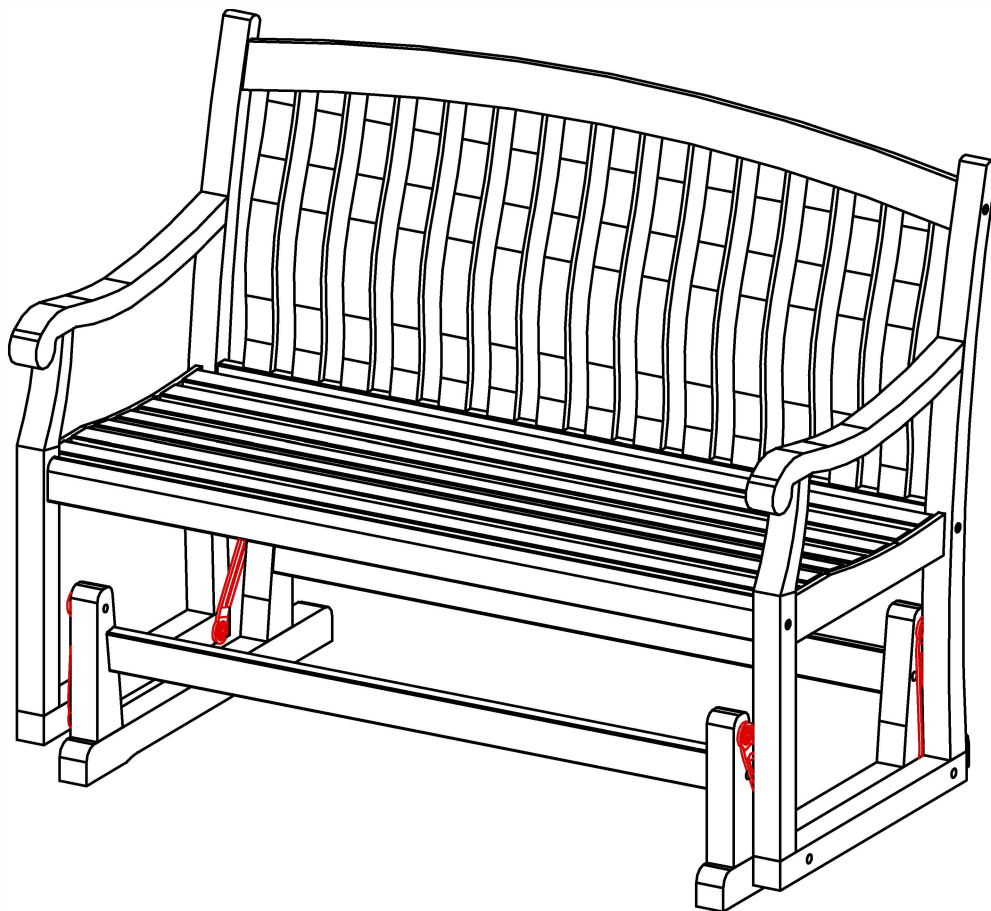

 
 
GENERAL INFORMATION & TIPS

1. Please read the assembly instructions prior to assembling the Glider.
2. To avoid damage, assemble the Glider on a non-abrasive surface such as carpet.
3. Make sure all bolts and screws tightly fastened before the Glider is used.
4. This Glider is not for commercial use.

 




 
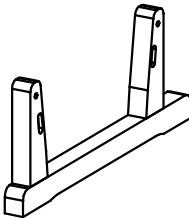
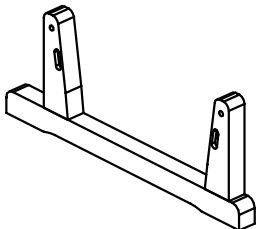
Please make sure you have all parts before beginning assembly. Please wait until all steps are completed before tightening bolts and screws.

TOOLS REQUIRED


 

 
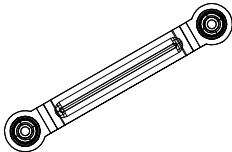

 

1. 8" Philips screwdriver (Not provided).
- For tightening all bolts and screws.
2. Rubber Mallet (Not provided).
- For tapping in the wooden caps.
3. Wrench (Provided).
- For tightening all nuts.




PARTS AND HARDWARE LIST

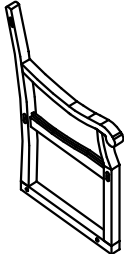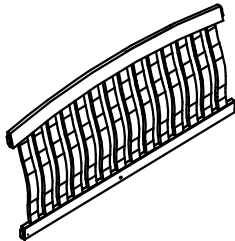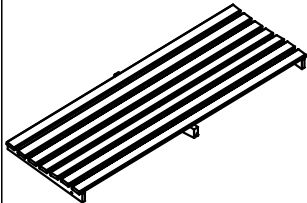A1. Right side frame	A2. Left side frame	B. Back support	C. Seat
			
Qty : 1 Pc	Qty : 1 Pc	Qty : 1 Pc	Qty : 1 Pc
D. Front apron	E. Base crossbar	F1. Right base side frame	F1. Left base side frame
			
Qty : 1 Pc	Qty : 2 Pcs	Qty : 1 Pc	Qty : 1 Pc

PARTS AND HARDWARE LIST


G. 1 1/2" Bolt	H. 2 1/2" Bolt	I. 1 1/2" Screw	J. 1" Screw
			
Qty : 10 Pcs + 1	Qty : 8 Pcs	Qty : 2 Pcs +1	Qty : 4 Pcs+1
K. Gliding stretch	L. Washer	M. Nut	N. Wooden cap
			
Qty : 4 Pcs	Qty : 8 Pcs + 1	Qty : 8 Pcs +1	Qty : 10 Pcs +1

STEP 1

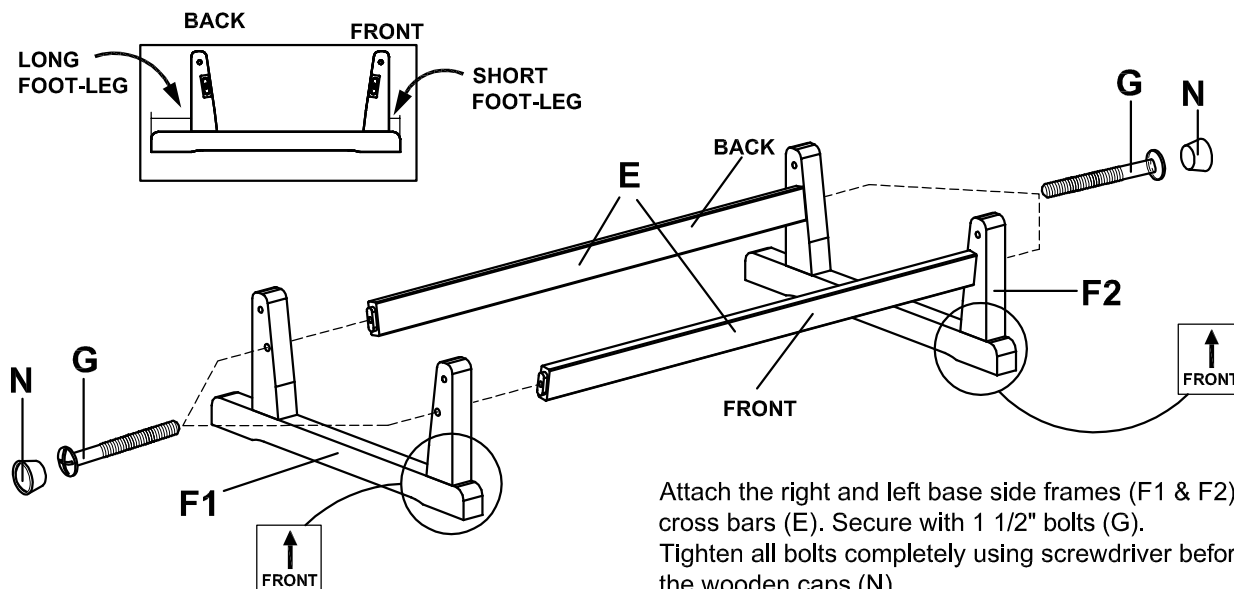


Attach the right and left base side frames (F1 & F2) into base cross bars (E). Secure with 1 1/2" bolts (G). Tighten all bolts completely using screwdriver before tapping in the wooden caps (N).

STEP 2

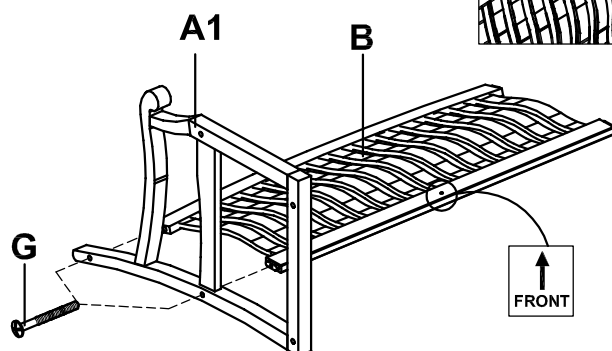


Attach the right side frame (A1) into back support (B). Secure with 1 1/2" bolts (G).
** Do not tighten the bolts yet.

STEP 3

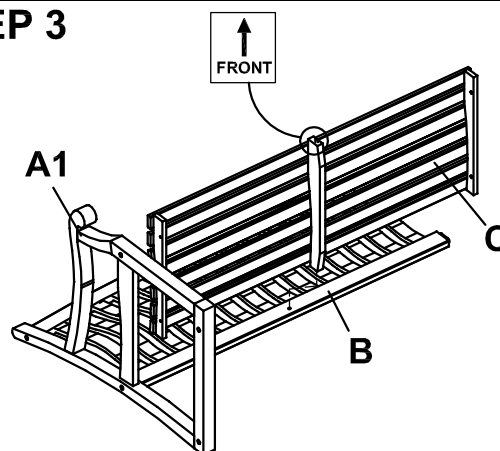


Next, attach the seat (C) into predrilled holes of back support (B).

STEP 4

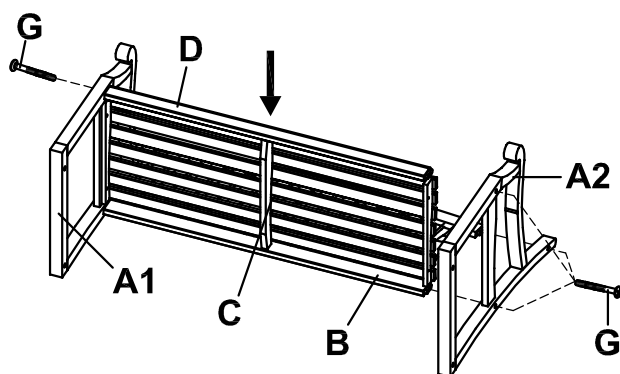


Attach the front apron (D) into seat (C) and right side frame (A1) and secure using 1 1/2" bolts (G). Next, attach the left side frame (A2) into back support (B) and front apron (D). Secure using 1 1/2" bolts (G).

STEP 5

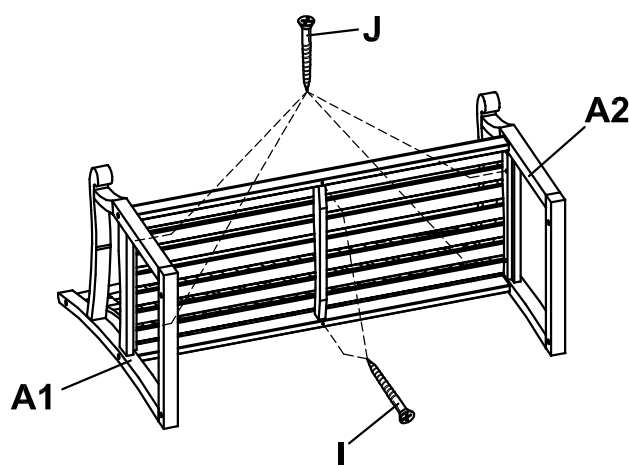


Secure the seat (C) using 1 1/2" screws (I) and 1" screws (J), as shown.

STEP 6

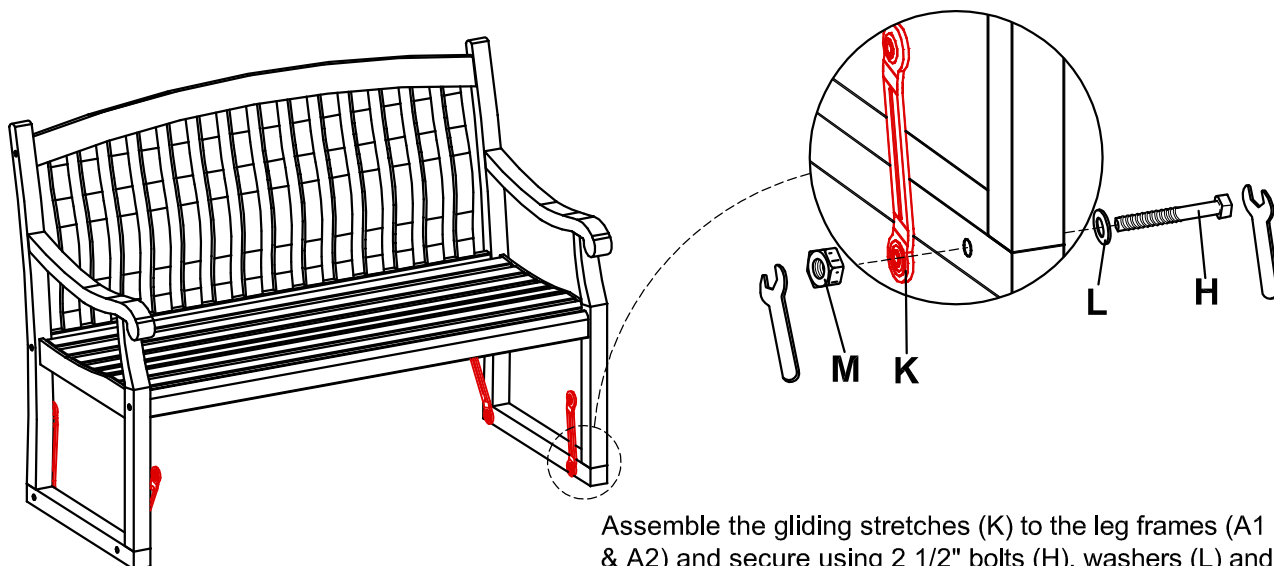


Assemble the gliding stretches (K) to the leg frames (A1 & A2) and secure using 2 1/2" bolts (H), washers (L) and nuts (M) as diagram shown. Tighten the nuts and bolts using wrench.

STEP 7

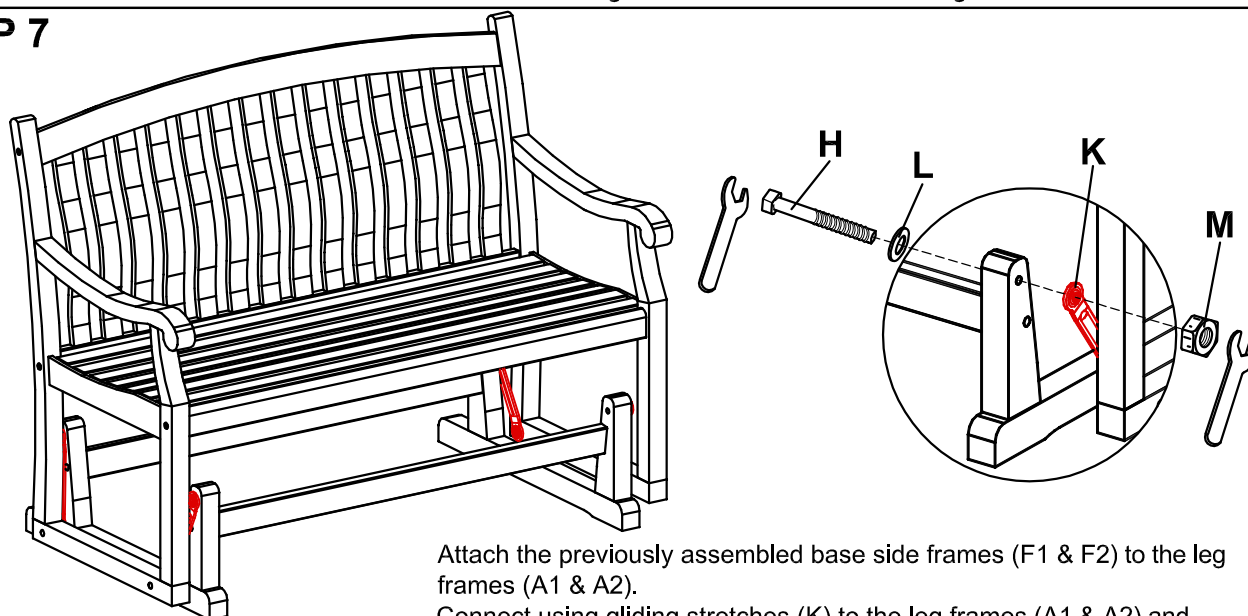

Attach the previously assembled base side frames (F1 & F2) to the leg frames (A1 & A2). Connect using gliding stretches (K) to the leg frames (A1 & A2) and secure using 2 1/2" bolts (H), washers (L) and nuts (M) as diagram shown. Tighten the nuts and bolts using wrench.

STEP 8

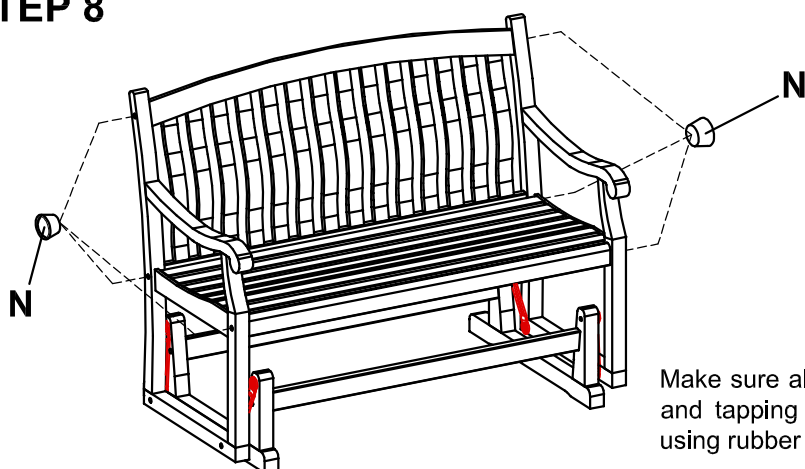

Make sure all parts and hardware are correctly connected and tapping in the wooden caps (N) to cover bolts head using rubber mallet.

NOTE :

Apply a drop oil (not supplied) on gliding stretches (K) for smoother operation if needed.

OK !

THE GLIDER IS NOW READY FOR USE.

MAINTENANCE

Due to teak wood's natural characteristics, wood color and grain variations may be present. This is a symbol of the originality of each unit and gives each finished piece a distinctive look and inherent charm.

Care Instruction :

Teak wood, when left bare and unsanded, will naturally fade to a silver-gray color. This silver-gray color transformation does not in any way affect the durability of the furniture.

To maintain the smooth finish and golden brown color of your teak furniture, you will need to sand the furniture regularly. To prolong the period of time needed between sanding, teak oil may also be applied.

If you choose to apply teak oil, apply every 6 months, or follow the teak oil container directions. Again, if you choose to maintain the smooth brown finish of your teak furniture, this method requires some regular maintenance, such as sanding and reapplication of teak oil. Teak oil, along with sanding, will help maintain the golden brown color.

Staining :

Please note, once you stain your teak, it will not return to the natural golden brown or weathered silver-gray color without sanding off the stain. Staining is intended to be permanent. If you choose to stain your furniture after it has turned silver-gray, you must first sand it before applying the stain.

Do not leave your teak wood furniture in puddles of water or on wet ground.

Cover your teak wood furniture during winter months or move into covered storage, if in wet climates.

The manufacturer supports protection of the world's forest resources and is diligent in sourcing legally harvested wood.

Thank you

The manufacturer

1 year Limited Warranty

The furniture is warranted to be free from defects in material and workmanship of the original product when purchased from one of our authorized dealers. If a product fails and is under the terms of our limited warranty, the item will be replaced, usually for a small fee. In the case of discontinued models, an item of similar quality and style will be offered to the customer.

- 1 year limited frame warranty
Frames are warranted to be free from defects in material and workmanship. Fading or discoloring caused by putting the product under sunlight or rain is not covered by this limited warranty. Damage to the frame due to improper assembly or exposure to water and sub-freezing temperatures is not covered. (Do NOT allow water to accumulate inside frame)
- Finish
The finish is warranted against peeling, cracking, or blistering for a period of 1 year, provided the unit has not been scratched or abraded. Scratches and chips resulting from normal wear and use are not covered. Peeling resulting from exposure to elements is not covered.

Warranty Exclusions : Furniture used for commercial, contractor or any non-residential purposes, clearance items, display models or items purchased “as is”, freight damage, furniture damaged by acts of nature, vandalism, fire, abuse, lack of proper care and maintenance, or improper assembly, straps and fabric against fading or discoloration from exposure to elements, oil spills, fluids or chemicals; glass against breakage; hardware against corrosion or rusting; buckling or splitting of tubing resulting from exposure to water and freezing temperatures. Also excluded: loss of use or time, inconvenience, money, travel, packaging or any other consequential or incidental damages. In no event shall the manufacturer's responsibility exceed the value of the replacement product.

Warranty is to the original purchaser when items are purchased from one of our authorized retailers and is not transferable. Should replacement of the warranty item be unavailable, the manufacturer reserves the right to substitute items of our choice that are of similar style and quality. For quality control purposes and verification, we need documents in support of your claim :

- Packing slip / Invoice
- Additional documents (Photos or video) of damaged/ defected/ missing part
- Item number and part code (can be found on assembly instruction)

Note :

To expedite the handling of your claim, please include the above mentioned documents as your claim **WILL NOT BE PROCESSED** until properly supported. **Retain all damaged goods until the claim is concluded.**

The terms of this warranty are subject to change without notice.