
HANGING EGG CHAIR WITH STAND

 
Read all assembly and care instructions carefully before using this product.

Save these instructions for future reference.

Assemble components on a soft, clean surface to avoid scratching/damaging the finish.

Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

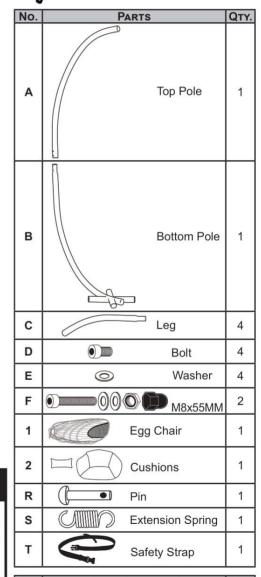





↑WARNING!

CHOKING HAZARD — This item contains small parts that can be swallowed by children. Keep children away during assembly.

A CAUTION /


This egg chair stand is not designed for use as a swing. Bouncing, swinging, or any other significant movements while in the chair may cause serious injury.

This stand must be on a level, stable surface. Make sure the safety strap is attached correctly, and all hardware is securely tightened before each use.


Weight Limit: 265 lbs.

ASSEMBLY

Assembly Tip: Ensure all parts align correctly before fully tightening hardware.

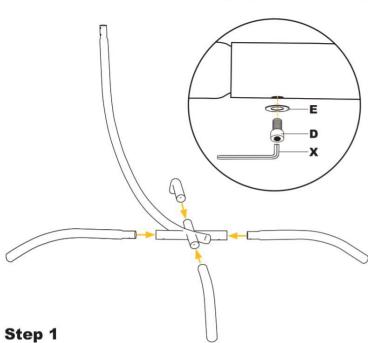


Slide Leg (C) into Bottom Pole (B). Align the holes on the underside of each piece. Hand-tighten Bolt (D) and Washer (E). Repeat until all legs are attached. Tighten all bolts using Hex Key (X).

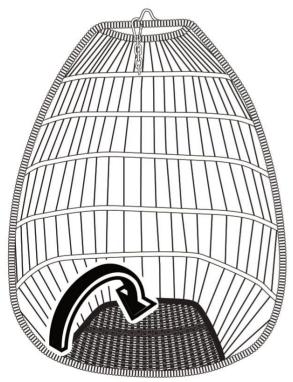


Step 3

Unfold Egg Chair (1) so the seat is flat and the frame bars extend towards the back of the seat.

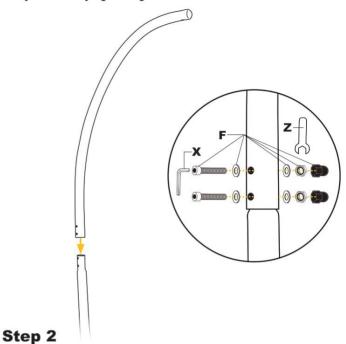


Slide Top Pole (A) onto Bottom Pole (B) and align the holes. Secure the poles by hand-tightening M8x55MM hardware (F) through the top holes. Repeat with the bottom holes. Fully tighten the hardware using Hex Key (X) and Spanner (Z). Place the hex nut cap over the lock nut.

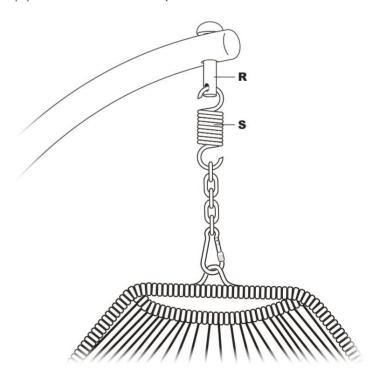


Step 4

Place Pin (R) into Top Pole (A). Insert Extension Spring (S) through the bottom of Pin (R). Hang the chain that is attached to the egg chair onto the extension spring.

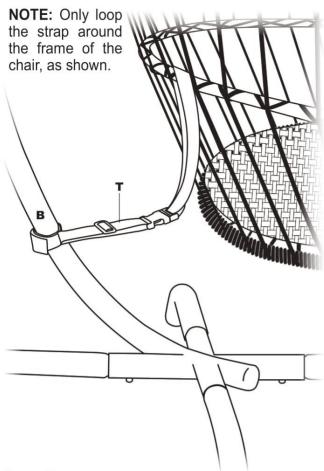

tighten the strap.

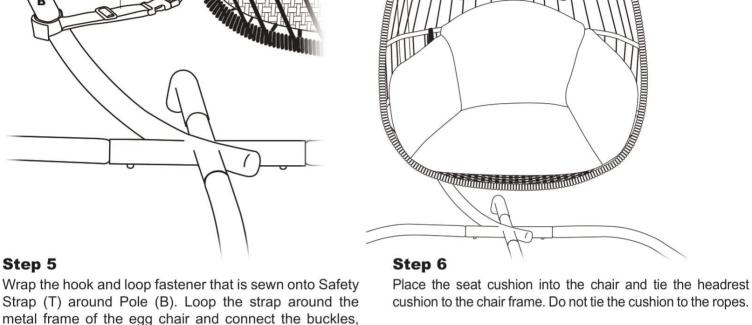



- SAFE USE: Do not use this chair for swinging, bouncing, jumping, twisting, or other excessive movements; doing so may cause serious injury, including, but not limited to, the stand tipping over. Do not use this chair without the safety strap; the strap helps keep the chair safely in place while getting in and out of the chair.
- CHILDREN: Supervise children at all times. Do not allow children to play on or sleep in any hanging chair. Chair not included.
- INSPECTION: Ensure the stand is assembled correctly. Check that all hardware is securely tightened before each use.
- CLEANING: Use a soft cloth, warm water and mild detergent to wipe down the stand if necessary. Dry the stand after cleaning to prevent rust.
- SCRATCHES: The powder coating on the stand is tough and durable but, even under normal use, some scratching is inevitable. To avoid rust, wipe these areas as needed to remove moisture.
- STORAGE: Store the stand indoors when not in use. Cool, dry locations are recommended to prevent damage and rust that may result from exposure to moisture.

TROUBLESHOOTING

- If the stand feels unstable, make sure it is on a level surface and the feet are correctly and evenly distributed.
- If the stand is making noise when in use, check to make sure all hardware is fully tightened.

A SAFETY STATEMENTS & WARNINGS **A**

- · Do not exceed the weight limit: 265 pounds
- This product is intended to be used by one person at a time.
- Sunnydaze Egg Chair with Stand is not a swing. Do not swing, bounce, jump, twist, or spin in the chair.
- Use care when getting in and out of the chair. When in use, the chair should remain inside the base area at all times. A diagram of the base area is shown on the right.
- The chair must be used with the provided safety strap attached to the chair and to the stand as shown in Step 5.
- Chair Stand must be used with all provided parts. Install all parts in accordance with the assembly instructions and inspect
 the stand before use.
- · Ensure all hardware is securely installed and tightened before each use.
- When securing the chair to the stand with the safety strap, only loop the strap around the frame of the chair, never the ropes.
- · Always inspect the stand and hardware for damage before each use.
- · Do not allow children to use this product without adult supervision.

Any modification to the product or failure to follow recommended care will void the product warranty.



Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

10/2020 Page 4 / 4

Base Area