 


TROUBLESHOOTING:

PLEASE CHECK THE FOLLOWING BEFORE LODGING A SERVICE REPORT

PROBLEM	REASON	SOLUTION
Fan not moving	<ol style="list-style-type: none">1) Main cables not connected.2) Check the line wires.	<ol style="list-style-type: none">1) Check mains & sub circuit breakers or fuse.2) Check the line wires connections to the fan & switch housing.
Fan noisy	<ol style="list-style-type: none">1) Housing screw loose.2) Wire nut connections rattles against each other.3) Canopy touches the ceiling.	<ol style="list-style-type: none">1) Tighten all screws.2) Separate & store neatly all the wire nut connections.3) Check & ensure the canopy is not touching or too close to the ceiling.
Remote control not working	<ol style="list-style-type: none">1) Remote & receiver pairing out.2) Battery not installed.3) Battery weak.	<ol style="list-style-type: none">1) Pairing required – follow page 12, clause 2.2) Install the remote control battery.3) Change new battery.

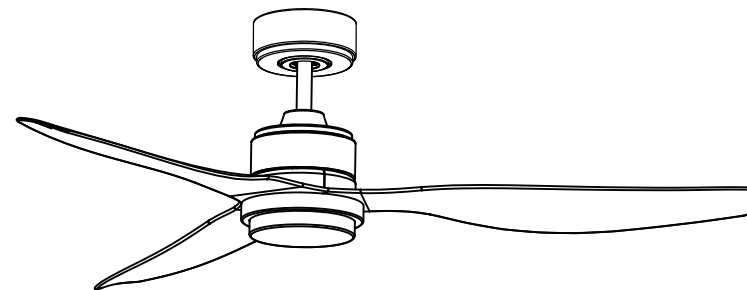

Instruction Manual

Attention:

This appliance is not intended for use by persons (including Children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

SAFETY PRECAUTION:

 
IMPORTANT: PLEASE READ BEFORE INSTALLATION

1. The installation work must be carried out by a qualified wiring installer.
2. Turn off the Electrical Main Switch at the circuit breaker fuse box.
3. Using power supply 120V~ / 60Hz.
4. **WARNING:** To Reduce The Risk Of Fire, Electric Shock, Or Personal Injury, Mount To Outlet Box Marked "Acceptable for Fan Support of 15.9 kg (35 lbs) or less" And Use Mounting Screws Provided With The Outlet Box. Most Outlet Boxes Commonly Used For The Support of Luminaires Are Not Acceptable For Fan Support And May Need To Be Replaced. Consult A Qualified Electrician If In Doubt.
5. **CAUTION:** To Reduce The Risk Of Injury To Persons, Install Fan So That The Blade Is At Least 3.05 Meters (10 Feet) Above The Floor.
6. Do not operate the reverse switch when the fan is still in motion mode. Wait till it stop completely before switching to reverse mode.
7. Do not insert any objects in the path of the blades.
8. When all electrical connection are done, store all wires neatly.
9. Make sure all screws and connections are tightly screwed and secured.
10. The supply wires live and neutral must be connected to a double pole switch having a contact of at least 3mm in all poles.
11. **WARNING:** To Reduce The Risk Of Personal Injury, Do Not Bend The Blade Brackets When Installing The Brackets, Balancing The Blades, Or Cleaning The Fan. Do Not Insert Foreign Objects In Between Rotating Fan Blades.
12. **WARNING -** To Reduce The Risk Of Electric Shock, This Fan Must Be Installed With An Isolating Wall Control/Switch.
13. **CAUTION:** To Reduce The Risk Of Electric Shock, Disconnect The Electrical Supply Circuit To The Fan Before Installing Light Kit.


ATTENTION: pour réduire le risque de blessures corporelles, installez le ventilateur de manière à ce que la lame se trouve à au moins 3,05 mètres (10 pieds) au-dessus du sol.

AVERTISSEMENT: pour réduire le risque d'incendie, de choc électrique ou de blessure, montez sur la boîte de sortie marquée « Acceptable pour un support de ventilateur de 15,9 kg (35 lb) ou moins » et utilisez les vis de montage fournies avec la boîte de sortie. La plupart des boîtiers de sortie couramment utilisés pour le support des luminaires ne sont pas acceptables pour le support des ventilateurs et peuvent devoir être remplacés. Consultez un électricien qualifié en cas de doute.

TOOLS THAT MAY BE USED DURING INSTALLATION :

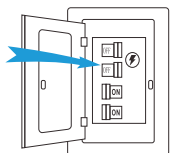


BEFORE YOU START SWITCH OFF

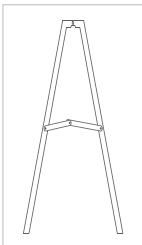 


Ladder



 
17/14spanner



Drill

 

Screwdriver

 

Wire Strippers

MAINTENANCE TIPS:

 
1. Because of the fan's natural movement, some connections may be loose. To check the support connections, brackets and blades attachment 2 times a year. Make sure they are all secured (It is not necessary to dismantle the entire fan from ceiling).
2. Clean your fan periodically to help maintain its appearance over the years. Do not use water when cleaning, use only a soft brush or lint-free cloth to avoid scratching the finish. The plating is coated with a lacquer to minimize the ratio of discoloration or tarnishing which would damage the motor or the wood or possibly cause an electric shock.
3. You can apply a light coat of furniture varnishing to the wood for additional protection and enhance its beauty. Surface scratched mark can be touch-up with a light coat of shoe polish.
4. There is no need to oil your fan. The motor is created with lubricated sealed ball bearings.
5. User are advised to contact the fan supplier to conduct regular examination of the fan suspension system at least once in every two years.

WARNING

MAKE SURE THE POWER IS SWITCH OFF AT THE ELECTRICAL PANEL BOX BEFORE YOU ATTEMPT TO ANY REPAIRS (REFER TO THIS SECTION), MAKING ELECTRICAL CONNECTIONS.

ASSUREZ-VOUS QUE L'ALIMENTATION EST COUPÉE AU NIVEAU DU BOÎTIER ÉLECTRIQUE AVANT DE TENTER DES RÉPARATIONS (VOIR CETTE SECTION), EN FAISANT DES CONNEXIONS ÉLECTRIQUES.

REMOTE CONTROL MANUAL (BUTTON FUNCTION):

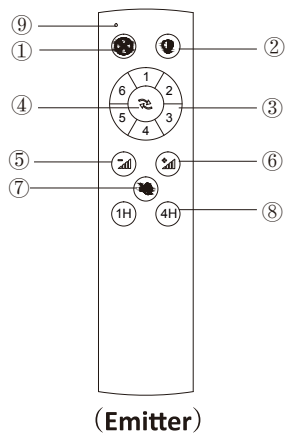


- ① Fan ON/OFF
- ② Light ON/OFF
- ③ Speed of the fan(1 Low speed~6 high speed)
- ④ Direction of the fan(Reverse switch)
- ⑤ **Brightness adjust** Turn down the Lightness
- ⑥ **Brightness adjust** Turn up the Lightness
- ⑦ **Turn ON/OFF the Beep sound of fan**
Press and hold the button for 2 seconds to cancel the 'Beep' sound
- ⑧ Timing control of the fan
- ⑨ LED indicated light

(Emitter)


IMPORTANT:

- Learning code matching mode is used between emitter and receiver. Turn "ON" the supply power within 30 second and press the emitter's "⊕" button for 5 seconds, it can load normally after hearing a long sound "bee", which means learning successfully and it can works normally.(PS: Learning mode is not accepted after turn "ON" the supply power for 30 seconds)
- When the emitter cannot control the receiver, please check the battery switch touching normally or not, correction of the positive and negative, full or empty of the power.
- When the emitter cannot control the receiver, please check is there any existence of similar remote controlled products nearby, then check whether they works, because remote controlled product with the same frequency will disturb each other.
- Low voltage of battery will affect the sensitivity of the emitter and the signal reception accordingly(the indicated light will be dimmed when the battery get low voltage).must replace if the battery is getting low voltage.
- Please take out the battery from the emitter when leaving unused for long time.
- The maximum load of lighting see the above"POWER PARAMETER LIST"PS: please connect the ground wire correctly, otherwise it may cause the light micro-light or flash.
- When installing the fan, the fan ceiling cover don't press the antenna(or other wire),it is easy to break down the wire and short-circuited.

 
HERE IS WHAT COMES IN YOUR BOX:

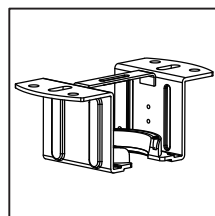


Hanger Bracket

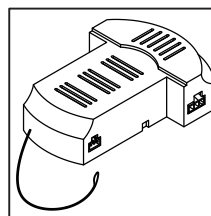 


Remote control receiver

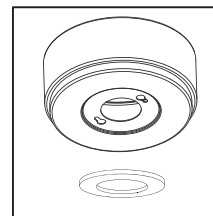 


Ceiling canopy & Canopy cover

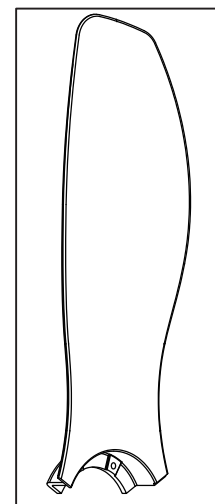 


Blades(3pcs)

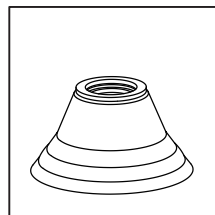 


Decorative Cover

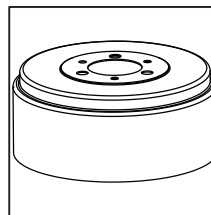 


Housing

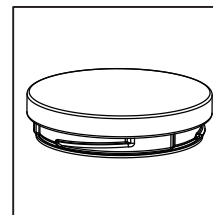 


Acrylic cover

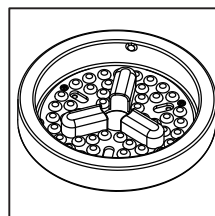 


Light

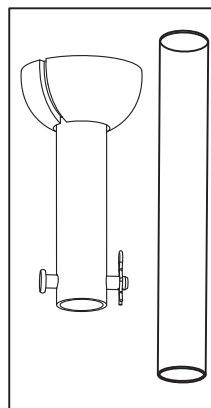 

 4"Downrod with Hanger ball
Cross pin
R pin
10" Downrod

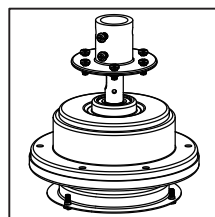

 Motor with
M5*10 truss head screw (Housing) 6PCS
M5*10 round head screw (downrod) 2PCS
5/32*12 truss head screw (Light plate) 3PCS

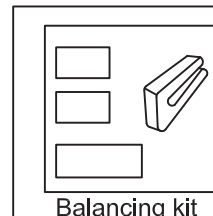

Balancing kit

P2 wire connectors 3pcs
P3H wire connectors 1pcs

 
1/4*50 expansion screws 2pcs

M5*25 wood tooth screw 4pcs

Plain washer 4pcs



1/4*15 Countersunk head screw 7pcs

Screws

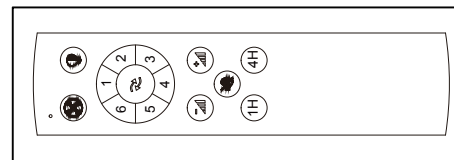

Remote control

  1. INSTALLATION OF HANGER BRACKET:

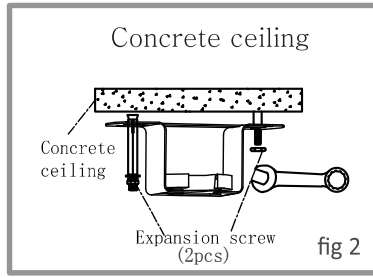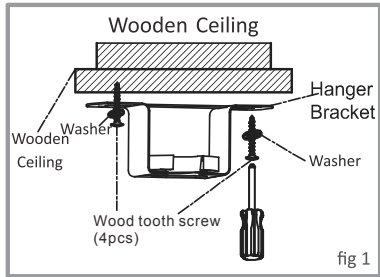

1) Wooden Ceiling:

 
To use Four Wood tooth screws to install the hanger bracket firmly. (fig 1)

2) Concrete Ceiling:

To use Two Expansion screws to install the hanger firmly. (fig 2)

2. INSTALLATION OF FAN BLADES:

* Please install the Blades, Housing and Downrod/Hanger ball first before hanging the ceiling fan *


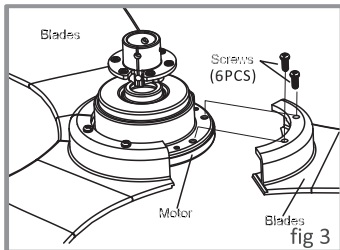


HARDWARE USED

1/4*15
Countersunk
blade screws
6pcs

Attach blades to the motor. Align the blades' holes to the motor's screw holes and tighten each screw securely.(fig 3)

  
3. INSTALLATION OF MOTOR HOUSING:

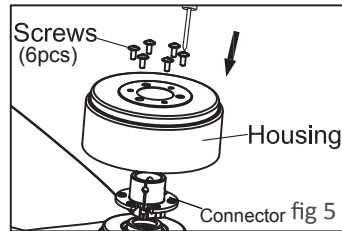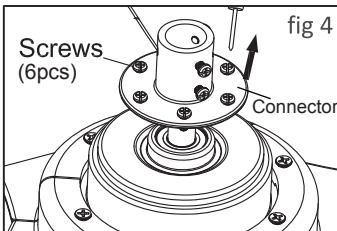

Remove 6 pcs screws from the connector(fig 4). Align the housing's holes to the connector's screw holes and fasten all the 6 screws firmly.(fig 5)

REMOTE CONTROL MANUAL :

 1. This manual is to use for the controller of ceiling fan and lightkit.
2. Disconnect power supply before wiring.
3. Install the Receiver inside the canopy of ceiling fan to ensure proper protection.

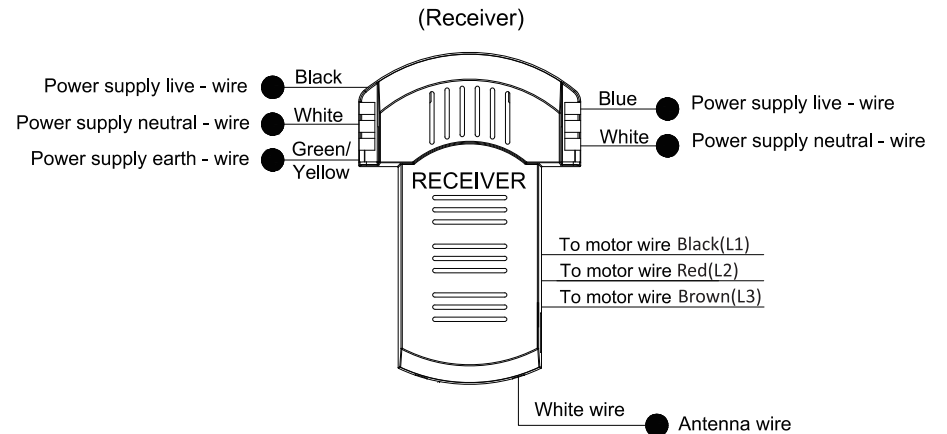


Adopt RF wireless digit emission technique, biunique controlled, coincident code rate is less than one millionth.

Receiver can be controlled by any angles of the Emitter in prescriptive space and unrestricted by direction.


With the memory features, the controller can save the status of the fan and light while the supply power OFF and resume to the last status after the power ON.

 7. INSTALLATION OF CANOPY:

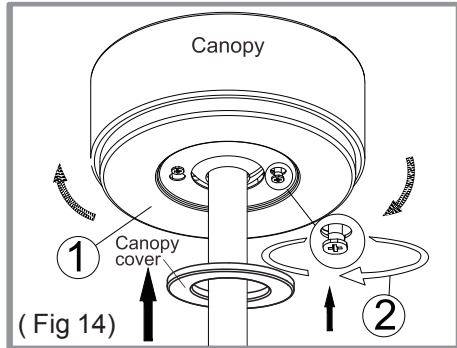

- 1) After done up the wiring, attach the canopy to the hanger bracket by pushing up and twist to locate screws in the two key holes.(fig 14)
- 2) Tighten the two screws firmly.
- 3) Attach the canopy cover with magnet to the canopy .(fig 14)


 
8. INSTALLATION OF LIGHTKIT:

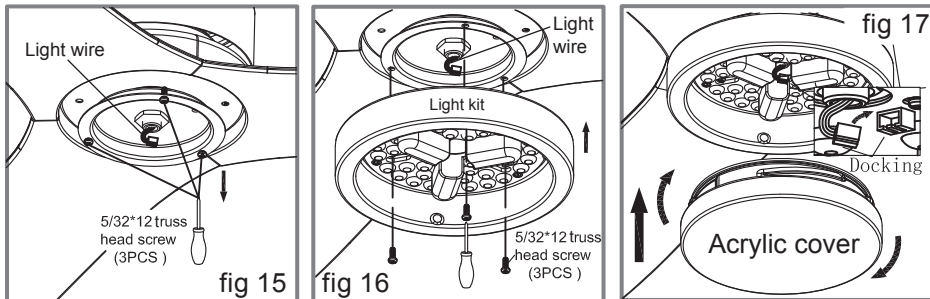

- 1) Remove three screw from the motor round piece. (fig 15)
- 2) Thread the light wire through the light kit.Attach the lightkit to the fan,and tighten all the three screws firmly. (fig 16)
- 3) Direct plug in the wire to the lightkit docking (connector). (fig 17)
- 4) Attach the acrylic cover(fig 17) to the lightkit and twist clockwise until it's secured tightly.



4. INSTALLATION OF DOWNROD / HANGER BALL:

  1. Remove the screw and pin from the hanger ball;Remove the "R" pin and and cross pin from the downrod. (fig 6)

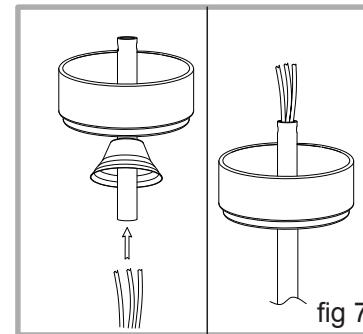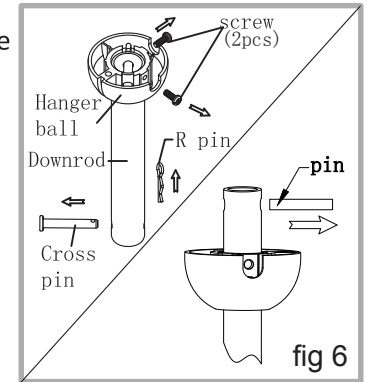



2. Choose suitable downrod, Put the Canopy, Canopy cover and decorative cover into the downrod, then thread the wire through the downrod. (fig 7)

  3. Install back the screws and pin to the hanger ball , ensure to fasten the screws.(fig 8)

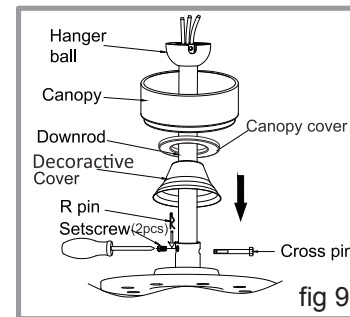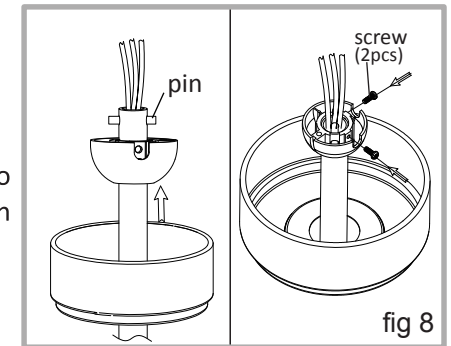

4. Loosen the two setscrews in the downrod support(NOTE: The two setscrews above are used to secure the downrod. The two screws below are used to secure the central spindle, please do not loosen), Insert the downrod into the connector. Install back the cross pin and secured with the "R" pin. (Note: The wire will block the cross pin slightly) Fasten back the two setscrews .(fig 9)
The "R" pin must be properly installed to prevent the cross pin from working loose.

  5. HANGING OF CEILING FAN:

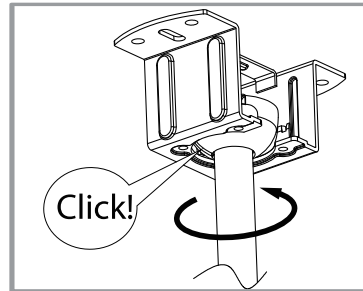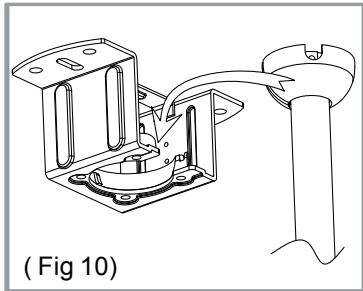

Lift the assembled fan onto the hanger bracket. Ensure the concave groove of the hanger ball is positioned on the hanger lug of the hanger bracket.


6. WIRING OF CEILING FAN :


Total six colors of wires connected from the top of the motor:

- * White – neutral wire for lightkit
- * Blue – live wire for lightkit
- * Black(L1), Red(L2), Brown(L3) – live wire for fan
- * Green – ground wire


The installation is to be in accordance with the National Electrical Code ANSI/NFPA 70 and local codes.

HARDWARE USED


	wire connectors	
	P2	2 pcs
	P3H	1 pcs

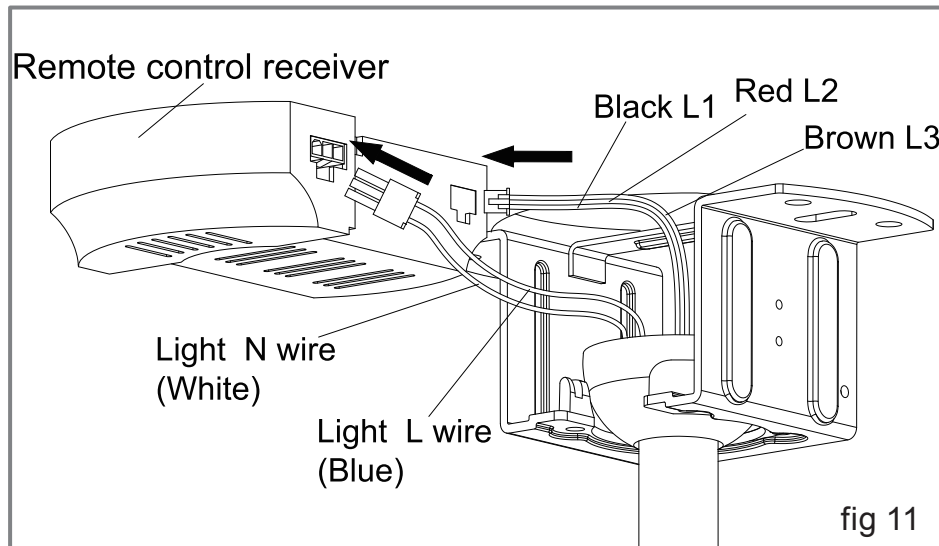 

 - 1) Plug the connector from the motor into the remote control receiver: big Connector to the big Socket & small Connector to the small Socket

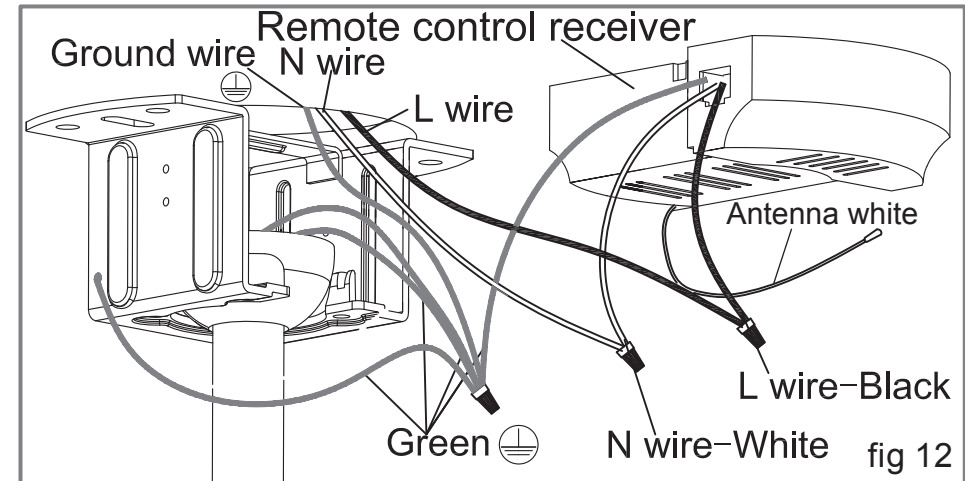

 - 2) Connect wire and remote control receiver wires to AC wires (Household supply):
Green to Ground,
White to Neutral,
Black to Live.

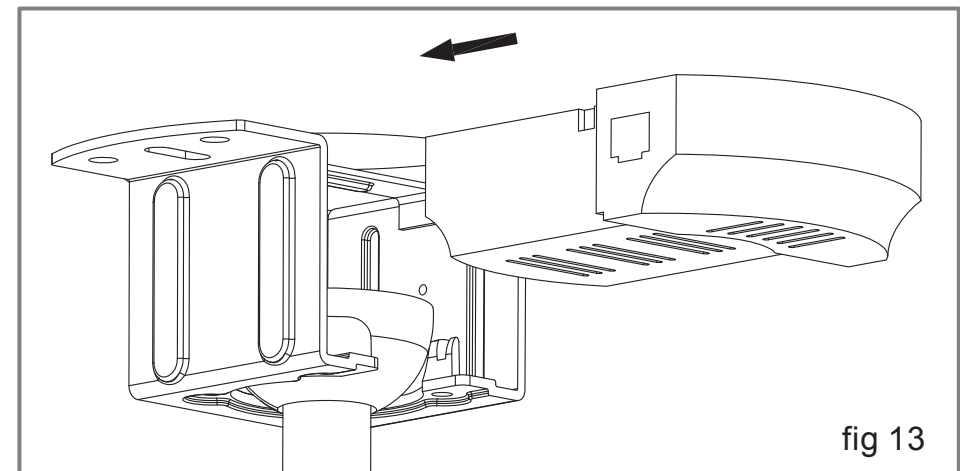

- 3) Tidy up the wire and slide the receiver into the hanger bracket.