



PREPARATION

Before beginning the assembly of the product, make sure all parts are present. Compare the parts with the package contents list and hardware contents list. If any parts are missing or damaged, do not attempt to assemble the product. Tool required for assembly (included): Allen Key.

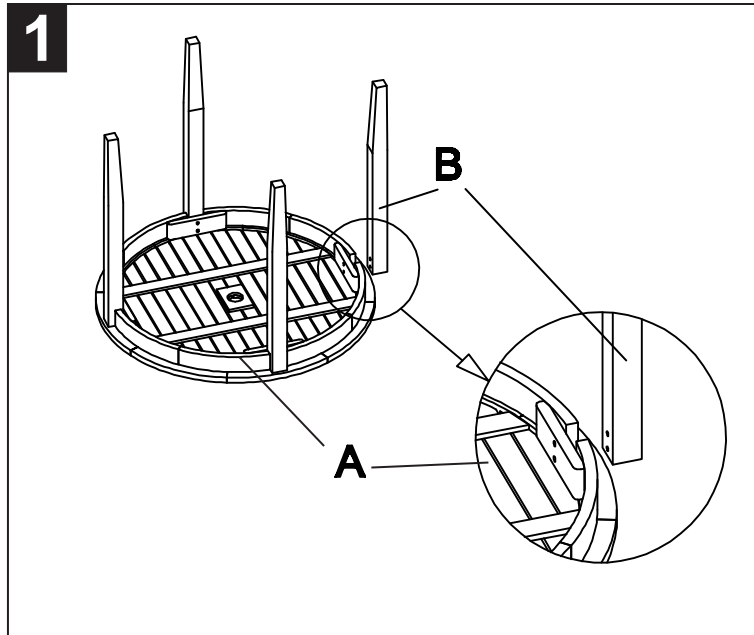

Step1: attach the legs (B) to the table top (A) as shown on picture.

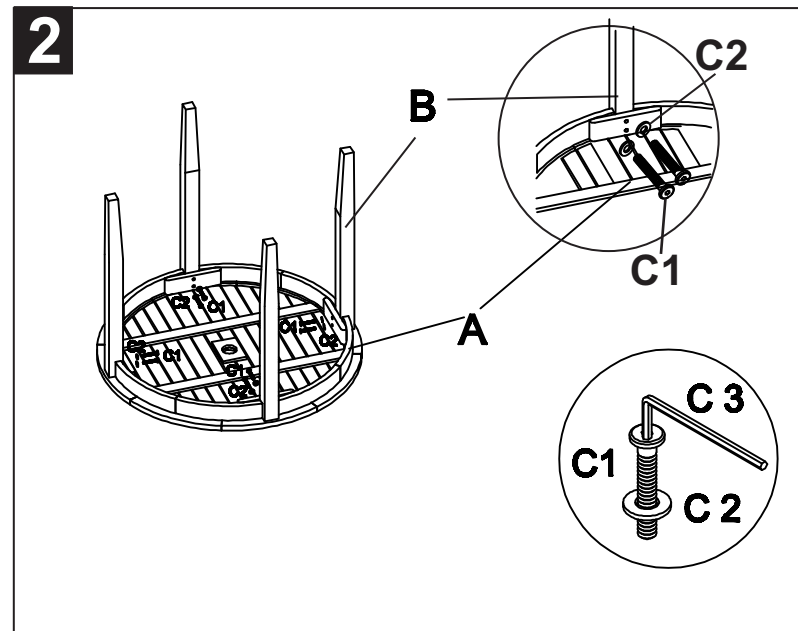

Step 2: using the allen bolt (C1) and washer (C2) to tighten all legs into the table top by using the Allen key(C3) as shown on the picture.


 


 
CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when it is not in use. Dust regularly with small brush or vacuum. Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

NOTICE

Please make sure that you have all parts indicated before you begin assembly of this item.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Table top		1 X
B	Leg		4 X
C 1	Allen bolt	 M8x50	8 X
C 2	Washer		8 X
C 3	Allen Key		1 X

Product Dimension: 35.43"W x 35.43"D x 29.53"H

Weight capacity : 40 lbs.

Warning : Do not stand on the table

Warning : Do not torque bolts / screws

