


# CHAISE ASSEMBLY

## COMPONENTS

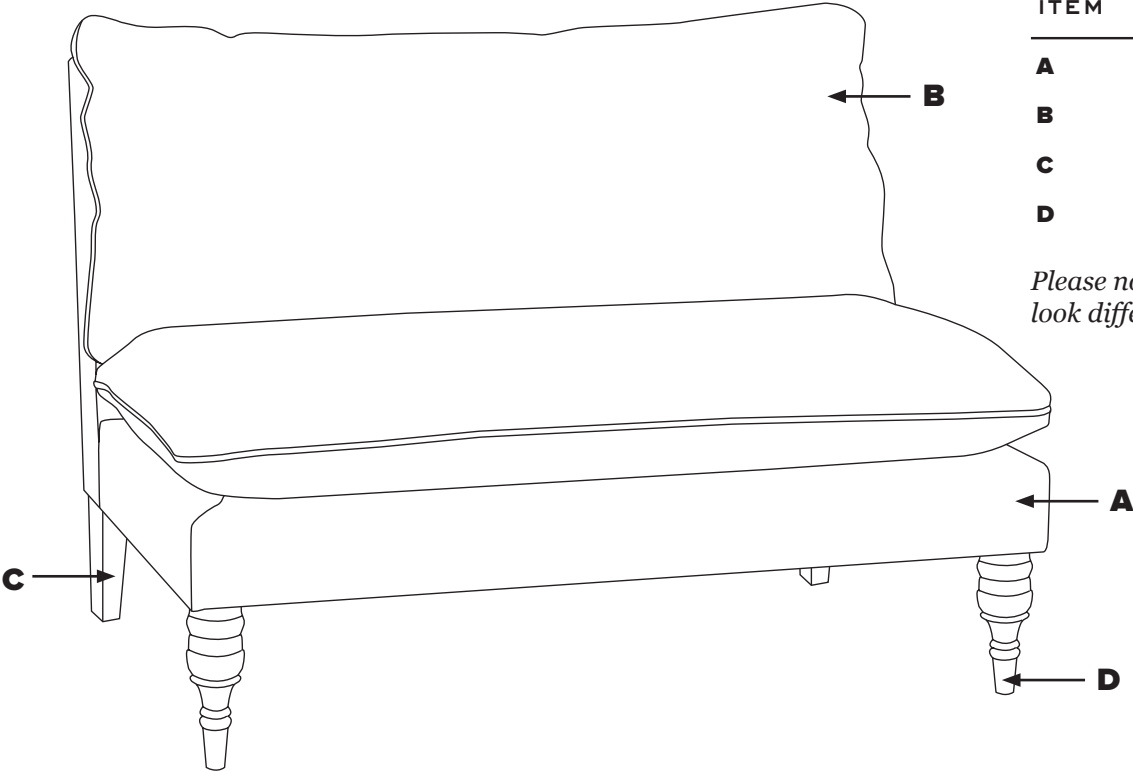

ITEM	DESCRIPTION	QTY
<b>A</b>	Seat	1
<b>B</b>	Back	1
<b>C</b>	Back Legs	2
<b>D</b>	Front Legs	2

*Please note: actual product may look different than illustration.*

## HARDWARE



**(H1)** x 11  
1 1/4" flat washer



**(H2)** x 7  
5/16" nut

*Please note: you will need a wrench to complete this assembly.*


## LIMITED WARRANTY

We guarantee our upholstered furniture against defects in construction for a period of one (1) year. When a structural defect is brought to our attention, we will repair or replace it at our option at no charge to the customer (includes parts and labor, not transportation costs). Fabric wearability for upholstered furniture is not covered by the warranty. Vacuum for regular cleaning.

PLEASE DISPOSE OF PLASTIC BAG(S) AND CARTON(S) RESPONSIBLY.

# CHAISE ASSEMBLY

## STEP 1

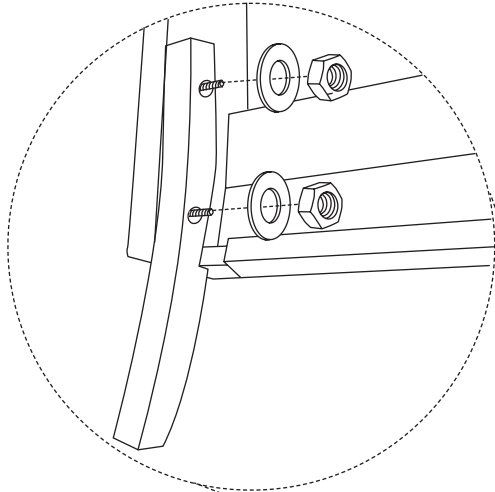


### 1.1


Place (B) back face down on a flat surface and peel back velcro flap.

Insert (C) back legs onto bolts and attach using (H1) washers and (H2) nuts. Make sure notch of (C) back legs are flush with the bottom of (B) back. Tighten with wrench.

Replace velcro flap.

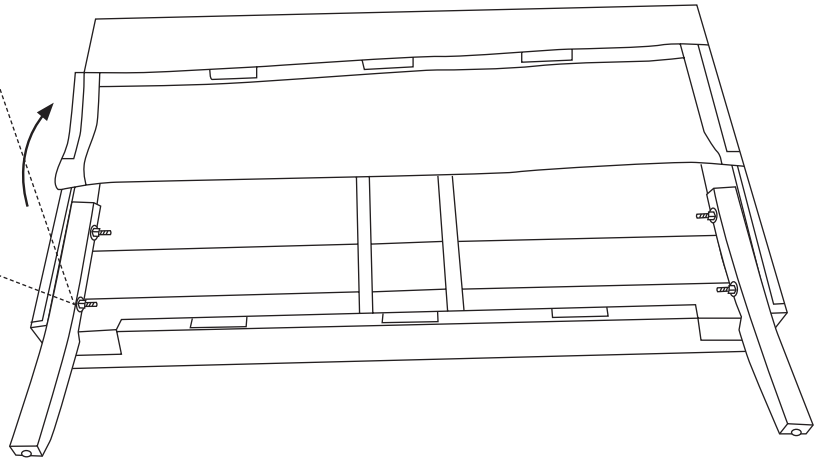

## STEP 2

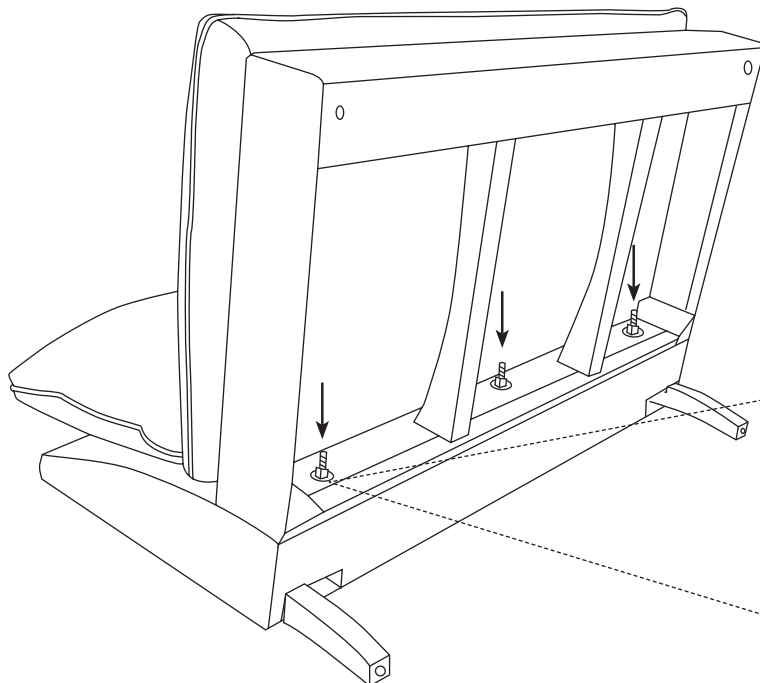


### 2.1

Turn (B) back over. Fit (A) seat onto bolts of (B) back, aligning sides and bottoms of both pieces.

### 2.2

Attach (A) seat to (B) back using (H1) washers and (H2) nuts.

Tighten with wrench.

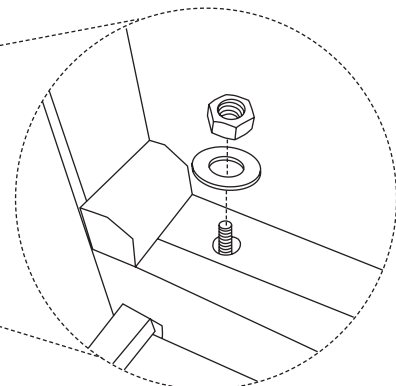

# CHAISE ASSEMBLY

## STEP 3

---

### 3.1

Remove plastic caps from (D) front legs, and attach to (A) seat using one (H1) washer per leg.

Once legs are secure, turn the chaise upright to check if level.

If the item is not level, unscrew the shortest leg and add an additional (H1) washer.

Repeat as needed.

*Please note: you may have extra (H1) washers depending on how many you use to level the chaise.*

