 
 







 
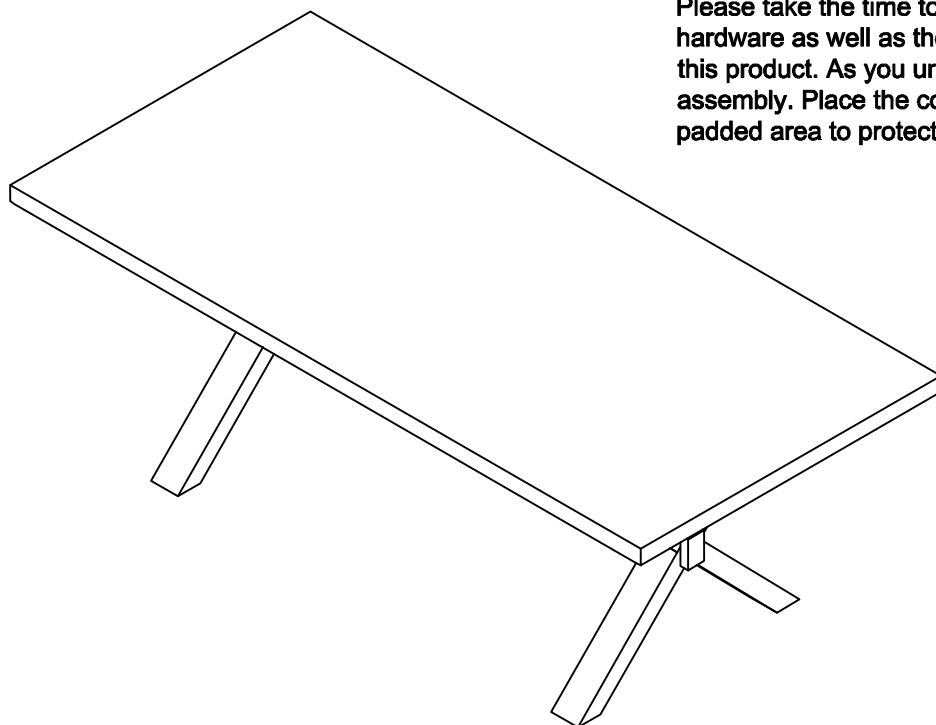 


ASSEMBLY INSTRUCTION

X-BASE ZINC DINING TABLE


A Zinc Table Top	B Leg Frame	C Cross Bar	D Wood Block
			
1PC	2PCS	1PC	2PCS
E Bolt-Large Ø1/4"X3-1/2"	F Bolt-Small Ø"1/4X1-1/4"	G Lock Washer Ø1/4"	H Flat Washer Ø1/4"X13mm
			
2PCS	8PCS	10PCS	10PCS
I Allen Key 4mm	J Wooden Dowel Ø8X30mm		
			
1PC	4PCS		

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly. Place the contents on a carpeted or padded area to protect them from damage.




1

 
Lock leg frame(B) on the zinc table top(A) by using allen key(I), bolt-small(F), lock washer(G) and flat washer(H).

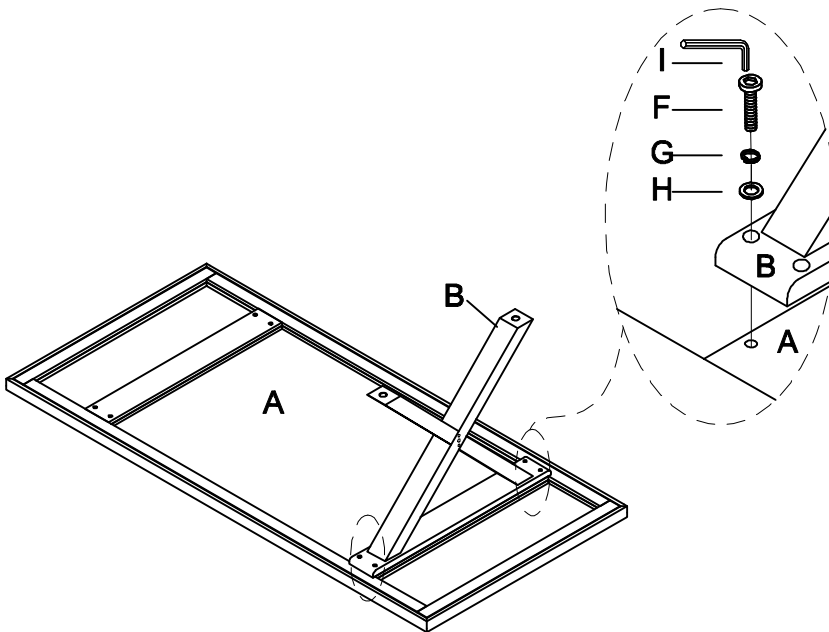**2**

 
Lock a side of cross bar(C) to leg frame(B) by using flat washer(H), lock washer(G), bolt-large(E), allen key(I) and wooden dowel(J).

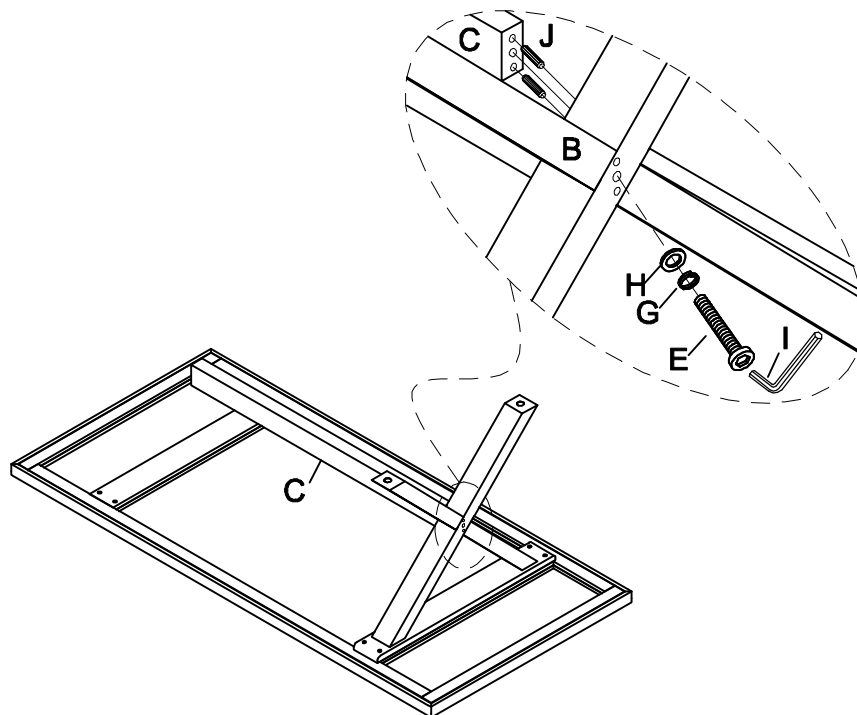

 -
- 3** Repeat step 1 and step 2 . Put wood block(D) onto both sides of leg frame(B).

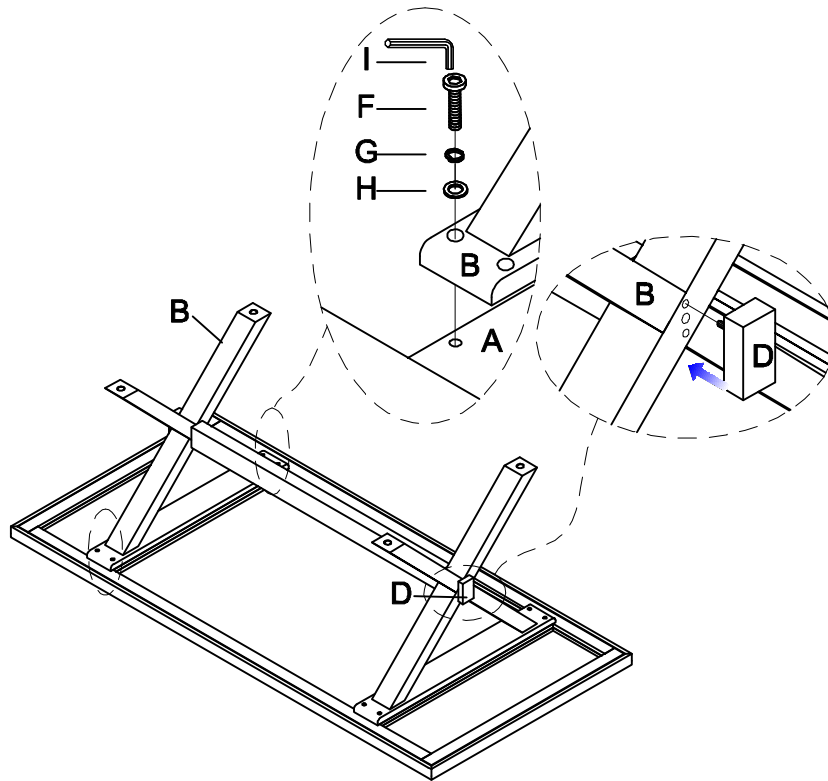

-
- 4** Completed.

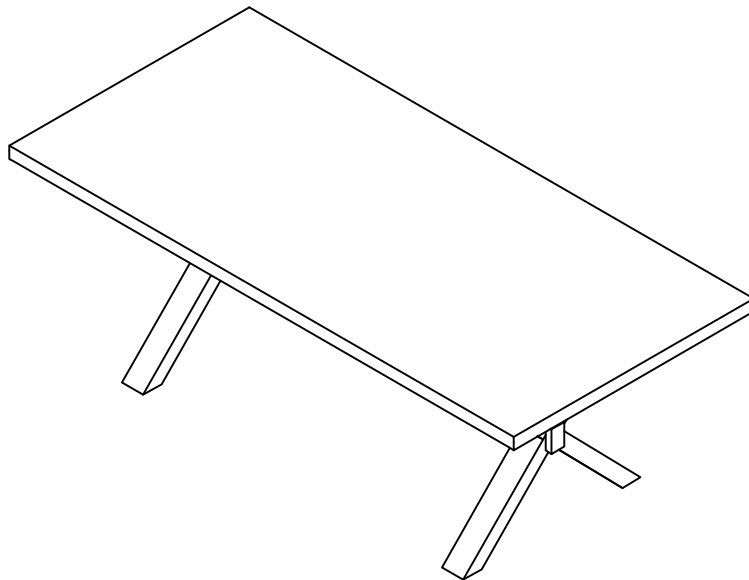 
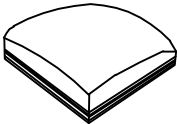 
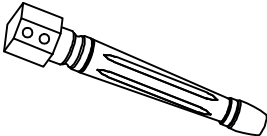 









Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTION

DINING CHAIR


A Chair Back	B Seat	C Front Leg	D Bolt 5/16"X1-3/4"
			
1 PC	1 PC	2 PCS	1 PC
E Bolt 5/16"X2-1/2"	F Bolt 5/16"X3"	G Flat Washer 5/16"	H Lock Washer 5/16"
			
4 PCS	4 PCS	9 PCS	9 PCS
I Allen Wrench 5/16"			
			
1 PC			

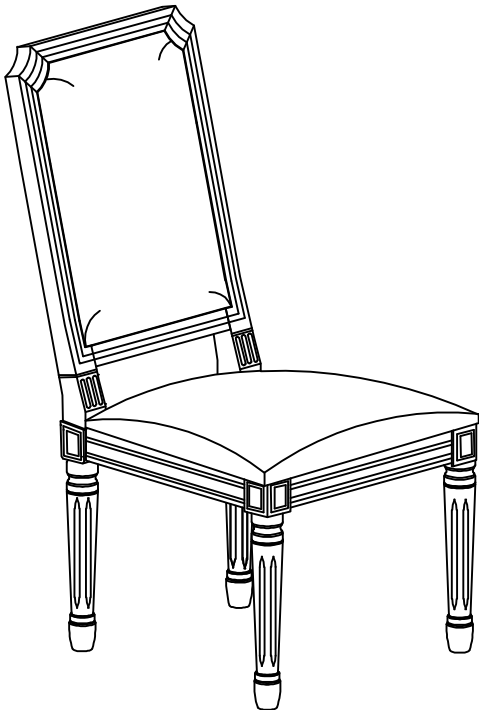 


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- 1** Put the seat(B) on a smooth flat surface, attached one front leg(C) to the seat(B) use bolt(E), lock washer(H) and flat washer(G) on both of holes of seat(B). Turn the allen wrench(I) in bolt(E). But not too tight.

 Take the Allen Wrench, and turn the bolts until the legs are secure.
DO NOT TIGHTEN COMPLETELY.
Stop when you feel you are adding force to tighten the bolt.

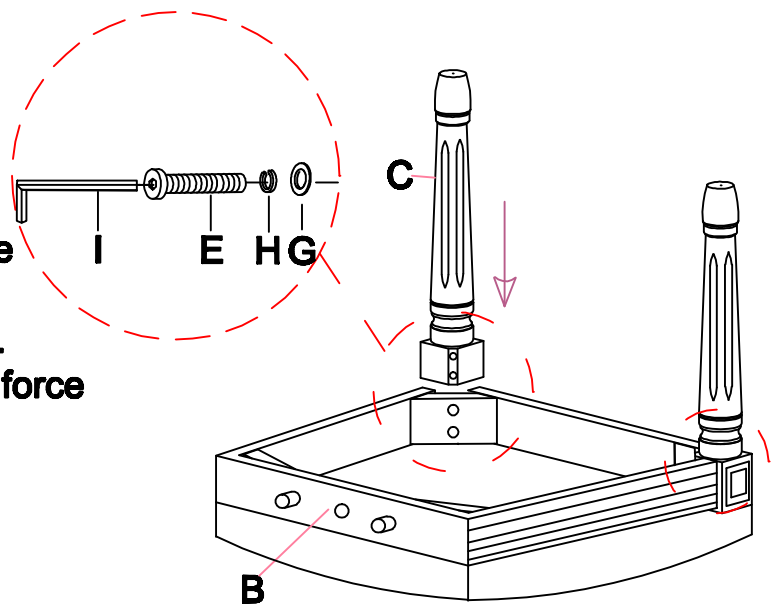

 - 2** Put chair back(A) on a smooth flat surface, attached the seat(B) to the chair back(A) use the bolt(F), lock washer(H), flat washer(G) in both of holes of seat(B) and chair back(A), turn the allen wrench(I) in bolt(F). But not too tight.

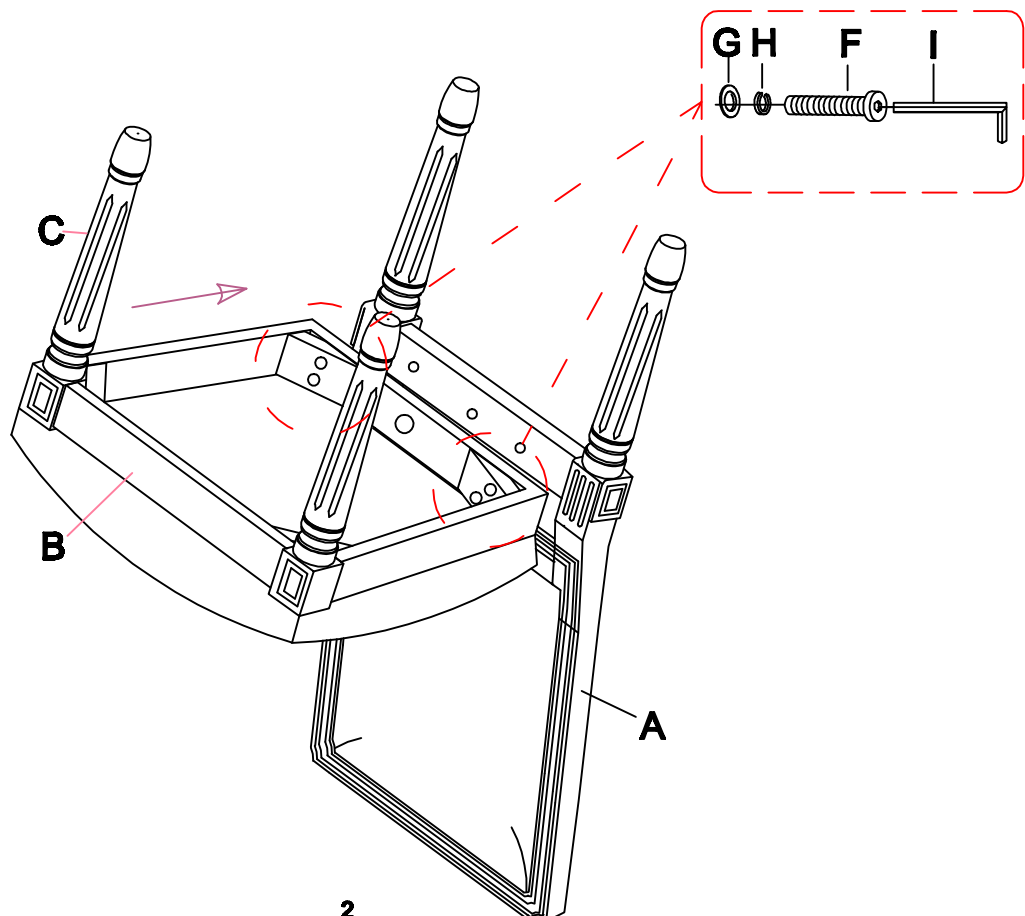


3 Use the bolt(D), lock washer(H), flat washer(G) in both of holes of seat(B) and chair back(A) turn the allen wrench(I) to tighten the bolt(D).

Stand chair up on an even surface and check that it is balanced.

If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

Helpful Tip:

 -Instead of applying downward pressure while reaching under to tighten bolts, have someone sit in the chair while you tighten the bolts.

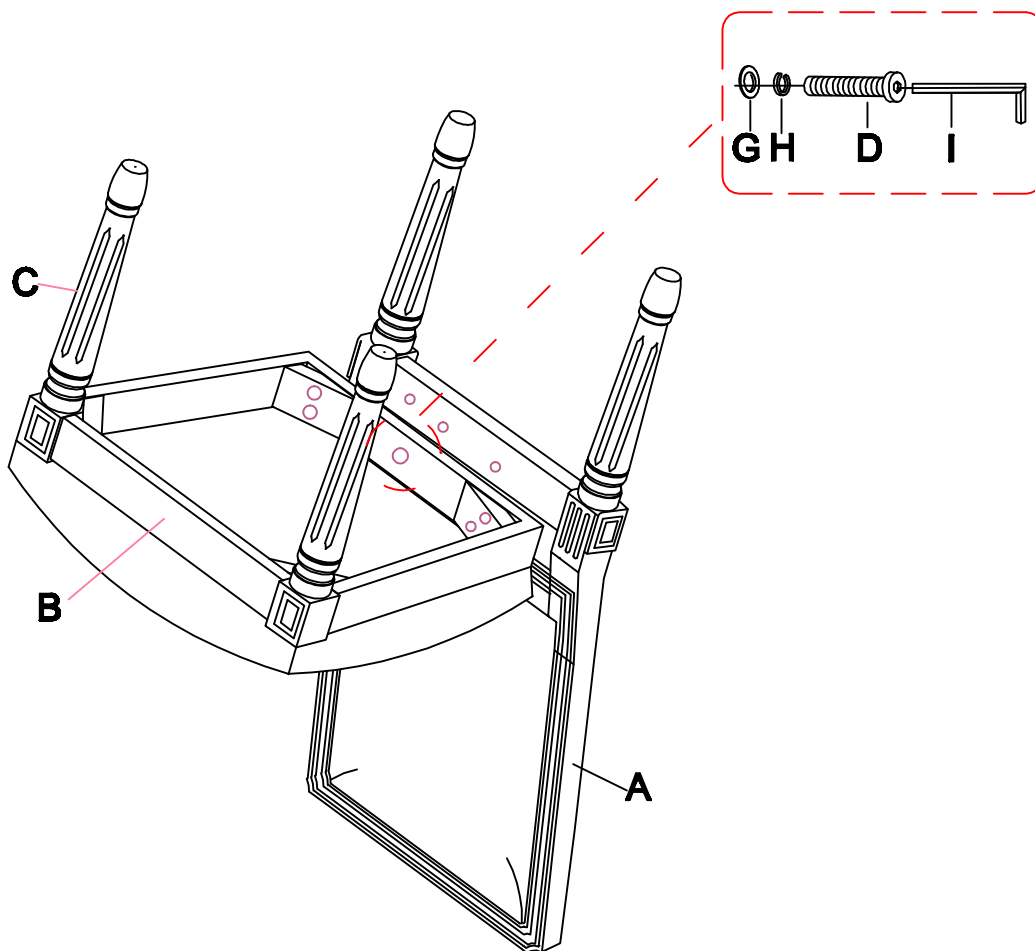

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.