

 











Thank you for choosing us. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control.

WOODEN ADIRONDACK CHAIR WITH ADJUSTABLE BACKREST


Read all assembly and care instructions carefully before using this product. Save this manual for future reference.
Assemble components on a soft, clean surface to avoid scratching or damaging the finish.




Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

No.	PARTS	QTY.
A	 Seat	1
B	 Backrest	1
C	 Right Leg	1
D	 Left Leg	1
E	 Right Armrest	1
F	 Left Armrest	1
G	 Front Support Beam	1
H	 Rear Arm Support	2
I	 Adjustment Support	1
J	 50mm Bolt Set	18
K	 50mm Bolt Set with Barrel Nut	4
L	 Screw	6

 
TOOLS REQUIRED (NOT INCLUDED)



Phillips Screwdriver

 

Regular Screwdriver

 

250
pounds
113 kg

⚠ WARNING ⚠


CHOKING HAZARD — This item contains small parts that can be swallowed by children. Keep children away during assembly.

ASSEMBLY

Keep all nuts and bolts loose during assembly.


STEP 1

A: 1
C: 1
D: 1
G: 1
J: 6
L: 4

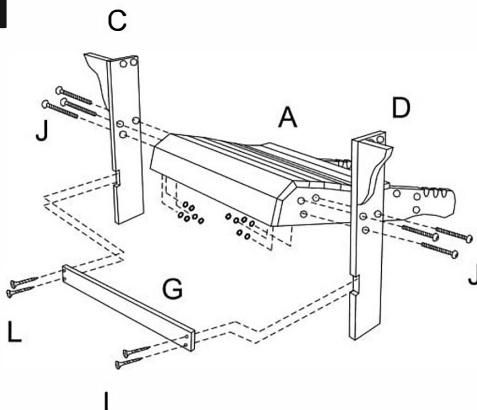

STEP 2


H: 2
J: 4

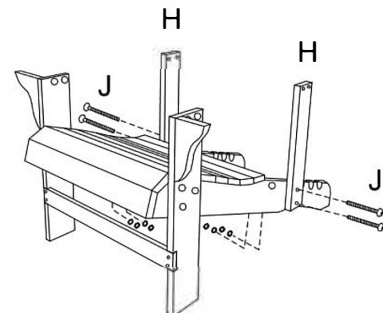

STEP 3

E: 1
F: 1
J: 8
L: 2


The block on the back of the armrest must be on the inside of the rear arm support.

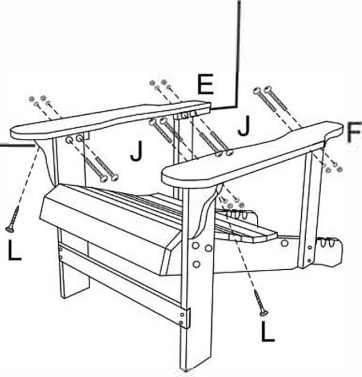

The block on the front of the armrest must be on the outside of the rear arm support.

STEP 4


B: 1
I: 1
K: 2

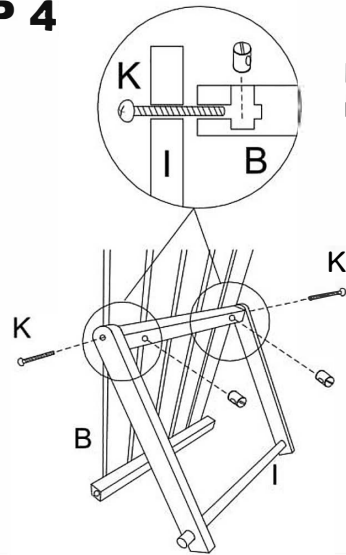


Do not over-tighten as it may crack the wood.

STEP 5

K: 2

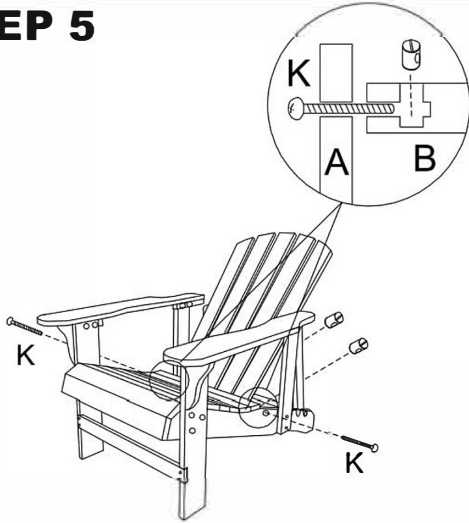

STEP 6

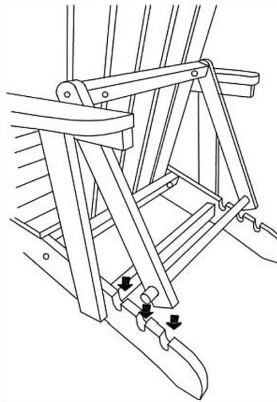

Tighten all nuts and bolts; do not over-tighten as it may damage the finish and crack the wood.

Adjust the angle of the backrest via Adjustment Support (I).

CARE & MAINTENANCE

SAFE USE: For residential use only. Only use on a flat, level surface. Do not exceed the weight capacity.

INSPECT: Periodically check hardware and tighten as necessary.

CLEAN: Wipe surfaces with mild soap, water and a soft, non-abrasive cloth. Rinse with clean water, ensuring all soap residue has been removed.

WINTER CARE & STORAGE: Move to an indoor location that is cool and dry. Cover while in storage to help prevent dust build-up.

Any modification to the product or failure to follow recommended care will void the product warranty.

! WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.