 
 
 
 
 



ASSEMBLY INSTRUCTION

WINGBACK PARSON CHAIR WITH COTTON FABRIC COVER


A Chair	B Cushion	C Pillow	D Front Leg	E Left Back Leg
				
1pc	1pc	1pc	2pcs	1pc
F Right Back Leg	G Lock Washer	H Flat Washer	I Bolt 5/16"x2-1/2"	J Allen Wrench
				
1pc	8pcs	8pcs	8pcs	1pc

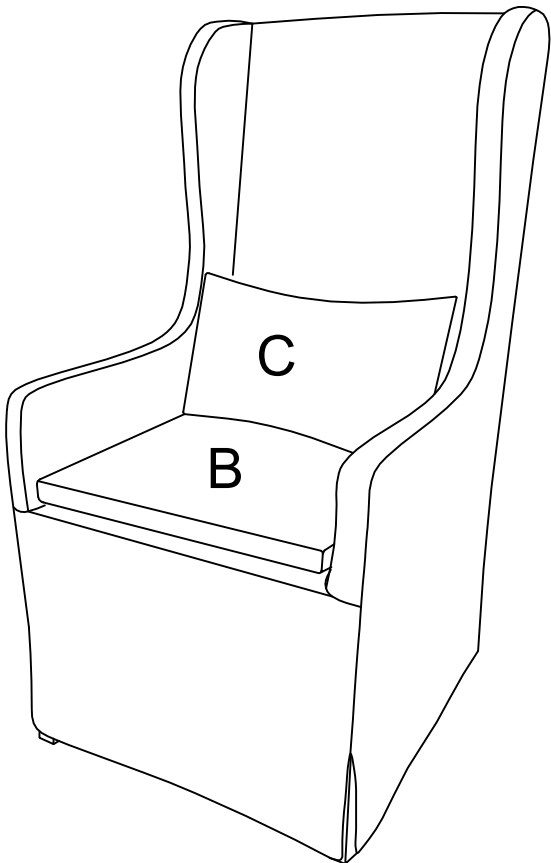

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

Put the chair (A) on a smooth flat surface, attached leg (D) to the chair (A) use bolt (I), lock washer (G) and flat washer (H) on both of hole of chair (A). Turn the allen wrench (J) in bolt (I).

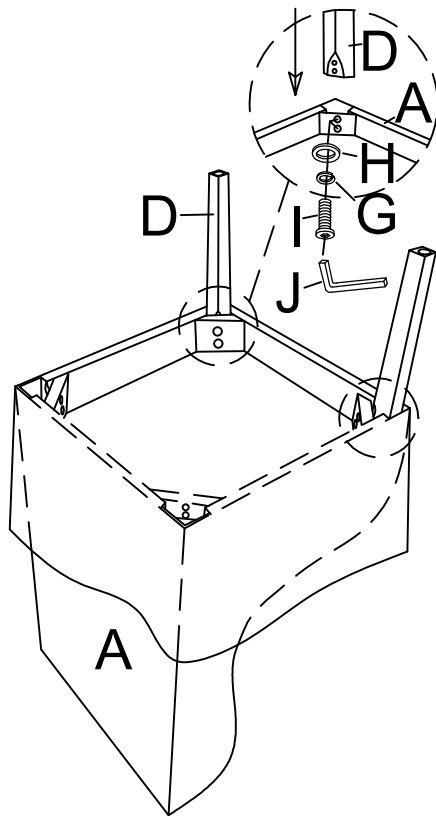

Take the Allen Wrench, and turn the bolts until the legs are secure.
DO NOT TIGHTEN COMPLETELY.
Stop when you feel you are adding force to tighten the bolt.


2

Put the chair (A) on a smooth flat surface, attached leg (E&F) to the chair (A) use bolt (I), lock washer (G) and flat washer (H) on both of hole of chair (A). Turn the allen wrench (J) in bolt (I).

Stand chair up on an even surface and check that it is balanced.
If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts.
If balanced, apply downward pressure evenly in the center and tighten all bolts.
Do not over-tighten beyond hole depth.

Helpful Tip:

-Instead of applying downward pressure while reaching under to tighten bolts, have someone sit in the chair while you tighten the bolts.

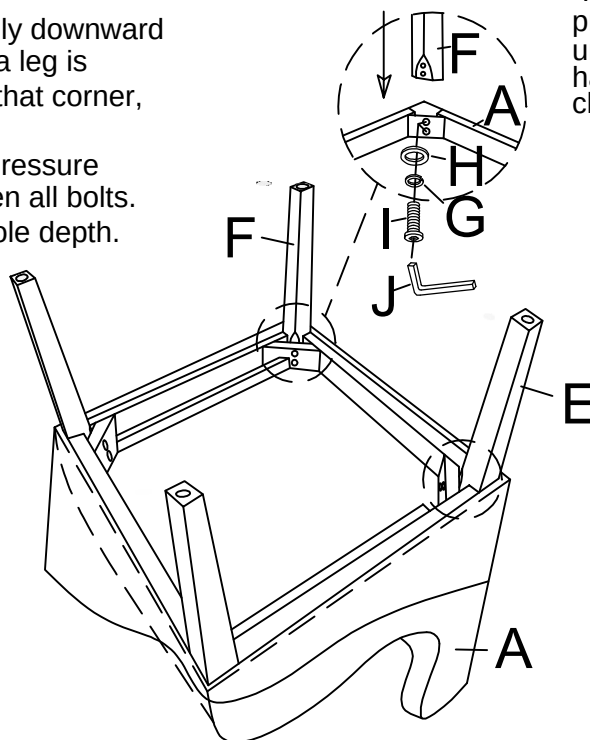

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.