Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

- 2. Do not OVER TIGHTEN the nut or bolt to avoid causing damages to the thread.
- 3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

ITEM	DESCRIPTION	QTY
Α	BACK	1pc
В	SEAT	1pc
С	ARM	2pcs
D	FRONT RAIL	1pc

PART LIST					
ITEM	DESCRIPTION		QTY		
1	JCBB Bolt M8 x 60mm		8pcs		
2	JCBB Bolt M8 x 80mm	••••••••••••••••••••••••••••••••••••••	2pcs		
3	M8 Flat Washer	0	4pcs		
4	M8 Spring Washer	0	4pcs		
5	Wood Dowel M10 x 40mm		2pcs		
6	M8 Bran Nut	8	2pcs		
7	Wood Button Dia 18.5mm	0	6pcs		
8	M5 Allen Key (Ball Shape)	/	1pc		
9	Wood Screw M4 x 50mm		2pcs		



