 










WICKER CHAISE LOUNGE

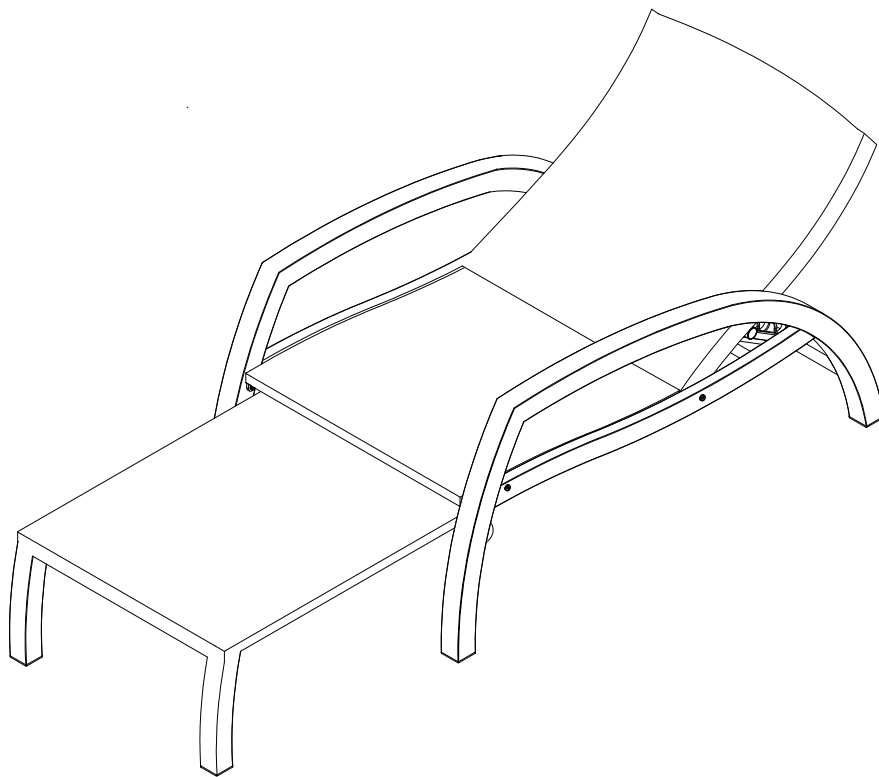



         

 

 

 

Read the instructions before use of this product.



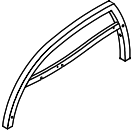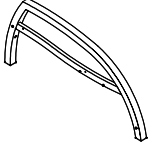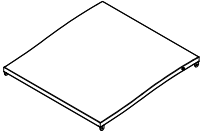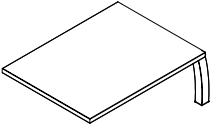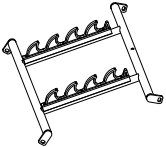




Please keep this instruction manual for future reference.

PARTS & HARDWARE LIST

| PART | FIGURE | DESCRIPTION | QTY |
|------|---|------------------|-----|
| A |  | Back Panel | 1PC |
| B |  | Right Arm Panel | 1PC |
| C |  | Left Arm Panel | 1PC |
| D |  | Seat Panel 1 | 1PC |
| E |  | Seat Panel 2 | 1PC |
| F |  | Center Connector | 1PC |
| G |  | Arm Connector | 1PC |
| H |  | Adjustment Bar | 1PC |

PARTS & HARDWARE LIST

| PART | FIGURE | DESCRIPTION | QTY |
|------|---|----------------|-------|
| J |  | Bolt M6*50 | 6PCS |
| L |  | Bolt M6*35 | 3PCS |
| M |  | Bolt M6*25 | 10PCS |
| N |  | Washer | 19PCS |
| O |  | Nut | 2PCS |
| P |  | Allen Key | 1PC |
| Q |  | Wrench | 1PC |
| R |  | Bolt Cap | 19PCS |
| S |  | Nut Cap | 2PCS |
| T |  | Plastic Washer | 2PCS |
 
| EXTRA | | | |
|-------|---|-------------|------|
| PART | FIGURE | DESCRIPTION | QTY |
| J |  | Bolt M6*50 | 1PC |
| L |  | Bolt M6*35 | 1PC |
| M |  | Bolt M6*25 | 2PCS |
| N |  | Washer | 1PC |
| O |  | Nut | 1PC |
| R |  | Bolt Cap | 1PC |
| S |  | Nut Cap | 1PC |

ATTENTION:

Keep children away during assembly. This item contains small parts that can be dangerous for children. Children should always be under direct adult supervision while using this product.

Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.

 
Carefully remove the contents from the package. If any parts are missing, do not attempt to use the product until they have been obtained.

Make sure that each bolt needed for all steps matches the corresponding figure to ensure proper assembly.

STEP 1

Lay left arm panel(C) down on a soft flat surface, such as carpet, as shown below. Attach the seat panel 1(D) to left arm panel(C) using bolts M6*25(M) and washers(N).


Please do not fully tighten bolts until unit is fully assembled.

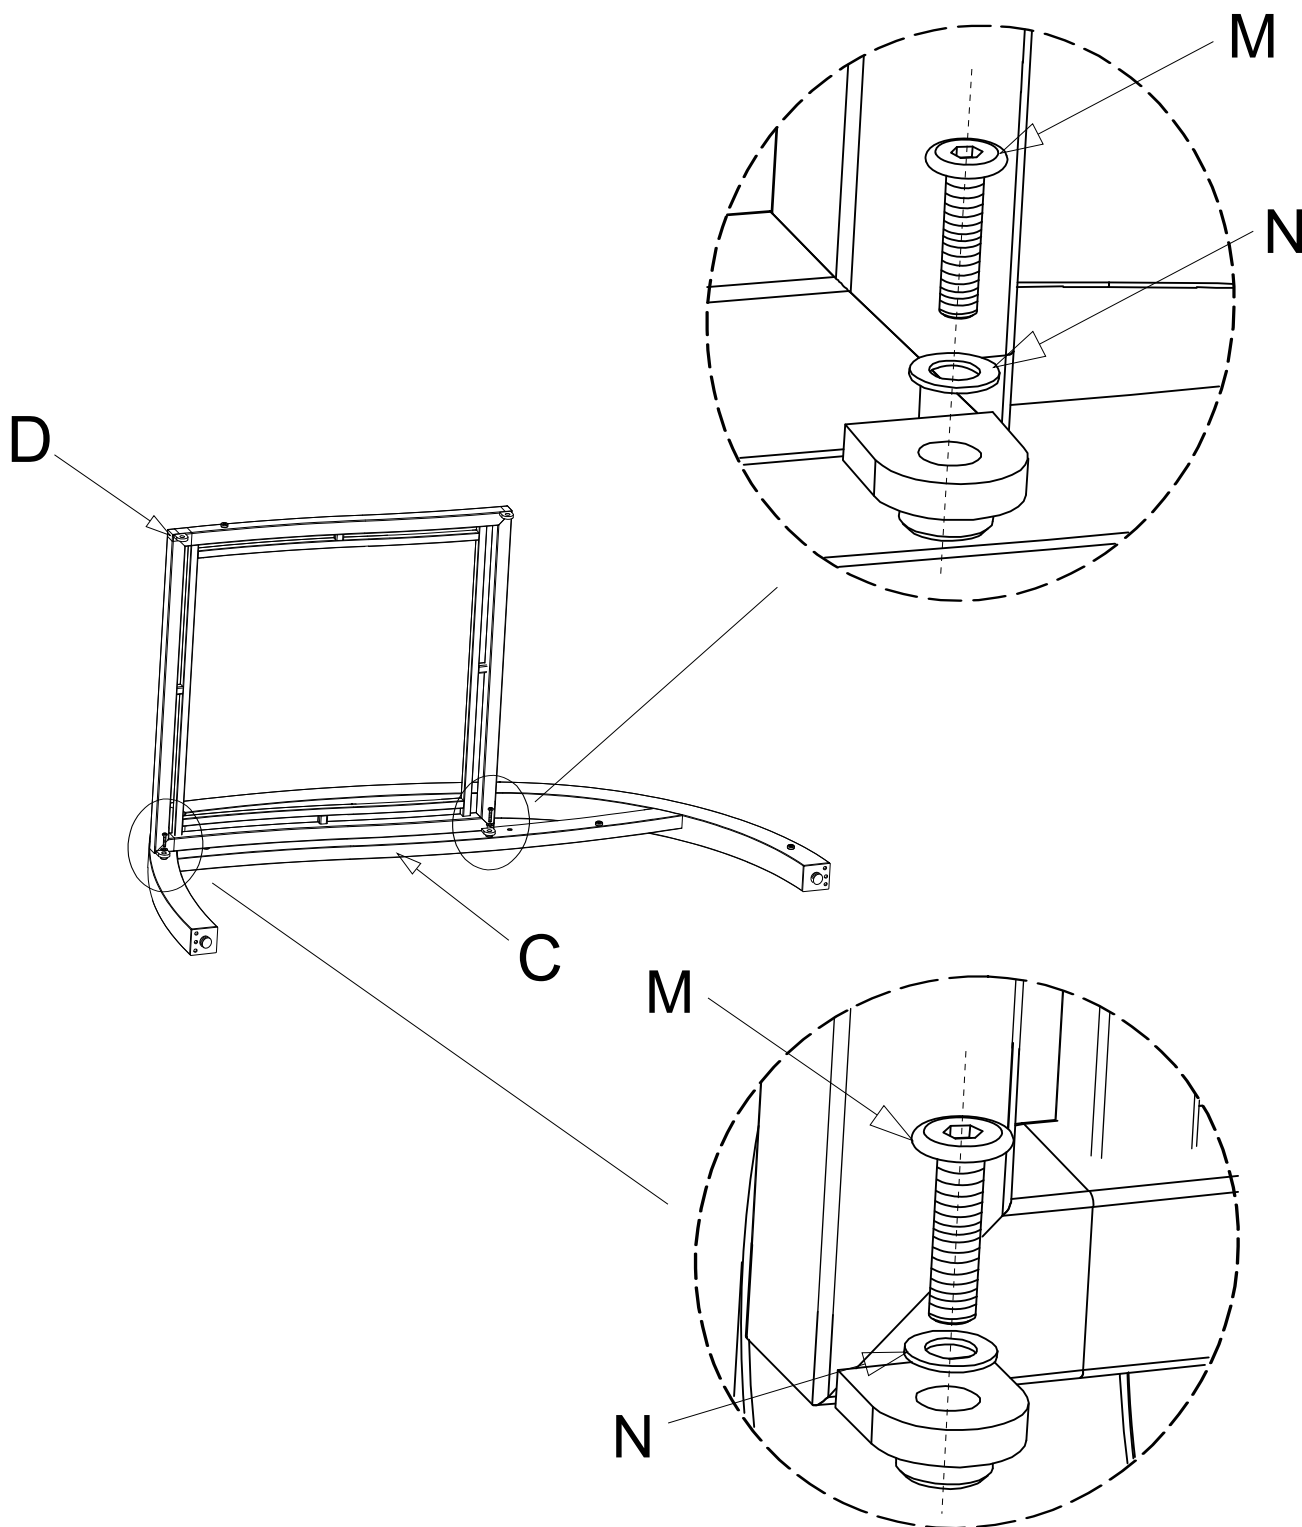

STEP 2

Attach right arm panel(B) to assembled unit(C&D) using bolts M6*25(M) and washers(N).

 
Please do not fully tighten bolts until unit is fully assembled.

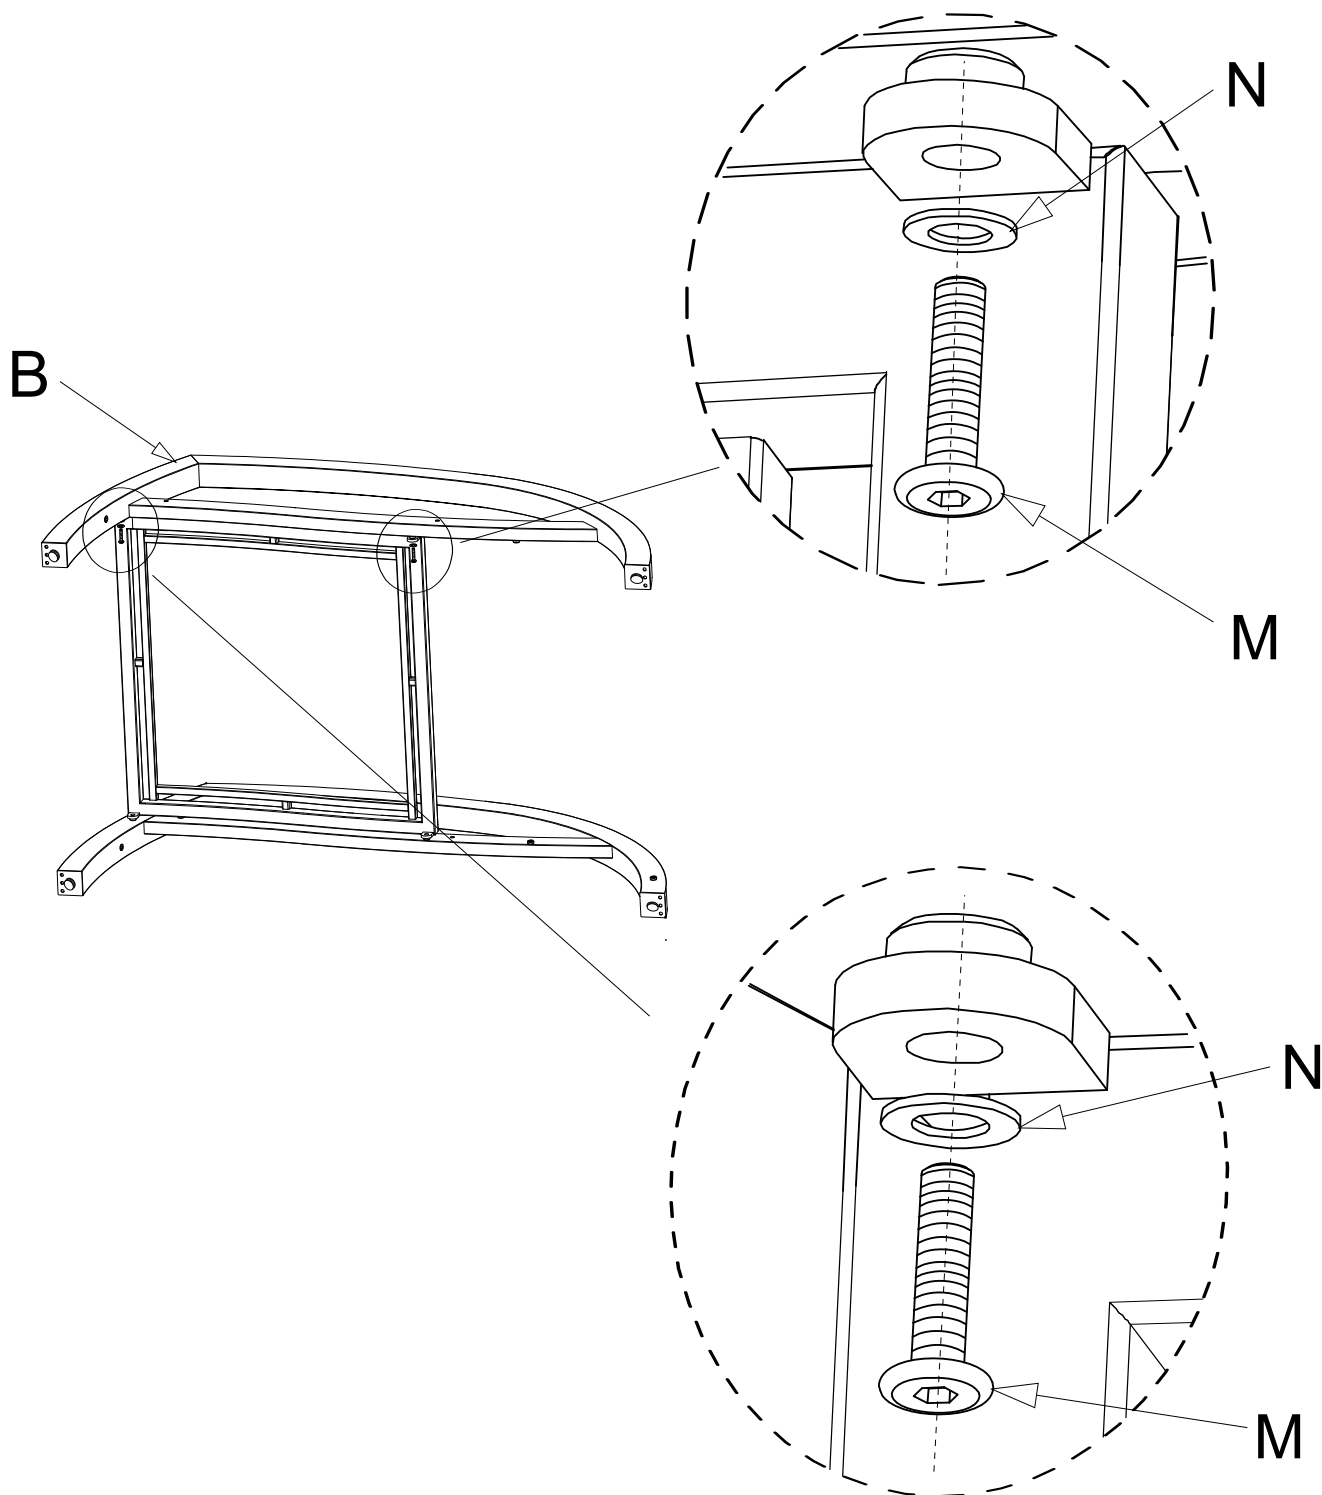

STEP 3

Screw the assembled unit(B, C&D) using bolts M6*50(J) and washers(N).

 
Please do not fully tighten bolts until unit is fully assembled.

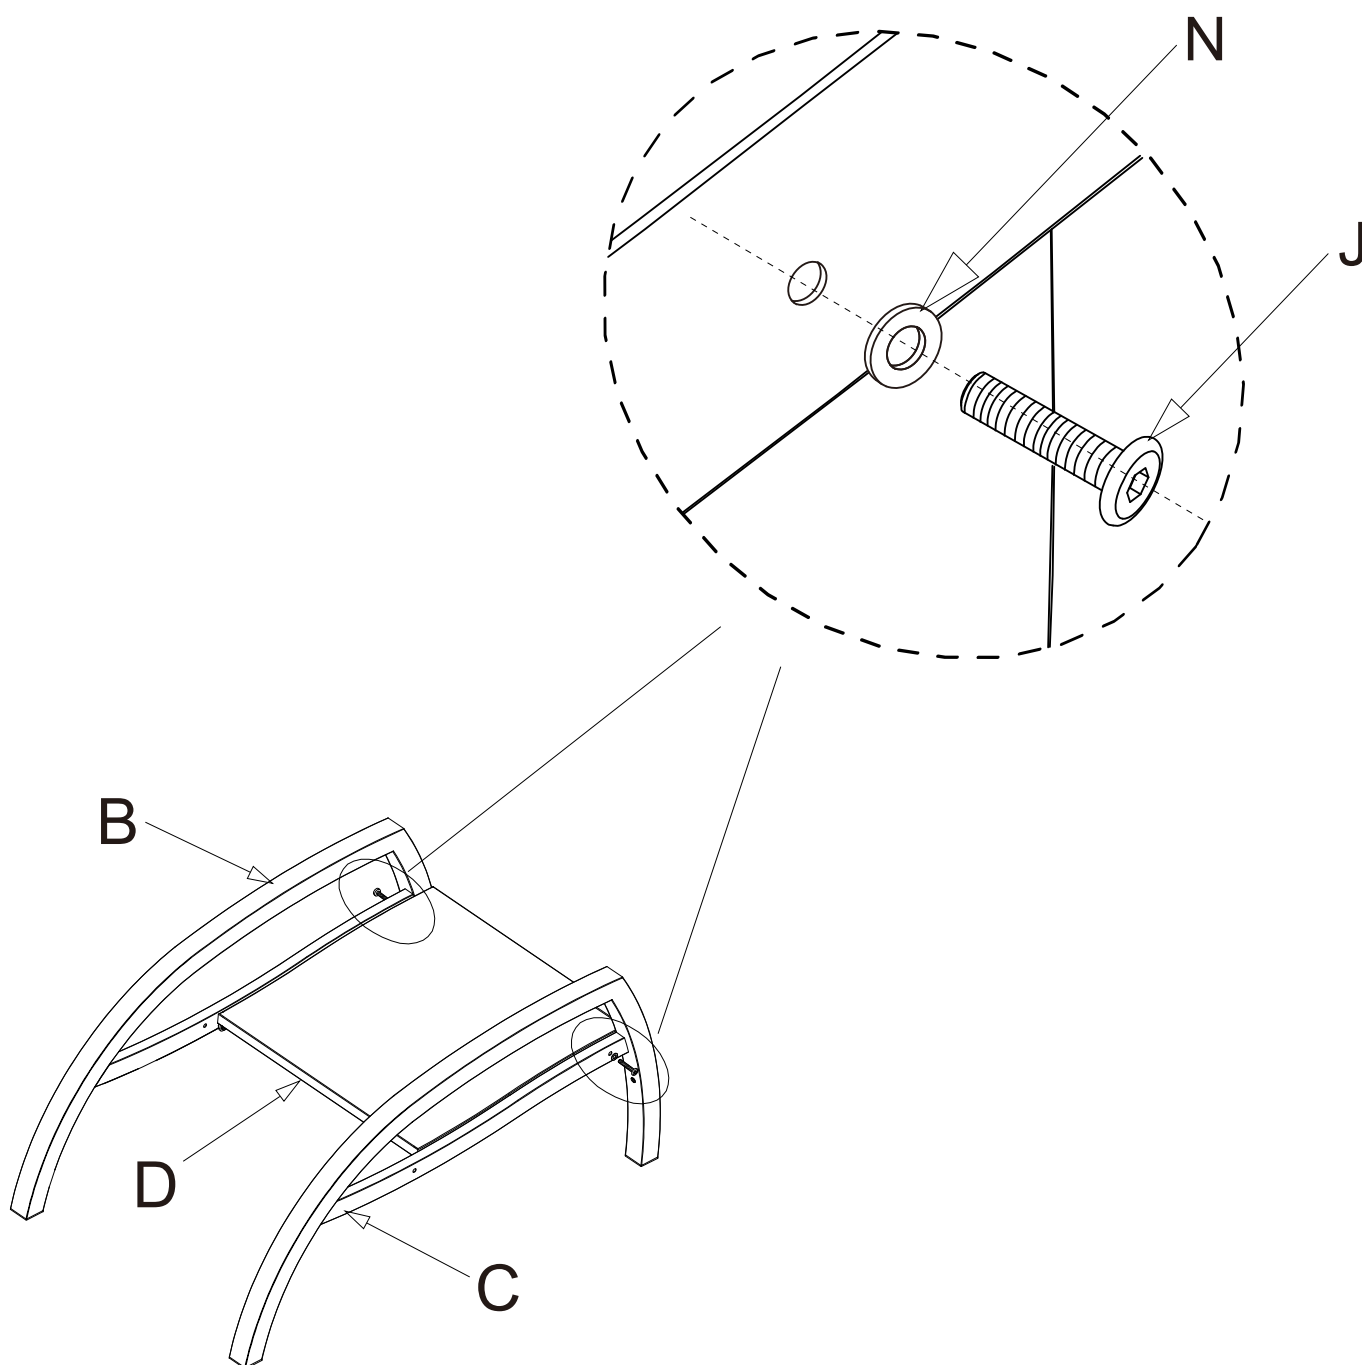

STEP 4

Attach adjustment bar(H) to assembled unit(B, C&D) using bolts M6*25(M) and washers(N).

 
Please do not fully tighten bolts until unit is fully assembled.

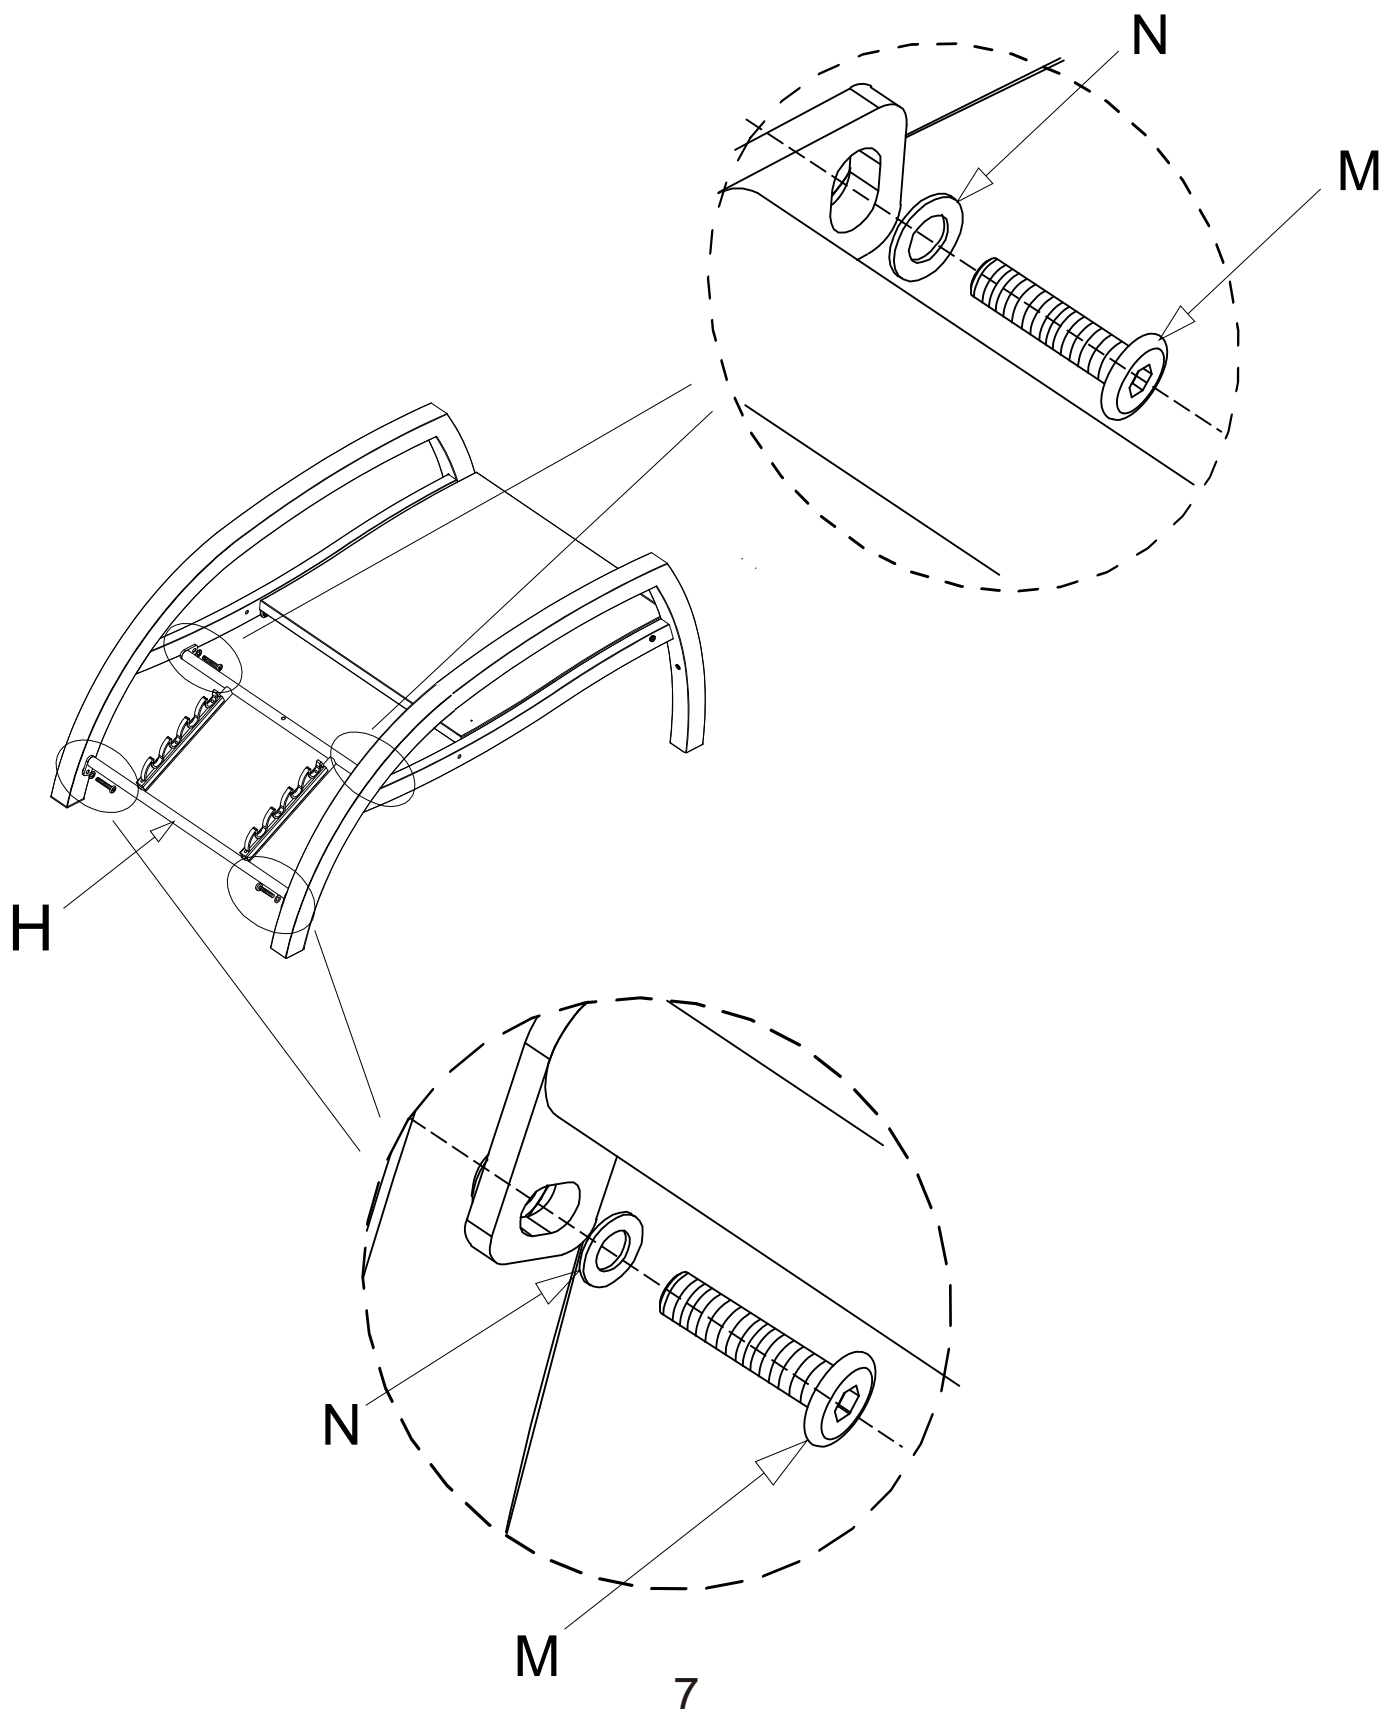

STEP 5

Attach the center connector(F) to arm connector(G) using bolts M6*35(L), washers(N) and nuts(O).

 
Please do not fully tighten bolts until unit is fully assembled.

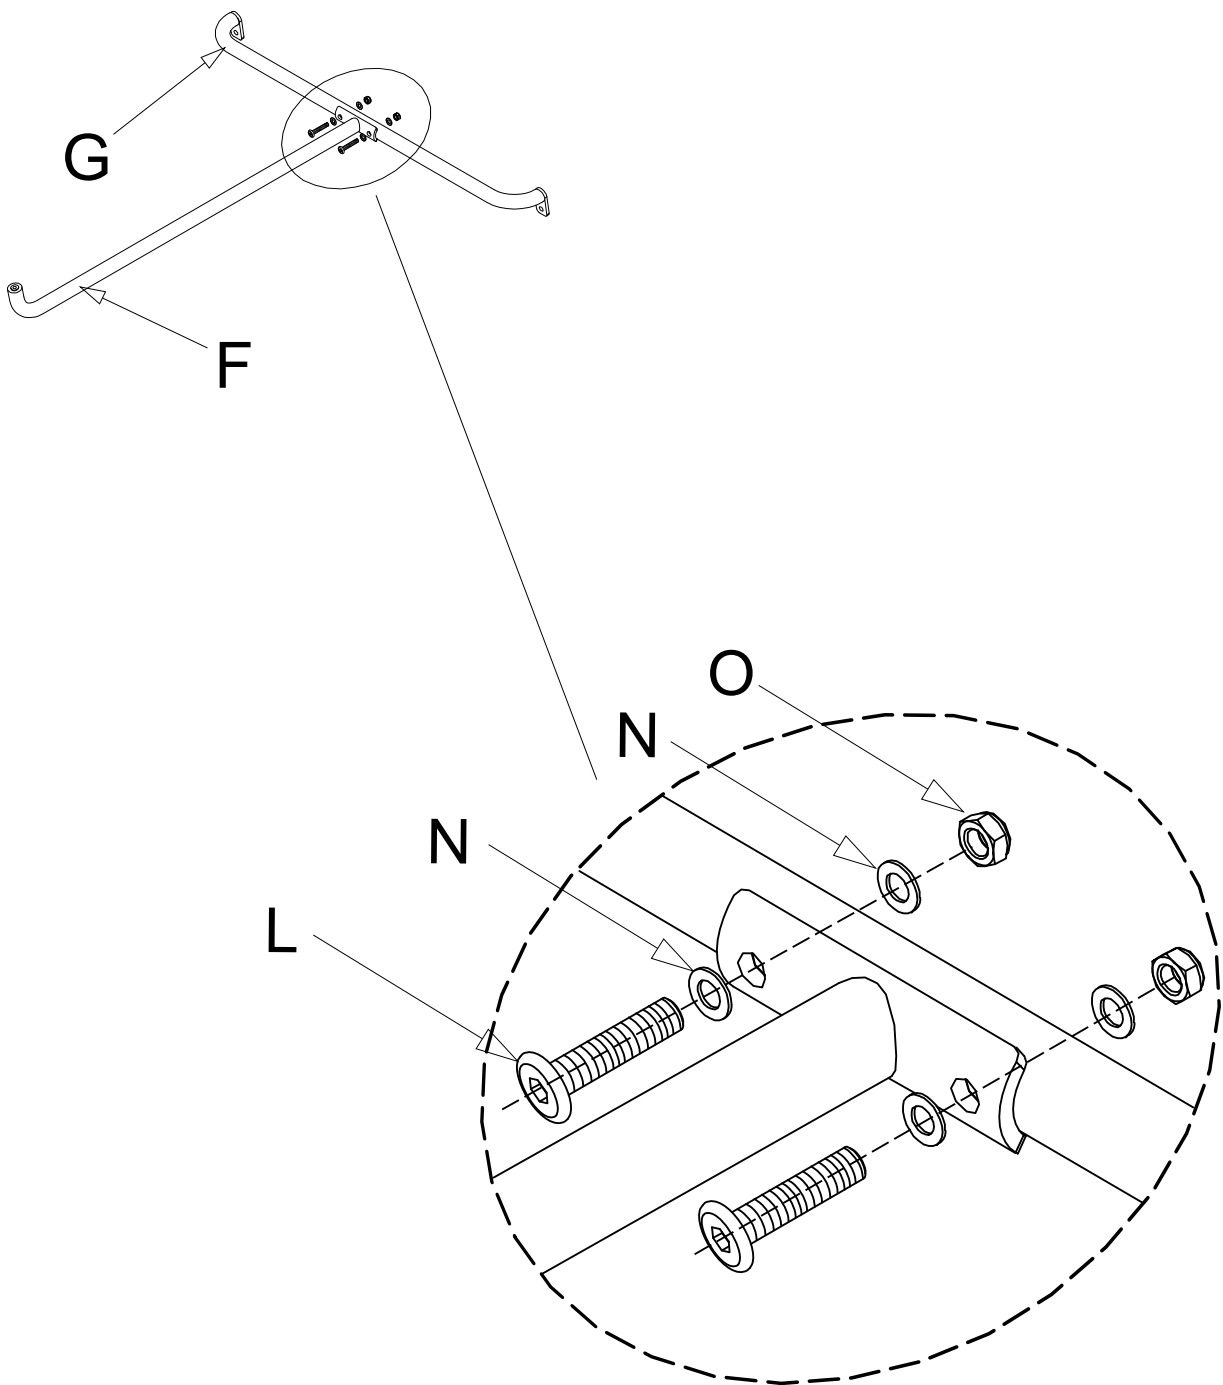

STEP 6

Lay the assembled unit(B, C, D&H) down on a soft flat surface as shown below.
Attach the assembled unit(F&G) to assembled unit(B, C, D&H) using bolts M6*35(L), bolts M6*25(M) and washers(N).

 
Please do not fully tighten bolts until unit is fully assembled.

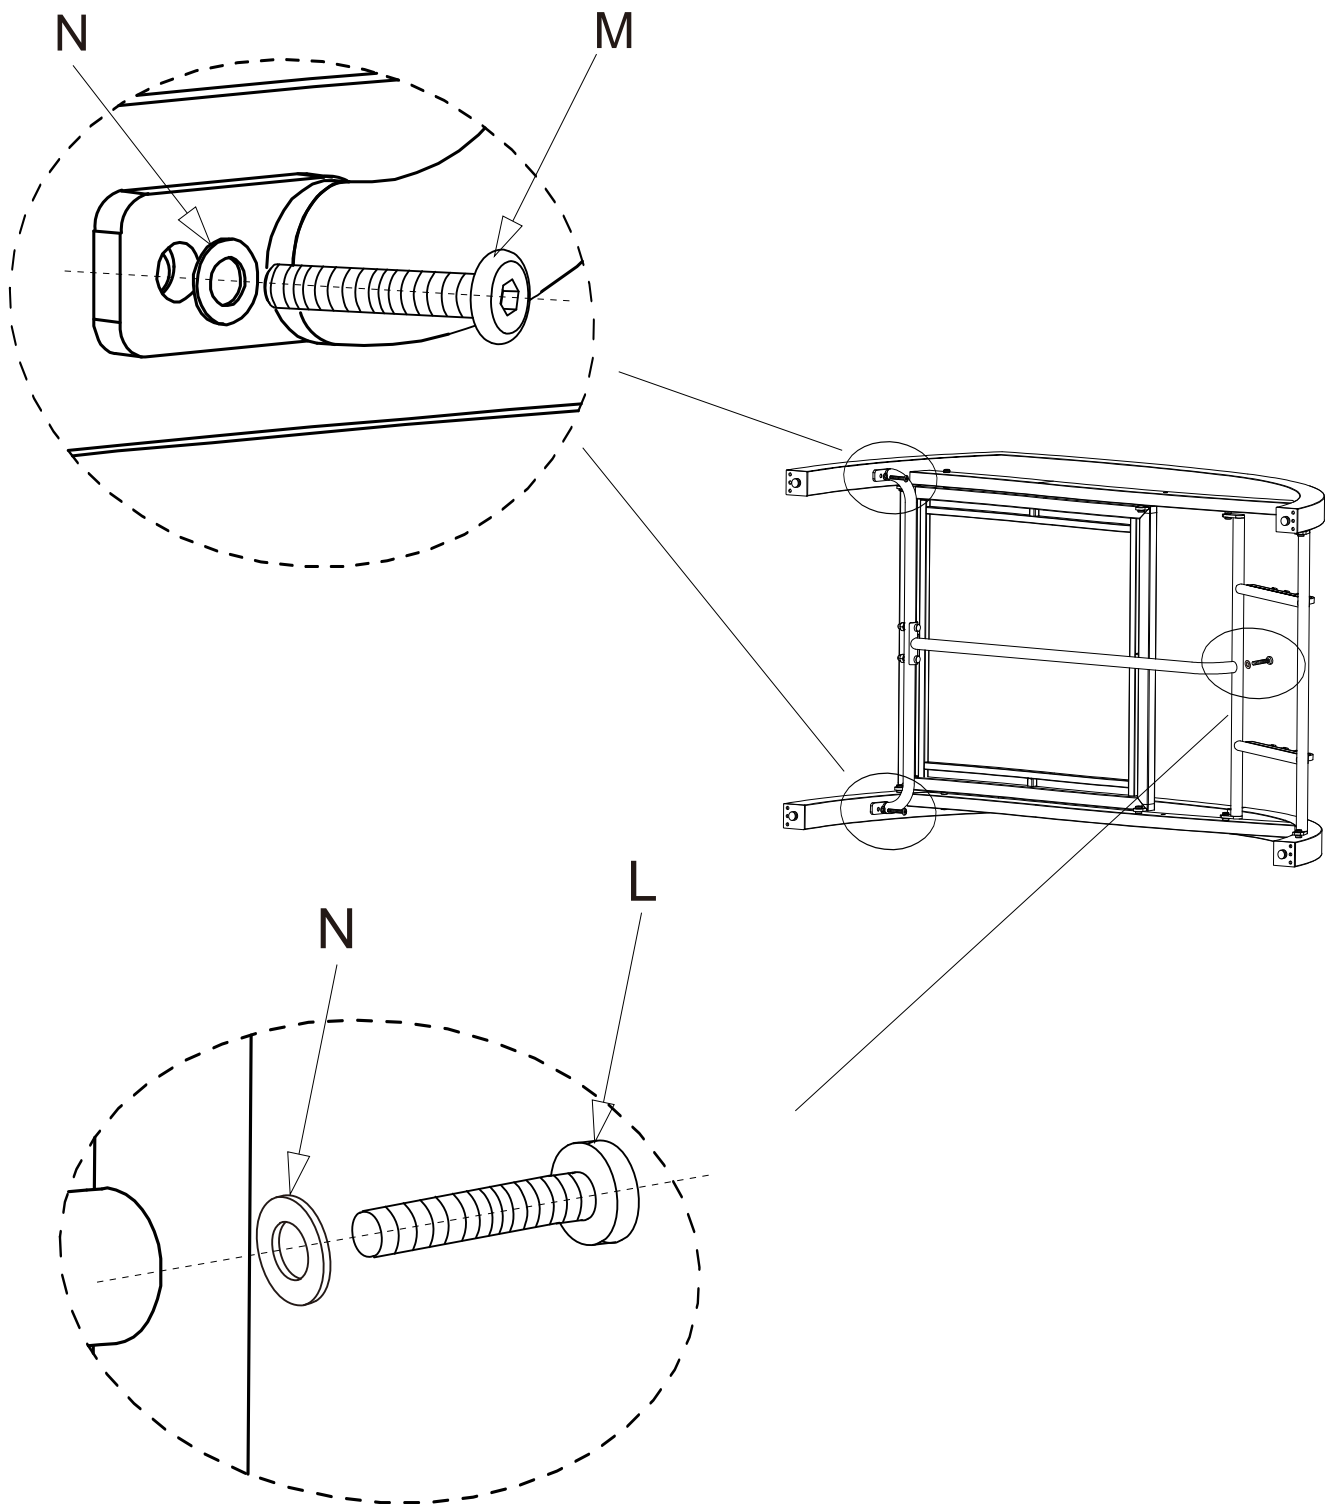

STEP 7

Put seat panel 2(E) into the assembled unit(B, C, D, F, G&H) as shown below.
Attach them using bolts M6*50(J) and plastic washers(T).

 
Please fully tighten the two bolts.

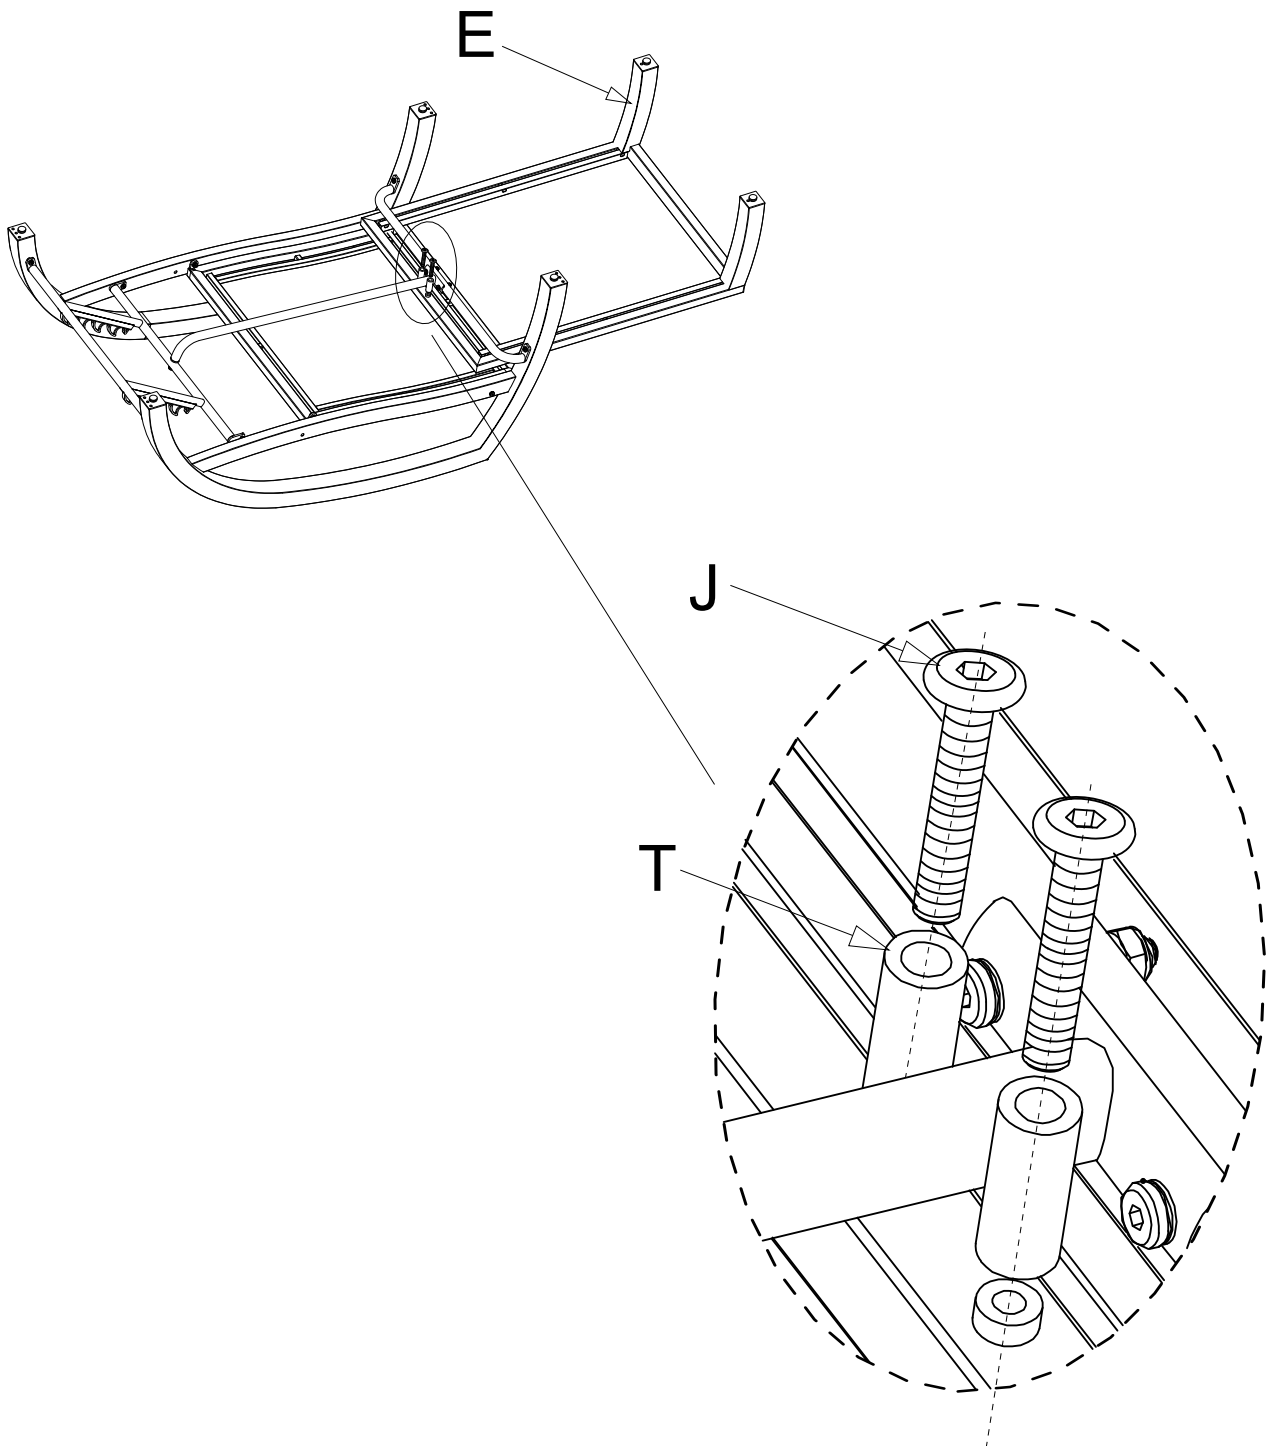

STEP 8


Attach back panel(A) to assembled unit(B, C, D, E, F, G&H) using bolts M6*50(J), washers(N), and bolt caps(R).

 Please fully tighten all bolts using allen key(P) and wrench(Q), and cover bolt caps(R) and nut caps(S) at this time.

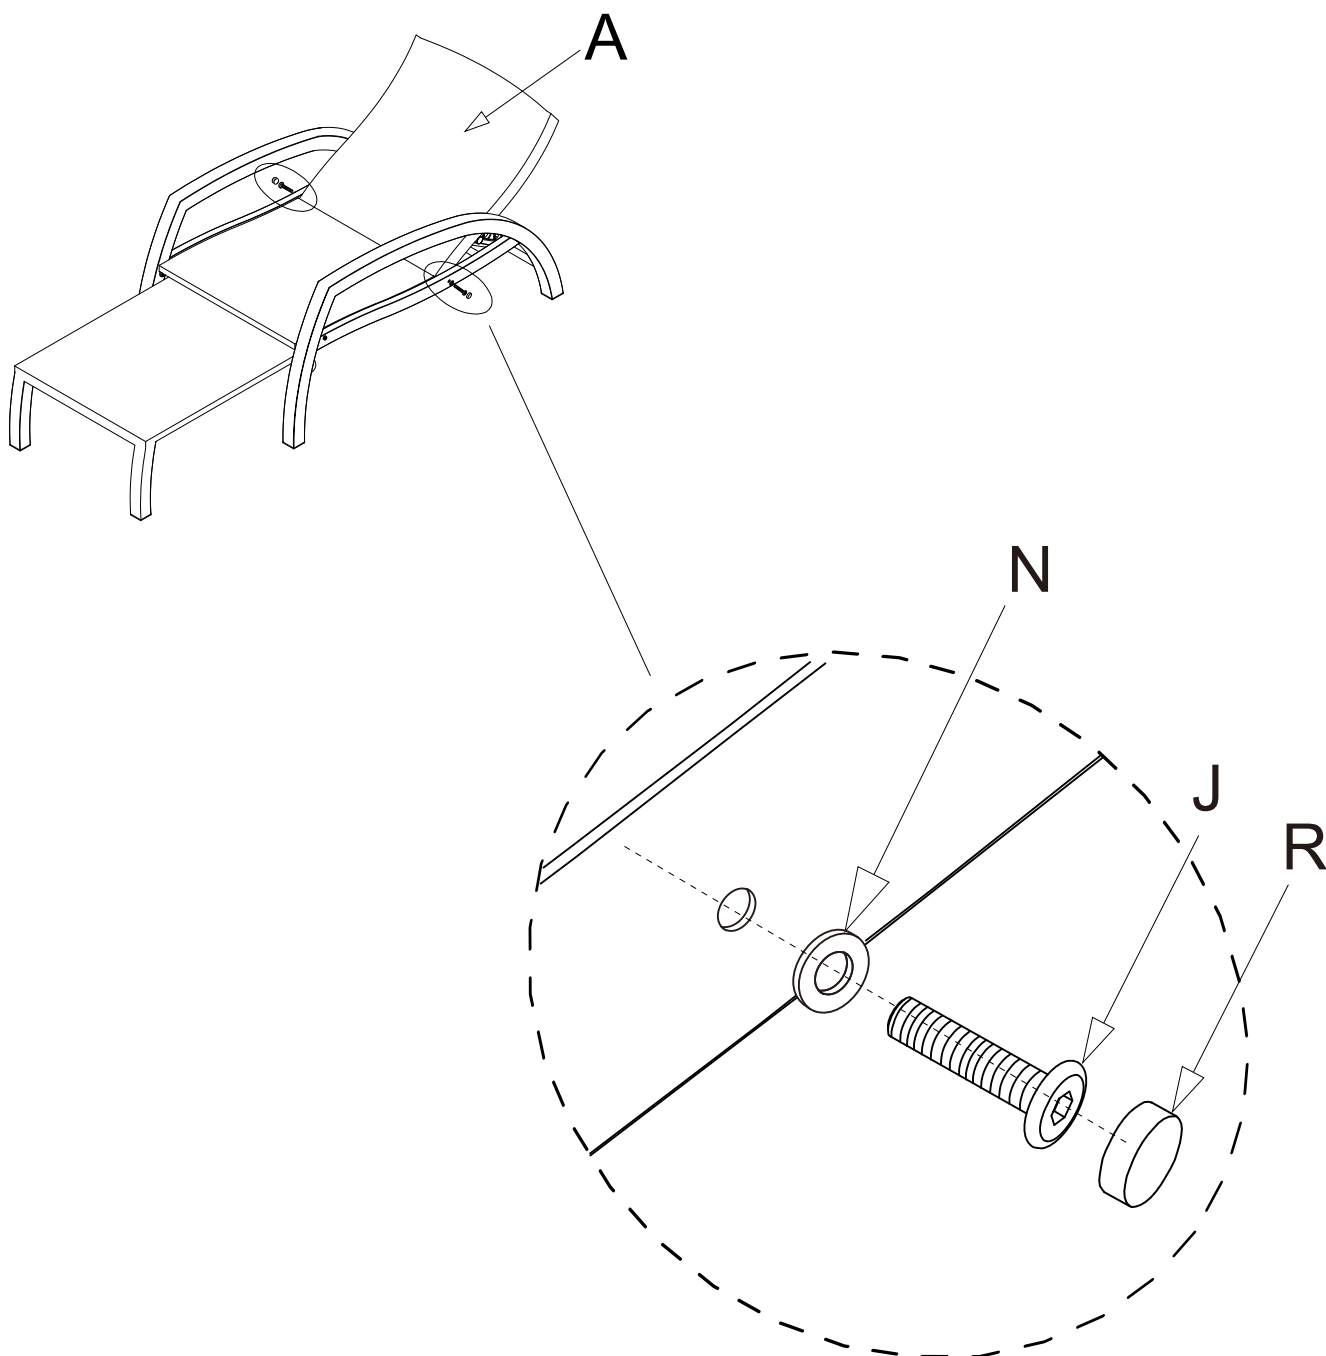

STEP 9

 Enjoy your chaise lounge.

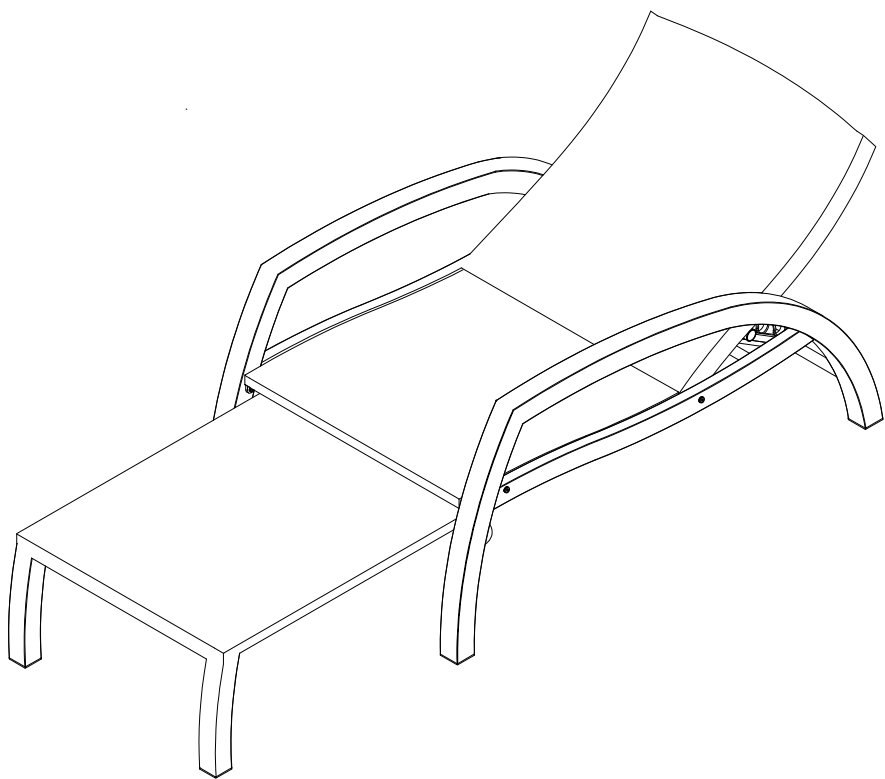

Cleaning and Maintenance

Clean frame with mild soapy water, rinse thoroughly. Dry frame parts completely. Do not use bleach, acid, or other solvents on the fabric and metal parts.

We recommend the use of furniture covers to protect the Wicker Chaise Lounge when not in use.

Inspect and tighten all bolts on a regular basis to ensure proper performance and safety.

In order to prolong the life and beauty of your Wicker Chaise Lounge, we recommend storing it in a dry and protective area during off season periods.