


To prevent possible scratches and damage, this furniture must be assembled by two people on a soft surface such as a blanket or carpet.


Step 1: Place the Dresser on its back. Attach a Bun Foot (A) underneath each corner of the Dresser using the 2" Allen Head Bolts (B), Spring Washers (C) and Flat Washers (D). Tighten using the Allen Wrench (E).

Step 2. Install the Leveler (H) into the bottom end of the Center Support Leg. Attach the Support Leg to the bottom of the Dresser as shown. The Leveler can be adjusted if necessary to provide support for the middle of the dresser.

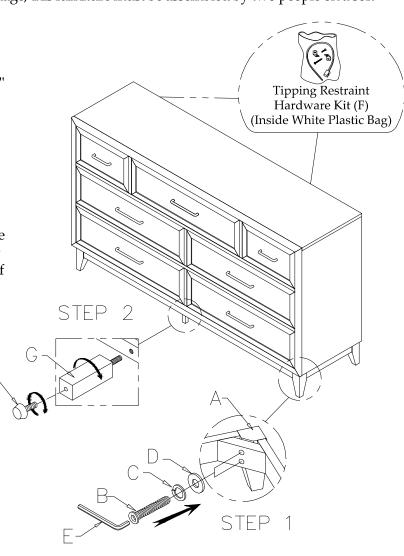

Anti-Tip Hardware Installation Instructions

Notice: This manufacturer recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over RestraintHardware for use to minimize this risk, if used. Please follow below installation steps. They recommend that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at http://www.cpsc.gov/ and stay up to date on allissues related to children's product safety.

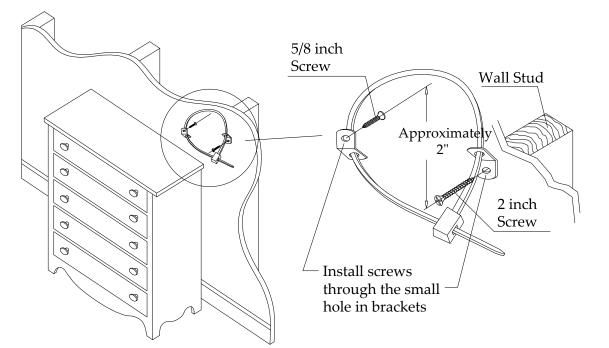

- 1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
- 2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the
- **<u>2 inch long</u>** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
- 3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
- 4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.
- Caution: They assume no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.
- Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.