

ASSEMBLY INSTRUCTION

SHAKER DINING TABLE

Before you begin, Please follow Assembly Instruction carefully. Then follow them step by step.

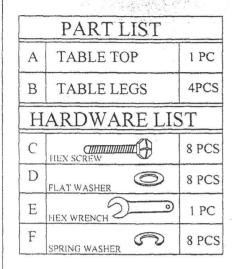

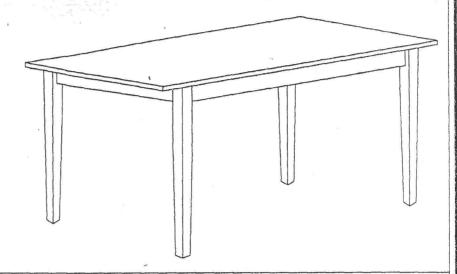

IMPORTANT NOTE: PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.

FIX THE TABLE LEGS(B) TO THE CORNER BLOCK WITH HEX SCREW (C) SPRING WASHER (F).

AND FLAT WASHER (D). THEN TIGHTEN THE HEX SCREW (C) BY USING THE HEX WRENCH(E).

