


CARE AND MAINTENANCE






 

 








Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

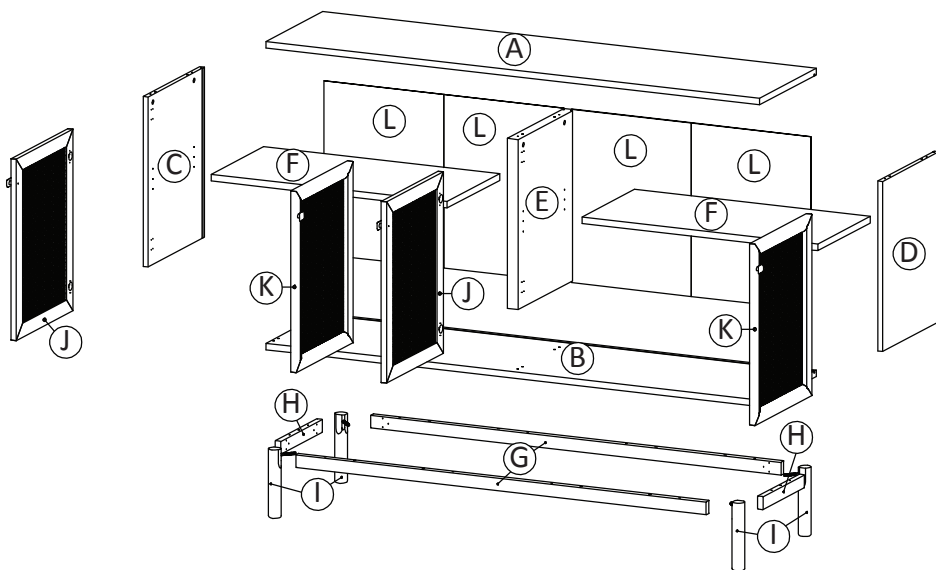NOTICE


- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

      Part List and Hardware List



 ø 6 x 35 mm HW7x4	 ø 15 mm HW8x24	 ø 8 x 30 mm HW9x4	 M 7 x 50 mm HW10x4	 L 4 HW11x1	 M 6.4 x 53 mm HW12x16
 M 3.5 x 15.5 mm HW19x14	 M 4 x 16 mm HW20x4	 M 4 x 25 mm HW21x2	 HW22x2	 M 4.5 x 12.5 mm HW23x4	 9 x 14 x 10 mm HW24x4
 M 6.5 x 12.5 mm HW25x8	 ø15 mm	 ø15 mm	 M 3.5 x 32 mm	 5003	

Product Dimensions: 63.1"W×16.3"D×31.7"H

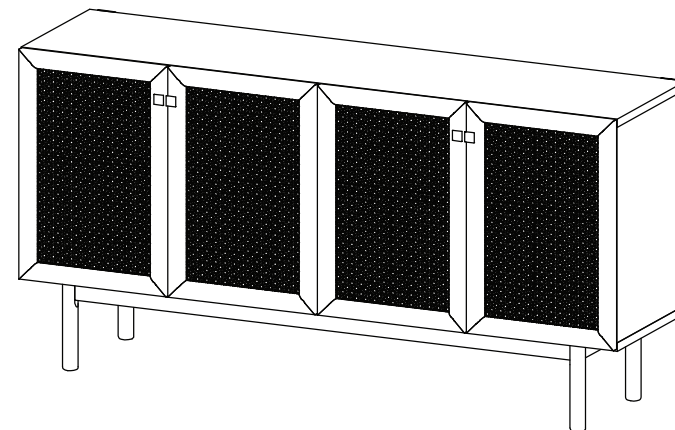

 **WARNING :**
WEIGHT CAPACITY: 68 LBS.
DO NOT STAND ON TV STAND

Part List & HW for Multi-Box Items

Piece	Description	Qty	Carton Call
A	Top Board	1	2 of 2
B	Bottom Board	1	2 of 2
C	Side Board Left	1	2 of 2
D	Side Board Right	1	2 of 2
E	Centre Board	1	1 of 2
F	Adjustable Shelf	2	1 of 2
G	Bottom Skirt 1	2	2 of 2
H	Bottom Skirt 2	2	2 of 2
I	Leg	4	1 of 2
J	Frame Door Left	2	1 of 2
K	Frame Door Right	2	1 of 2
L	Back Board	4	2 of 2


Piece	Description	Qty	Carton Call
HW1	Cambolt	6	1 of 2
HW2	CamLock	6	1 of 2
HW3	Dowel	22	1 of 2
HW4	Screw M 7 x 50 mm	6	1 of 2
HW5	Allen Key	1	1 of 2
HW6	Screw M 6.4 x 53 mm	12	1 of 2
HW7	Corner Brace	4	1 of 2
HW8	Screw M 4 x 16 mm	24	1 of 2
HW9	Nut	4	1 of 2
HW10	Ring Per	4	1 of 2
HW11	Key	1	1 of 2
HW12	Wedge	16	1 of 2
HW13	Screw M 3.5 x 15.5 mm	20	1 of 2
HW14	Handle	4	1 of 2
HW15	Screw M 4 x 25 mm	4	1 of 2
HW16	Hinge	8	1 of 2
HW17	Screw M 4 x 12.5 mm	48	1 of 2
HW18	Iron	1	2 of 2
HW19	Screw M 6.5 x 12.5 mm	14	1 of 2
HW20	Screw Cupper	4	1 of 2
HW21	Screw Cup	2	1 of 2
HW22	Cable Ties	2	1 of 2
HW23	Screw M 3.5 x 32 mm	4	1 of 2
HW24	Fisher	4	1 of 2
HW25	Shelf Support	8	1 of 2

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 60 minutes.

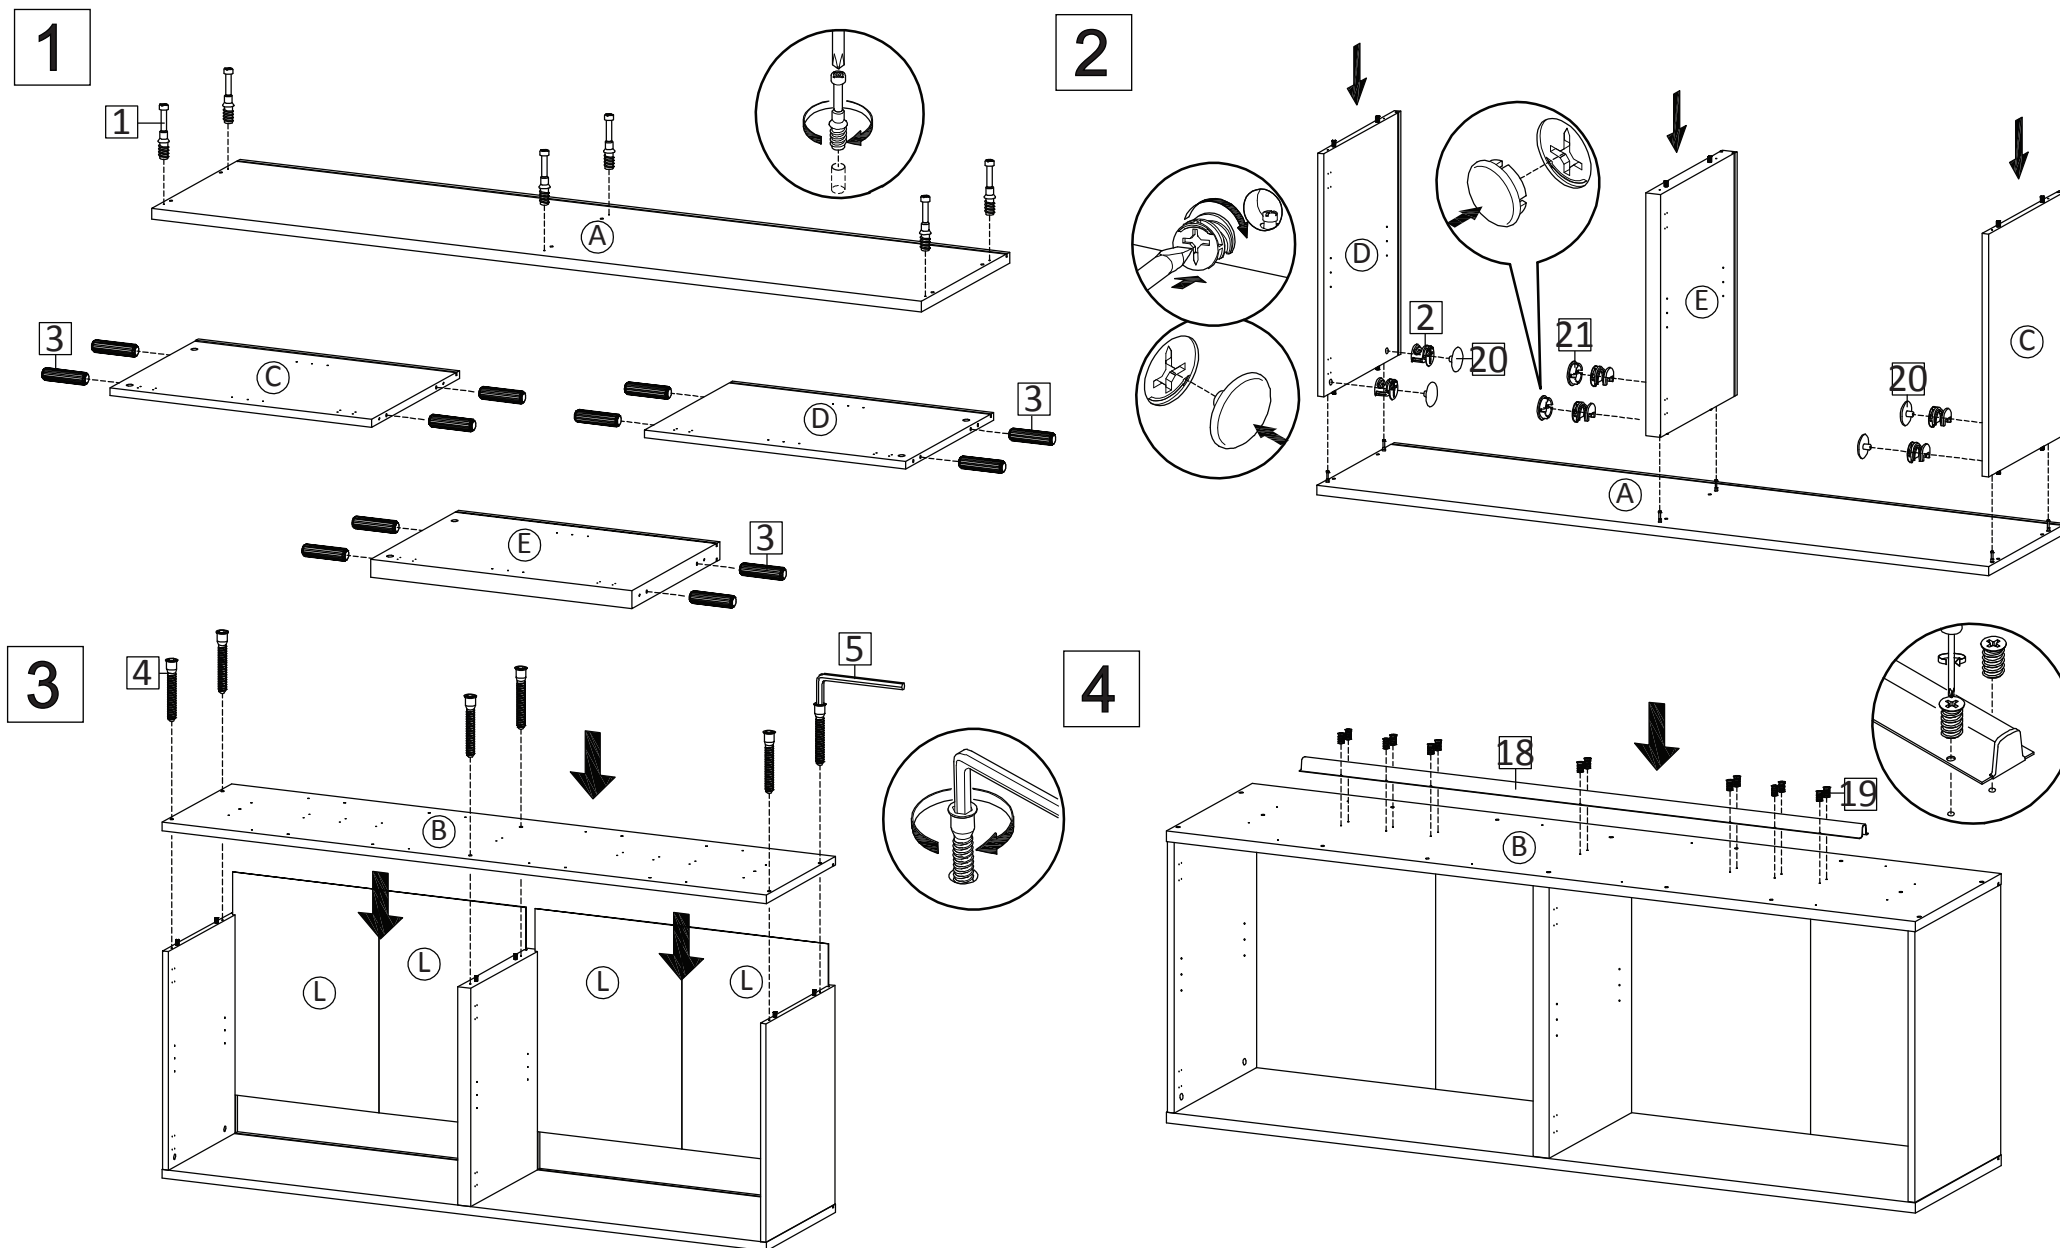


5

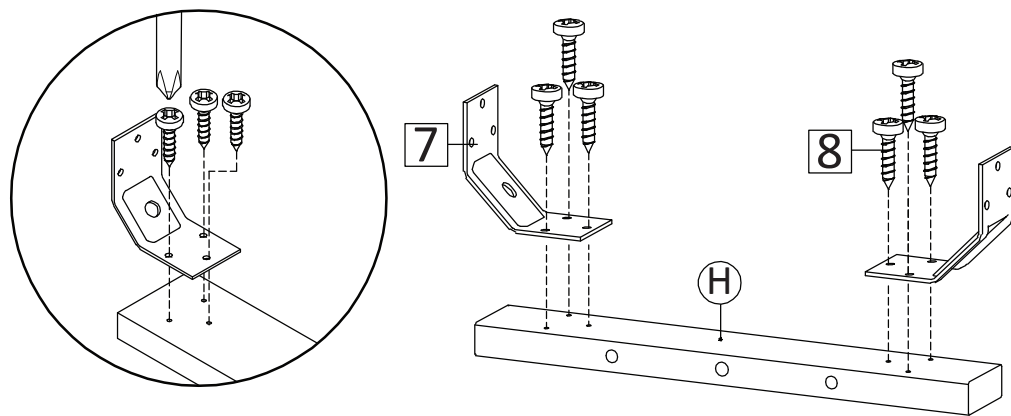


x 2


6

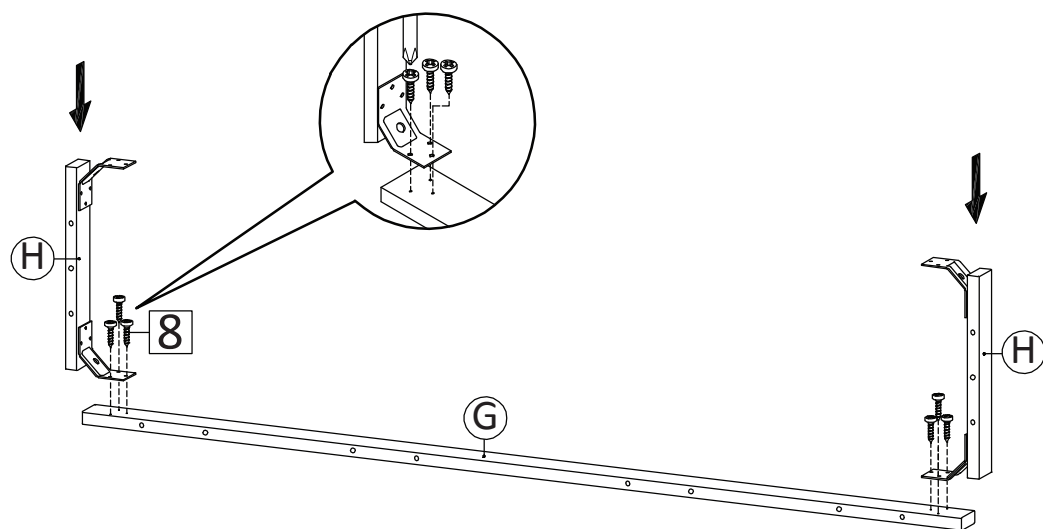


8

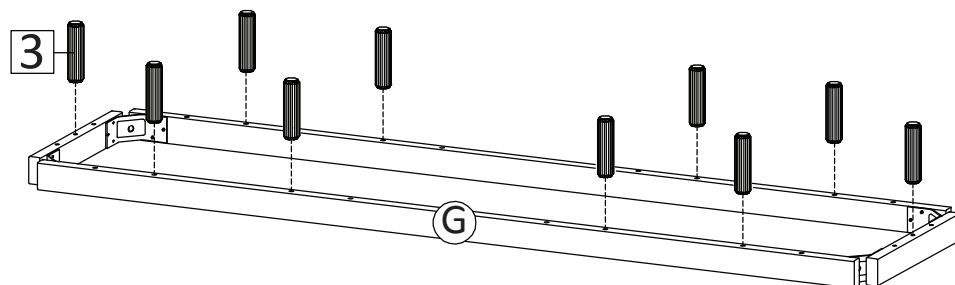


7

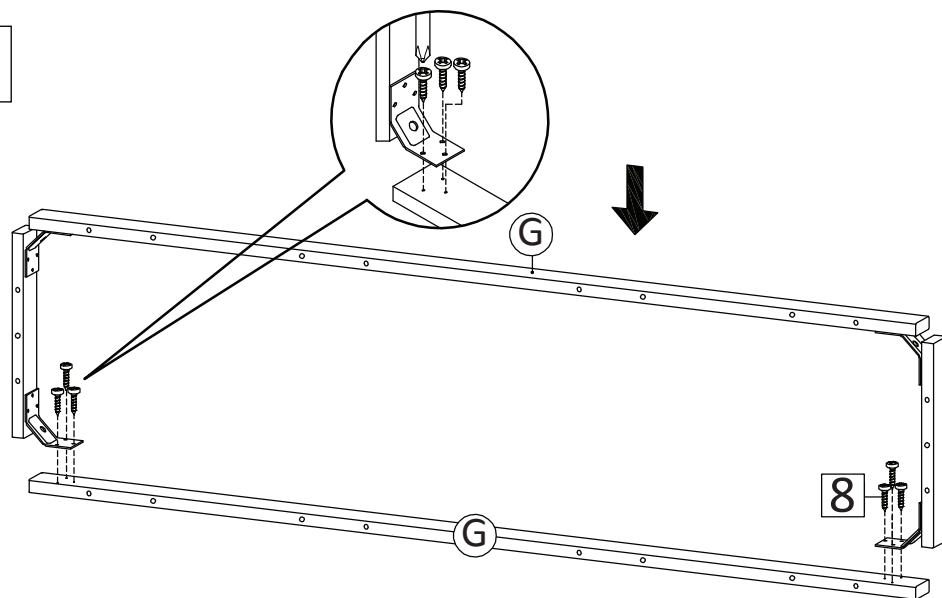


9

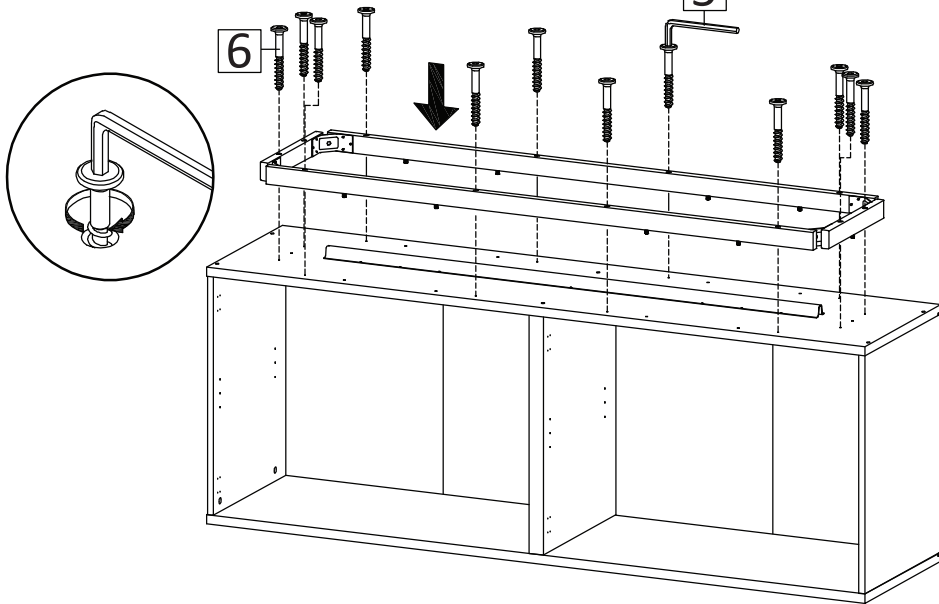

10

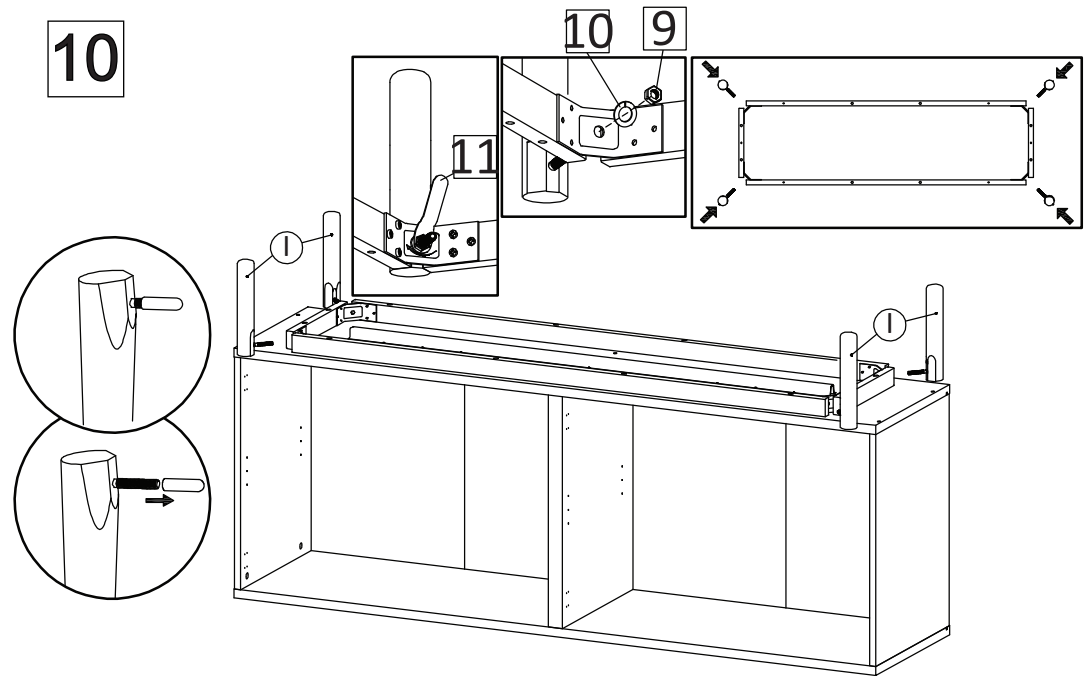

11

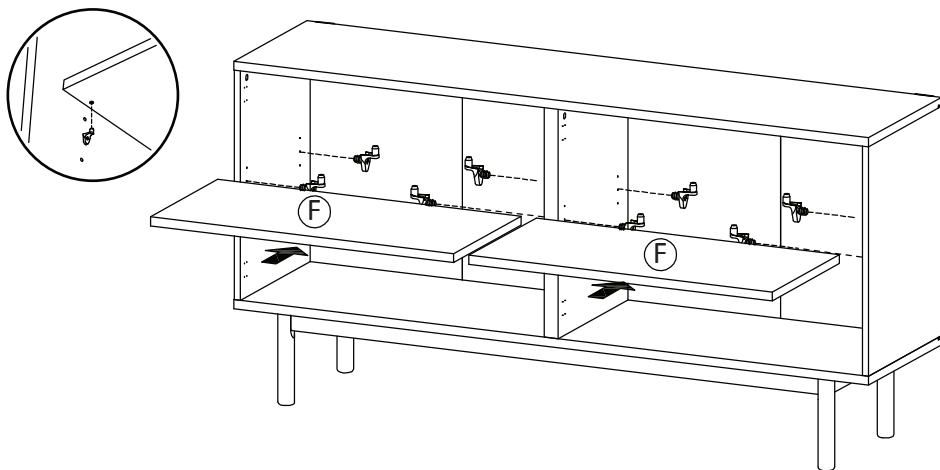

12

