

T-fal®

OptiGrill ⊕ XL

EN
FR



Size: 110 x 156 mm

Instructions for use
Mode d'emploi

IMPORTANT SAFEGUARDS

Operation, maintenance and product installation: for your safety, please refer to the different sections of this manual or the corresponding icons.

When using electric appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using.
2. Do not touch hot surfaces. Always use handles or knobs.
3. To protect against electric shock, do not immerse or partially immerse cord, plugs, or appliance in water or other liquid.
4. Not intended for use by children. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over the edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. Check that the electrical installation is compatible with the wattage and voltage stated on the bottom of the appliance.
14. **CAUTION** - To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.
15. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
16. **WARNING:** Do not heat or pre-heat without the 2 cooking plates inside the grill.

SAVE THESE INSTRUCTIONS.

Safety instructions

- Never leave the appliance unattended when in use.
- To prevent the appliance from overheating, do not place it in a corner or against a wall.
- Never leave the appliance plugged in when not in use.
- Do not place the hot plate under water or on a fragile surface.
- If you have any problems, contact the authorized after-sales service center or the internet address www.t-falusa.com / www.t-fal.ca.

Short Cord instructions

A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a long detachable power-supply cord or extension cord is used:


- 1) The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance;
- 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord; and
- 3) The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.

THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY.

Thank you for buying this appliance. Read the instructions in this leaflet carefully and keep them within reach. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

For your safety, this product conforms to all applicable standards and regulations (Electric Safety, Food Compliant Materials...).

Our company has an ongoing policy of research and development and may modify these products without prior notice.

- Do not consume food that comes into contact with the parts marked with  logo.
- Only use parts or accessories provided with the appliance or bought from an Approved-Service Center. Do not use them for other appliances or intention.
- To avoid spoiling your product, do not use flambé recipes in connection with it at any time.
- This appliance is not intended to be used in the following applications, and the guarantee will not apply for:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- If an accident occurs, rinse the burn immediately with cold water and call a doctor if necessary.

- When using for the first time, wash the plate(s), pour a little cooking oil on the plate then wipe it with an absorbent kitchen towel.
- To avoid damaging the non-stick coating of the cooking plate, always use plastic or wooden utensils.
- Do not use aluminum foil or other objects between the plates and the food being cooked.
- Do not place cooking utensils on the cooking surfaces of the appliance.
- Do not cook food in aluminium foil
- Do not remove the grease collection tray while cooking, If the grease collection tray becomes full when cooking: let the appliance cool down before emptying
- On first use, there may be a slight odor and a little smoke during the first few minutes. In these cases open the window and wait until there is no more smoke or odor.


Prevention of accidents at home

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by an adult responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Accessible surface temperatures can be high when the appliance is operating.
- Never touch the hot surfaces of the appliance, always use the handles.
- Cooking fumes may be dangerous for animals which have a particularly sensitive respiratory system, such as birds, We advise bird owners to keep them away from the cooking area.



Environment protection first!


- ① The packaging of your product is made of recyclable materials. Don't throw it in your usual trash can, take it to a nearby separated waste collection center.
- ➔ Please take your used appliance to a recycling depot in your area. Thank you for being environmentally friendly.

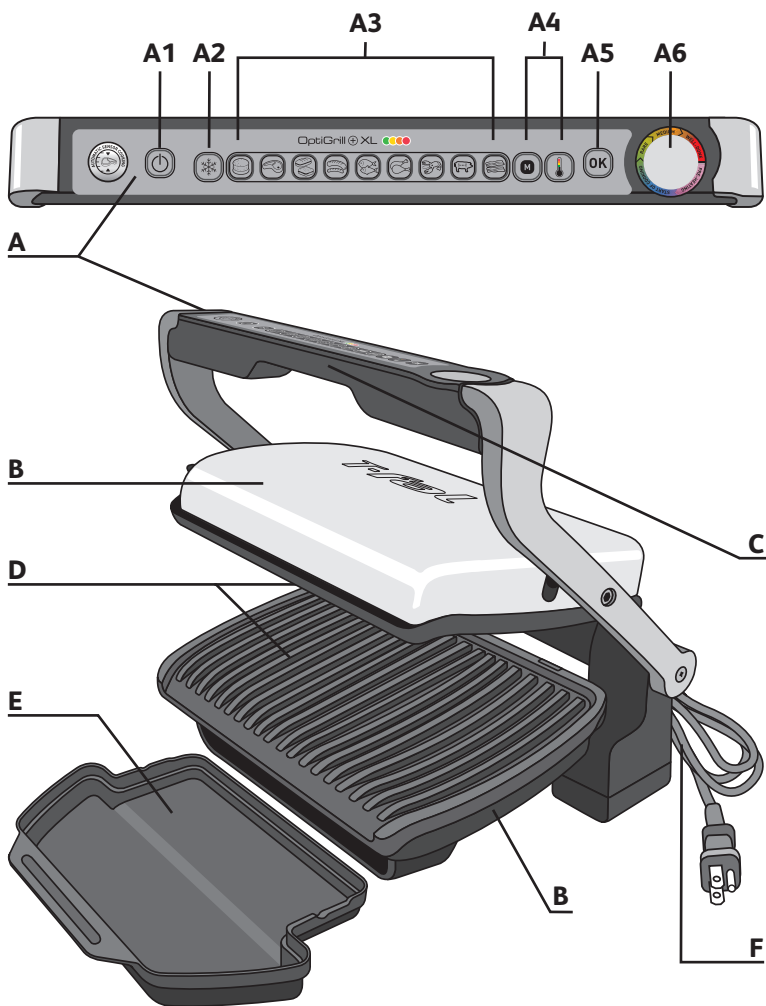

Description

A Control panel	A4 Manual mode “4 temperature settings” See specific manual quick start guide.	C Handle
A1 On/off button	A5 OK button	D Cooking plates
A2 Frozen food mode	A6 Cooking level indicator	E Drip tray
A3 Cooking programs	B Body	F Power cord



Guide of LED colors

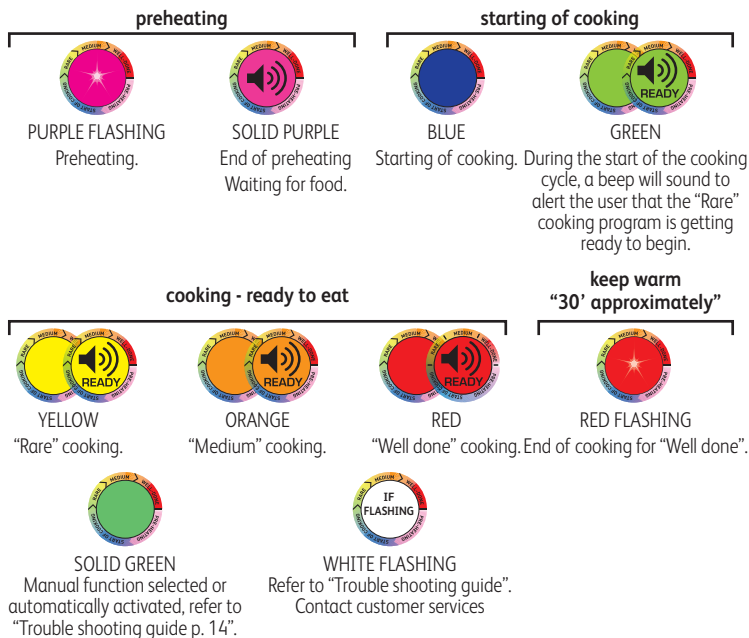

Guide of automatic cooking programs

 Burger	 Fish	 Bacon
 Red meat	 Poultry	 Manual mode:
 Sandwich	 Sea food	Traditional grill for manual operation with 4 different temperature settings
 Sausage/lamb	 Pork	(from 212°F or 100°C to 545°F or 285°C)

 
1 Setting

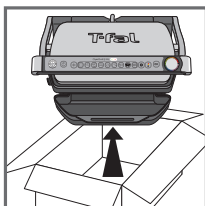

1



2

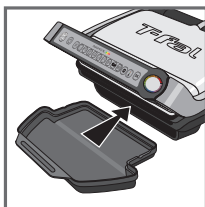

3




4

1 Remove all packaging materials, stickers and accessories from the inside and the outside of the appliance. The colour sticker on the cooking level indicator can be changed, according to the language. You can replace it with the one on the inside of the packaging.

2 Before using for the first time, thoroughly clean the plates with warm water and a little dishwashing liquid, rinse and dry thoroughly.

3-4 Position the removable drip tray at the front of the appliance.

2 Pre-heating

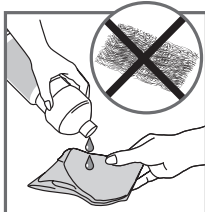


5




6

5 For the best results you may wipe the cooking plates using a paper towel dipped in a little cooking oil, to improve the non-stick release.

5bis Ensure that the bottom cooking plate and the upper cooking plate are correctly positioned in the product before the pre-heating phase begins.

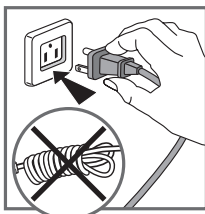

7

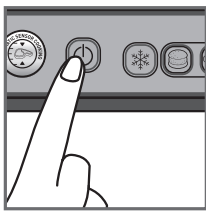


8


6 Remove any surplus oil using a clean kitchen paper towel.

7 Connect the appliance to an outlet. (note the cord should be fully unwound).

8 Press the On/Off button.

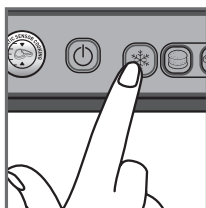

9

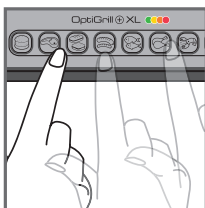

10


9 If the food that you wish to cook is frozen, press the “frozen food” button.

10 Select the appropriate cooking mode according to what type of food you wish to cook.


9 automatic cooking programs and a manual mode with 4 different temperature settings

	Select this cooking program if you want to cook burgers.		Select this cooking program if you want to cook sea food.
	Select this cooking program if you want to cook pork.		Select this cooking program if you want to cook red meat.
	Select this cooking program if you want to cook a sandwich.		Select this cooking program if you want to cook bacon
	Select this cooking program if you want to cook sausage/lamb.		If you select Manual mode the indicator light is green and you have manual control of the cooking time. 4 different temperature settings are available for this manual mode (green, yellow, orange and red). See specific manual quick start guide.
	Select this cooking program if you want to cook fish.		
	Select this cooking program if you want to cook poultry.		

If you are uncertain about what cooking mode to use for other foods because it is not listed above, please refer to the “Cooking table for out of program food” page 15.

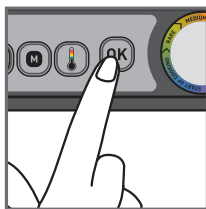

11

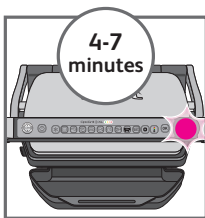


12

11 Press the “OK” button: the appliance starts pre-heating and the cooking level indicator flashes purple.

NB: If you have selected the wrong program, return to stage 8.

12 Wait for 4-7 minutes.

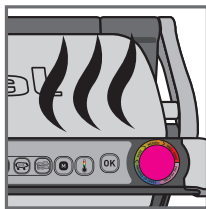


13


13 An audible tone is heard and the cooking level indicator stops flashing purple the pre-heating mode is complete.

Comments: At the end of pre-heating, if the appliance remains closed, the safety system will turn off the appliance.

3 Cooking

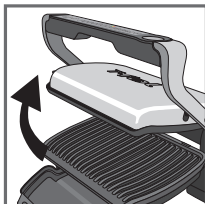


14

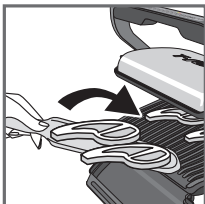

15



16

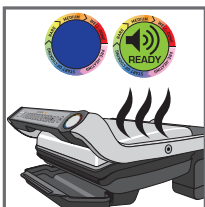

17



18

14-15 After pre-heating, the appliance is ready for use.

Open the grill and place the food on the cooking plate.

Comments: if the appliance remains open for too long, the safety system will turn off the appliance automatically.

16-17 The appliance automatically adjusts the cooking cycle (time and temperature) according to the food thickness and quantity.

Close the appliance to start the cooking cycle. The cooking level indicator turns blue and then becomes green to indicate the cooking is in progress (for the best results do not open or move your food during the cooking process).

During the cooking progress, there is a beep at each stage of cooking to warn the user that a cooking level (eg rare/yellow) has been reached.

Note for very thin pieces of food: close the appliance, the button "OK" will flash and the indicator will stay "fixed purple", press "OK" to ensure the appliance recognizes the food and that the cooking cycle starts.

18 According to the degree of cooking, the indicator light changes color. When the indicator light is yellow with a beep, your food is rare, when the indicator light is orange with a beep, your food is medium and when the indicator light is red, your food is well done.


N.B.: if you like your meat very rare, remove the meat when the cooking level indicator turns green.

Please note, especially on meat, it is normal that cooking result vary depending on type, quality and origin of food.

3 Cooking



19

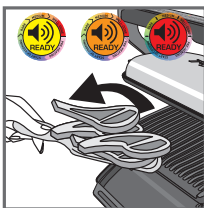

20



21

19-20 When the color corresponding to your choice of cooking level appears, open the appliance and remove your food.

21 Close the appliance. The control panel will light up and set itself to 'choice of program' mode.

Comment: the security system will turn off automatically if no program selection is made.

Cooking more food

If you want to cook a second batch of food, please pre-heat the appliance again (see section 2. "Pre-heating", starting from point 9) even if you want to cook the same type of food.

How to cook another batch of food:


After finishing your first batch of food:

1. Make sure the appliance is closed with no food inside.
2. Select the appropriate cooking mode/program (this step is necessary even if you decide to pick the same cooking mode than for the previous batch of food).
3. Press the "OK" button: the appliance starts pre-heating. The pre-heating is symbolized by the cooking level indicator that flashes purple.
4. The pre-heating is complete when an audible beep is heard and the cooking level indicator stops flashing purple.
5. After the pre-heating, the appliance is ready for use. Open the grill and place the food inside the appliance.


Important:

- Please note that any new batch of food, the pre-heating phase is mandatory.


4 Comments

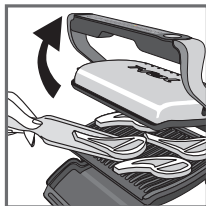

22

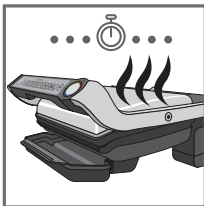

23

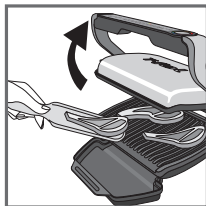

24



25

Remember to always have the grill closed and no food inside in order for the pre-heating to effectively function.

- Then wait for the pre-heating to be complete before opening the grill and place the food inside.

N.B.: if the new pre-heating cycle is carried out immediately after the end of the preceding cycle, the pre-heating time will be reduced.

22-23-24

If you want to cook food to different personal tastes, open the grill and remove the food when it has reached the desired level and then close the grill and continue cooking the other food. The program will continue its cooking cycle until it reaches the 'well done' level.

25 Keep warm function


When the cooking process has ended the appliance will automatically go on the keep warm setting and the cooking level indicator will automatically go red and an audible tone will sound every 20 seconds. If food is left on the grill it will continue to cook, while the cooking plates are cooling. You can stop the audible tone by pressing the "OK" button.

Comment: the safety system will turn the appliance off automatically after a certain amount of time.


Second cooking

If you want to cook more food, please refer to section 21.

5 Cleaning and maintenance

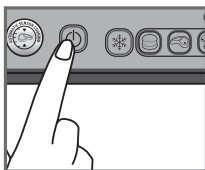


26

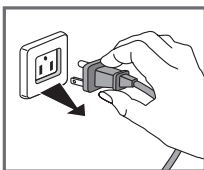

27

26 Press the on/off button to turn off the appliance.



27 Unplug grill from wall outlet.

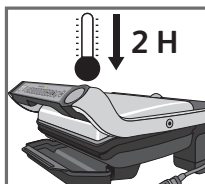


28

28 Allow to cool for at least 2 hours.
To avoid accidental burns, allow grill to cool thoroughly before cleaning.

 
6 Cleaning

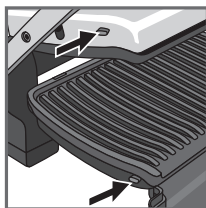

29

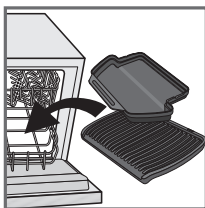


30

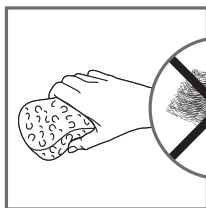


31




32

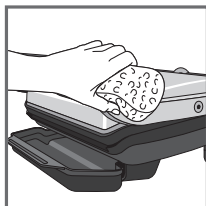

33

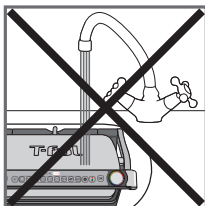

34

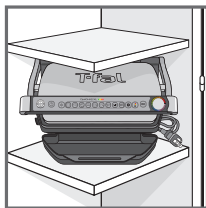

35

29 Before cleaning, unlock and remove the plates to avoid damaging the cooking surface. The drip tray and the cooking plates are dishwasher safe.

30 The appliance and its cord cannot be placed in the dishwasher. The heating elements, visible and accessible parts, should not be cleaned after removing the plates. If they are very dirty, wait until the appliance has completely cooled down and clean them with a dry cloth. If you do not want to clean them in a dishwasher, you can use warm water and a little dishwashing liquid to clean the cooking plates, then rinse thoroughly to remove any residue. Dry thoroughly using a paper towel.

31-32 Do not use metallic scouring pads, steel wool or any abrasive cleaners to clean any part of your grill, only use nylon or non-metallic cleaning pads.

Empty the drip tray and wash in warm water and a little dishwashing liquid, dry thoroughly using a paper towel.













 
33 To clean the grill cover, wipe with a warm, wet sponge and dry with a soft, dry cloth.

34 Do not immerse the body of grill in water or any other liquid.

35 Always make sure grill is clean and dry before storing.













36 Any other servicing should be performed by an authorized service representative.

Troubleshooting guide

Problem	Cause	Solution
Button  lit +  Solid green indicator light + Button  flashing + Button  flashing	<ul style="list-style-type: none"> Switching on the appliance or starting an automatic cooking cycle with food between plates and without preheating (manual mode is automatically activated). 	<ul style="list-style-type: none"> 2 possible options: <ul style="list-style-type: none"> Choose the temperature setting by pressing the  button and then press OK. Allow to cook, but you must monitor the cooking (manual mode). stop the appliance, remove the food, close the appliance properly, re-program the appliance and wait until end of preheating.
The appliance stops during the cycle of pre-heating or cooking.	<ul style="list-style-type: none"> The appliance has been kept open for too long while cooking. The appliance has been idle too long after the end of warm up or keep warm. 	<ul style="list-style-type: none"> Disconnect the appliance from the outlet and leave for 2-3 mins., restart the process. The next time you use the appliance, make sure you open and close it quick for best cooking results. If the problem occurs again contact your local T-fal customer service.
 Flashing white indicator light. +  /  /  button flashing + Discontinue bip The appliance no longer beeps.	<ul style="list-style-type: none"> Appliance failure. Appliance stored or used in a room that is too cold. 	<ul style="list-style-type: none"> Disconnect and reconnect your appliance and immediately restart a preheat cycle. If the problem persists, contact your Customer Service.
After the preheating, I have put my food on the grill but the indicator stays on PURPLE  and the cooking cycle does not start.	<ul style="list-style-type: none"> Your food is thicker than 1.5 inches. 	<ul style="list-style-type: none"> Food must not be thicker than 1.5 inches.
	<ul style="list-style-type: none"> You have not completely opened the grill to place the food. 	<ul style="list-style-type: none"> Completely open the grill then close it.
	<ul style="list-style-type: none"> Not sensing the food. The food thickness too thin, "OK" is flashing. 	<ul style="list-style-type: none"> Confirm the start of the cooking by pressing the  button.
The appliance turns itself to manual mode with flashing red.	<ul style="list-style-type: none"> Preheating time not completely done. 	<ul style="list-style-type: none"> Allow to cook, but you must monitor the cooking (manual mode). Or Stop the appliance, remove the food, close the appliance properly, re-program the appliance and wait until end of preheating.
Flashing  white +  button flashing + Continuous bip	<ul style="list-style-type: none"> Appliance failure 	<ul style="list-style-type: none"> Unplug the product and contact your customer service.





























Tip, especially for meat: the cooking results on the preset programs may vary depending on origin, cut and quality of the food being cooked, the programs have been set and tested for good quality food. Similarly, the thickness of the meat has to be taken into account during cooking; you cannot cook food that is thicker than 4 cm.

Cooking Guide (automatic programs)

Dedicated program	Cooking level color indicator		
			
 Red meat	Rare	Medium	Well-done
 Burger	Rare	Medium	Well-done
 Sandwich	Lightly cooked	Browned	Crispy
 Fish	Lightly cooked	Medium	Well-done
 Poultry			Fully cooked
 Sausage/lamb			Fully cooked
 Pork			Fully cooked
 Bacon	Lightly cooked	Well-done	
 Sea food		Medium	Well-done

Tips: if you like your meat blue rare, you can use 

Cooking Guide (including Manual Mode)

Food	Cooking program	Cooking level		
				
		rare	medium	well-done
Bread	Slices of bread, toasted sandwiches			
	Burger: (after pre-cooking the meat)			
Meat & Poultry	Lamb (boneless)			
	Slice of ham to cook			
	Frozen chicken nuggets 			
	Marinated chicken breast			
	Pork fillet (boneless), pork belly			
	Duck breast			
Fish	Whole trout			
	Tuna steak			
	King prawns (with and without shells on)			
	Shelled prawns			
	Gambas			
Manual mode See specific manual quick start guide	Grilled vegetables and fruits (need to be of same cut and thickness)		4 different temperature settings	

For frozen food, press  before selecting your program.

MANUFACTURER'S WARRANTY

 : www.t-falusa.com / www.t-fal.ca

With a strong commitment to the environment, most of T-fal products are repairable during and after the warranty period. Before returning any defective products to the point of purchase, please call T-fal consumer service directly at the phone number below for repair options. Your help to sustain the environment is appreciated!

The Warranty

This product is guaranteed by T-fal for 1 year against any manufacturing defect in materials or workmanship, starting from the initial date of purchase.

The manufacturer's warranty by T-fal is an extra benefit which does not affect consumer's Statutory Rights.

The T-fal warranty covers all costs related to restoring the proven defective product so that it conforms to its original specifications, through the repair or replacement of any defective part and the necessary labor. At T-fal's choice, a replacement product may be provided instead of repairing a defective product. T-fal's sole obligation and your exclusive resolution under this warranty are limited to such repair or replacement.

Conditions & Exclusions

The T-fal warranty only applies within USA, Canada & Mexico, and is valid only on presentation of a proof of purchase. The product can be taken directly in person to an authorized service center or must be adequately packaged and returned, by recorded delivery (or equivalent method of postage), to a T-fal authorized service center. Full address details for each country's authorized service center are listed on the T-fal website (www.tefal.com) or by calling the appropriate telephone number listed below to request the appropriate postal address.

T-fal shall not be obligated to repair or replace any product which is not accompanied by a valid proof of purchase.

This warranty will not cover any damage which could occur as a result of misuse, negligence, failure to follow T-fal instructions, use on current or voltage other than as stamped on the product, or a modification or unauthorized repair of the product. It also does not cover normal tear and wear, maintenance or replacement of consumable parts, and the following:

- using the wrong type of water or consumable
- scaling (any de-scaling must be carried out according to the instructions for use);
- ingress of water, dust or insects into the product;
- mechanical damages, overloading
- damages or bad results due to wrong voltage or frequency
- accidents including fire, flood, lightning, etc
- professional or commercial use
- damage to any glass or porcelain ware in the product

This warranty does not apply to any product that has been tampered with, or to damages incurred through improper use and care, faulty packaging by the owner or mishandling by any carrier.

The T-fal manufacturer's warranty applies only for products purchased and used in USA, Canada & Mexico. Where a product purchased in one country and then used in another one:

- a) The T-fal guarantee duration is the one in the country of usage of the product, even if the product was purchased in another listed country with different guarantee duration.
- b) The T-fal guarantee does not apply in case of non conformity of the purchased product with the local standards, such as voltage, frequency, power plugs, or other local technical specifications
- c) The repair process for products purchased outside the country of use may require a longer time if the product is not locally sold by T-fal
- d) In cases where the product is not repairable in the new country, the T-fal guarantee is limited to a replacement by a similar product or an alternative product at similar cost, where possible.

Consumer Statutory Rights

This T-fal manufacturer's warranty does not affect the statutory rights a consumer may have or those rights that cannot be excluded or limited, nor rights against the retailer from which the consumer purchased the product. This warranty gives a consumer specific legal rights, and the consumer may also have other legal rights which vary from State to State or Country to Country or Province to Province. The consumer may assert any such rights at his sole discretion.

Additional information

Accessories, Consumables and end-user replaceable parts can be purchased, if locally available, as described in T-fal internet site.

U.S.A.	GROUPE SEB USA 2121 Eden Road Millville, NJ 08332
	800-395-8325

* T-fal is a registered trademark of Groupe SEB

EN 2 - 16
FR 17 - 31

Ref. 2100091497
Subject to modifications