 




Brennan Entryway Shelf
CF6004

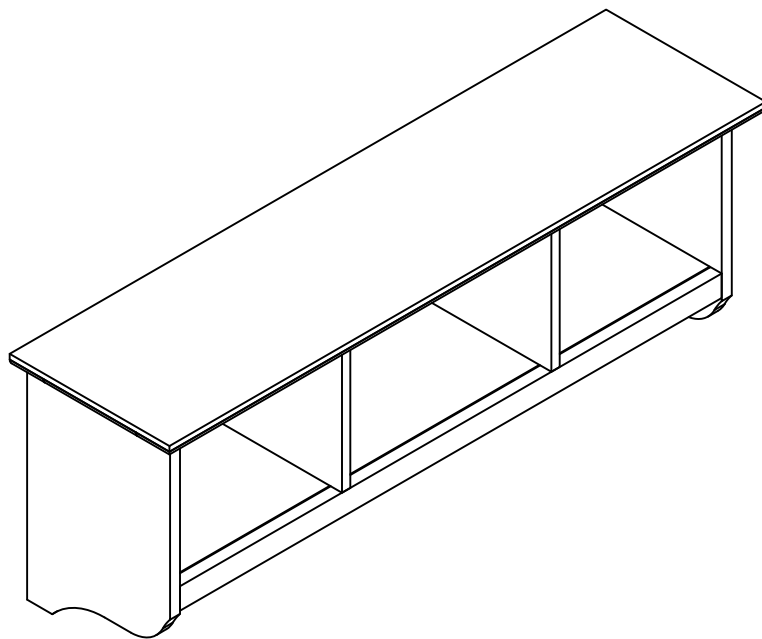

 
 
 
 
 
 
 
 
 



Congratulations! You have purchased a stylish piece of Crosley Furniture. We strived to provide fine furniture products, built with quality materials and hand finished details. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.

 
 


 

 
 
Should you experience any missing or damaged parts, **do not return to the store.** Please visit our website **www.Crosleyfurniture.com**, or contact us directly at 800-815-4796.

Care: Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, then buff with a dry soft clean cloth.

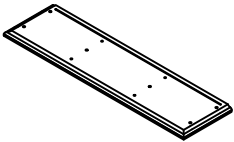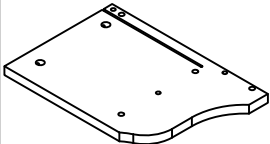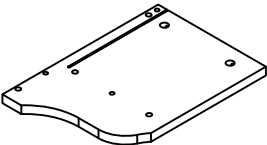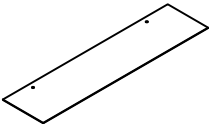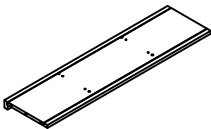PART LIST

A		B		C		D		E	
Top 1 PC		Left Side Panel 1 PC		Right Side Panel 1 PC		Left Partition Panel 1 PC		Right Partition Panel 1 PC	
F		G		H		I		J	
Back Panel 1 PC		Upper Back Rail 1 PC		Lower Back Panel 1 PC		Bottom Panel 1 PC		Support Plate 1 PC	

HARDWARE LIST

1		2		3		4		5	
Ø8*30 Wood Dowel 16PCS		Cam Bolt 15 PCS		Cam Lock 15 PCS		Hook 3 PCS		Round Head Screw 6 PCS	
6		7		8					
1-1/4"*Ø4"*D8mm Short Flat Head Screw 4 PCS		38mm*Ø4"*D8mm long round head screw 4 PCS		Wall Anchor 4 PCS					

 
ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly. However a screw gun can assist with mounting.






Phillips Head Screw Driver

Step 1. Insert Cam Bolts (Part#2) into Top (A), Left Side Panel (B), Right Side Panel (C) and Bottom Panel (I).

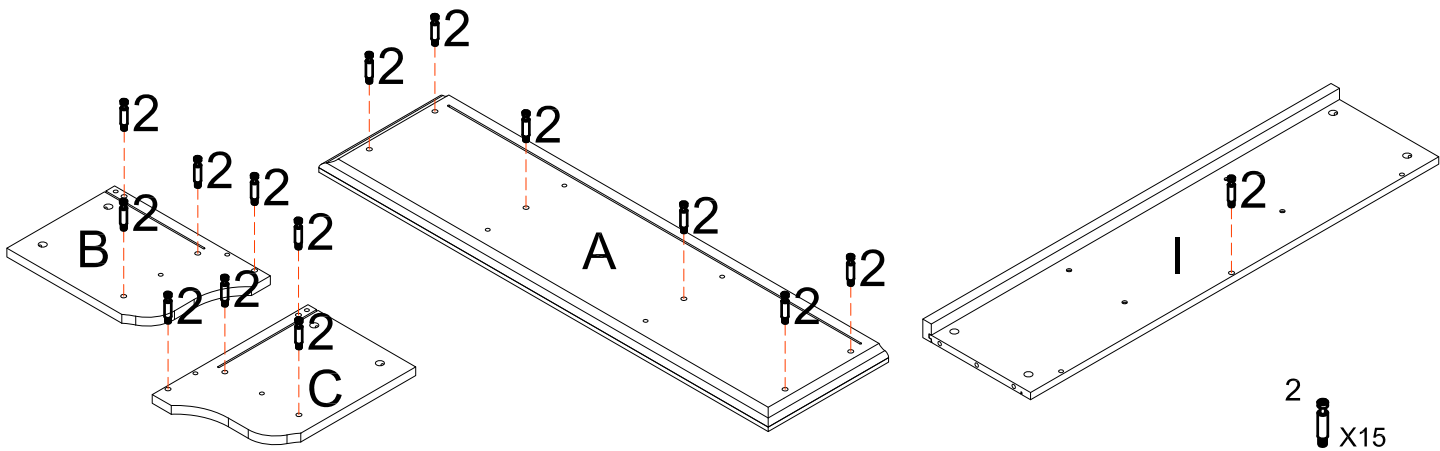


   Step 2. Attach Lower Back Panel (H) to Bottom Panel (I) using Wood dowels (Part#1) and Cam Locks (Part#3).



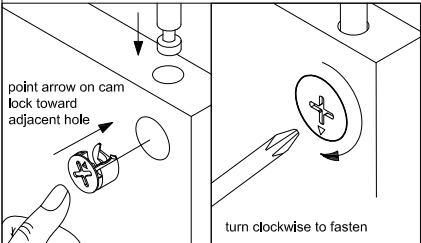
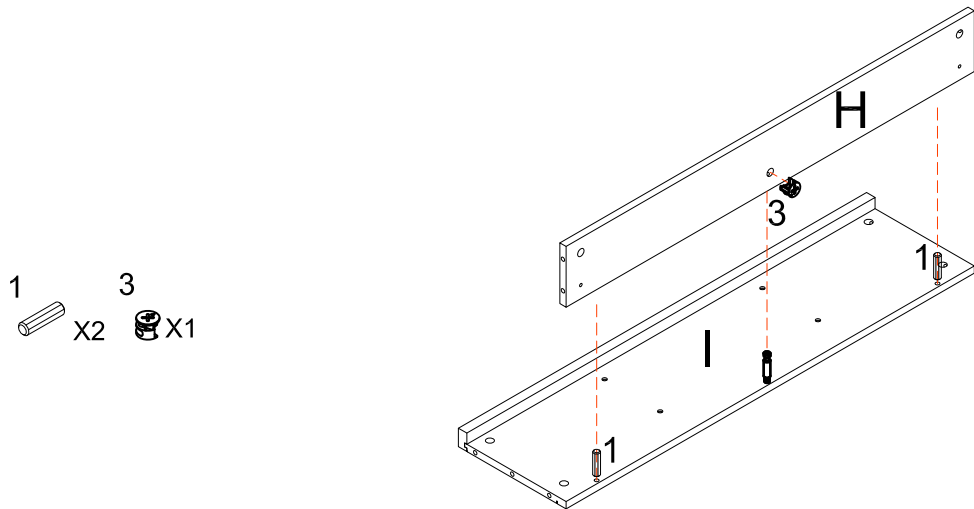


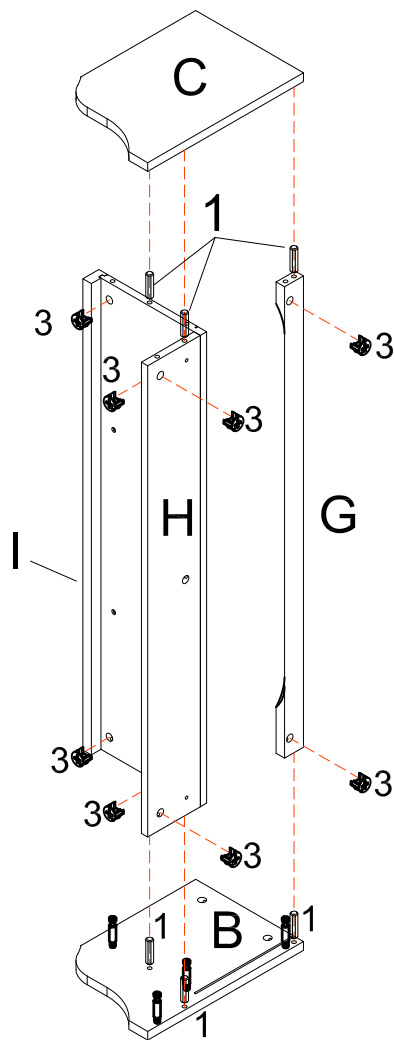

 
Step 3. Attach assembled parts (H & I) and Upper Back Rail (G) to Left Side Panel (B) using Wood dowels (Part#1) and Cam Locks (Part#3). Then attach Right Side Panel (C) to Parts (H, I & G) using Wood dowels (Part#1) and Cam Locks (Part#3).



   
 
Step 4. Attach Left Partition Panel (D) and Right Partition Panel (E) to Bottom Panel (I) using Wood Dowels (Part#1) and Short Flat Head Screws (Part#6). Insert Back Panel (F) into grooves of Left Side Panel (B), Right Side Panel (C) and Bottom Panel (I).

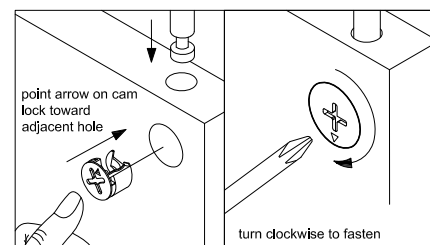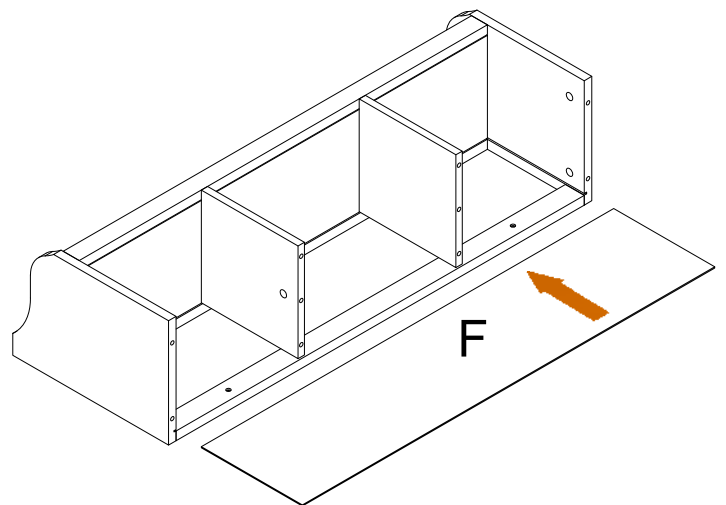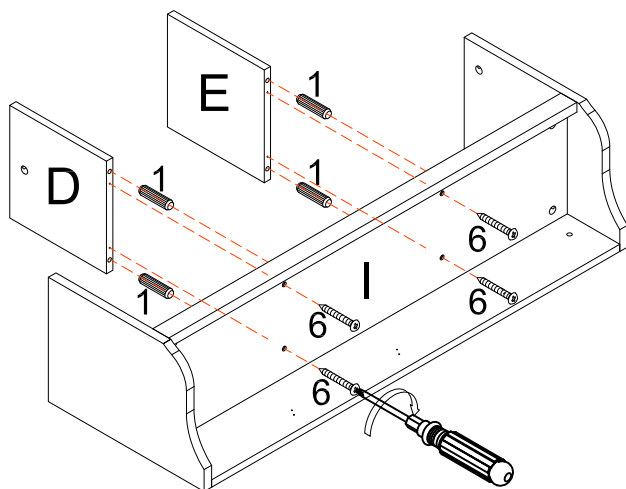

 Step 5. Attach Top (A) to assembled parts (B, C, D & E)using Wood dowels (Part#1) and Cam Locks (Part#3).

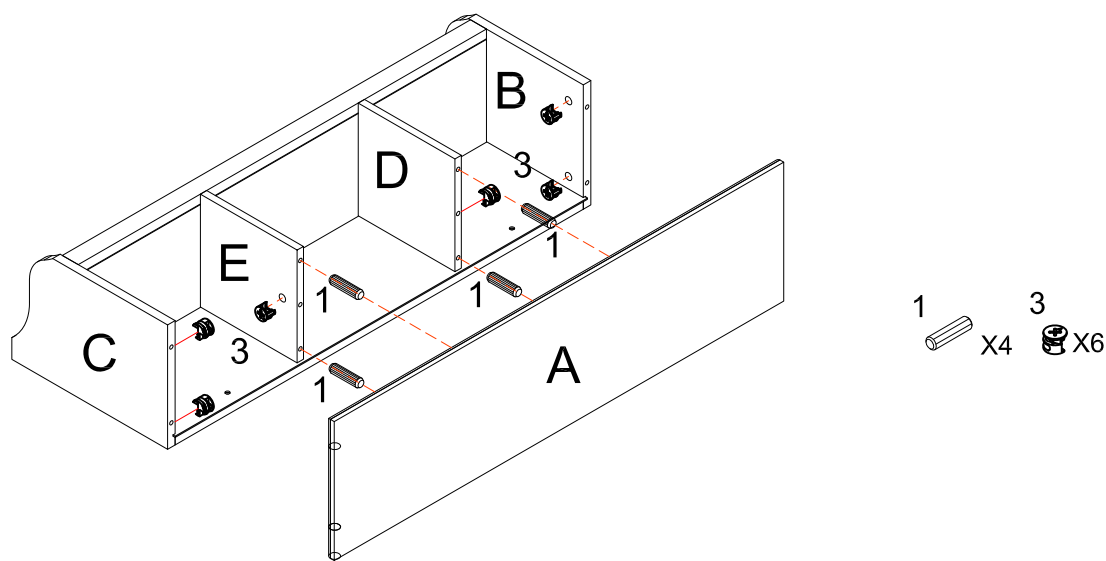

  Step 6. Screw Hooks (Part#4) into pre drilled holes on Lower Back Panel (H) using Round Head Screws (Part#5).

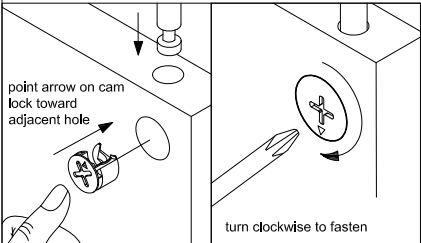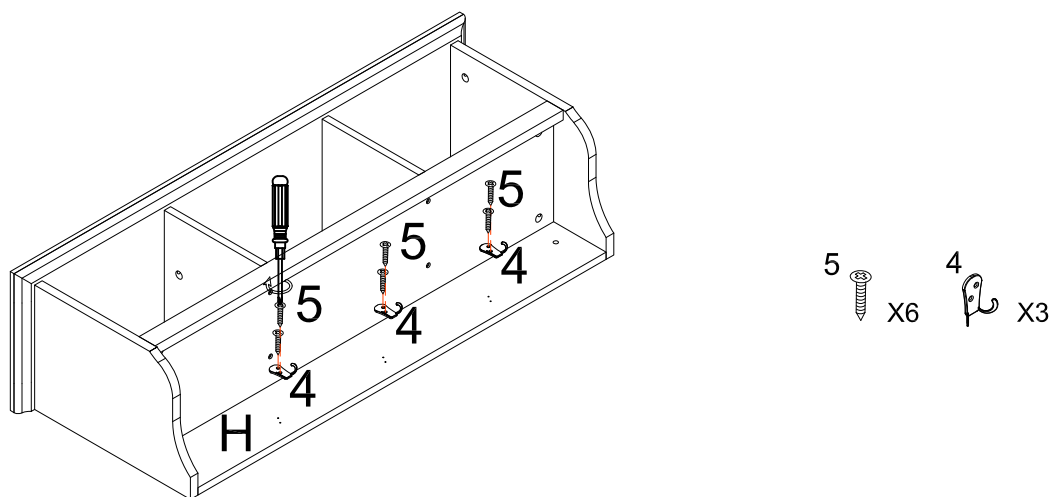

Step 7. Hold the Support Plate (J) in the desired location of the wall unit. This plate will be about 2" lower than the top of the wall unit. Making sure the Support Plate (J) is level, use a pencil to mark the anchor locations using the Support Plate (J) screw holes as a guide. We recommend using a leveler to make sure the Support Plate (J) is oriented correctly.

 
- Drill two 11/32" holes in these marked spots and tap the Wall Anchors (Part #8) into the drilled holes.

Secure the Support Plate (J) to the Wall Anchors (Part #8) with Screws (Part #7). See Image.

- Mount the completed unit onto the Support Plate (J). The back of the unit has a recessed area that will hook on to the Support Plate (J). Use a pencil to mark the 2nd set of anchor locations using the holes in the wall unit as a guide. See Image.

- Remove the wall unit and drill two 11/32" holes at the pencil marks, and tap the Wall Anchors (Part #8) into the holes.

- Remount the wall unit and secure it to the Wall Anchors (Part #8) with Screws (Part #7). See image.

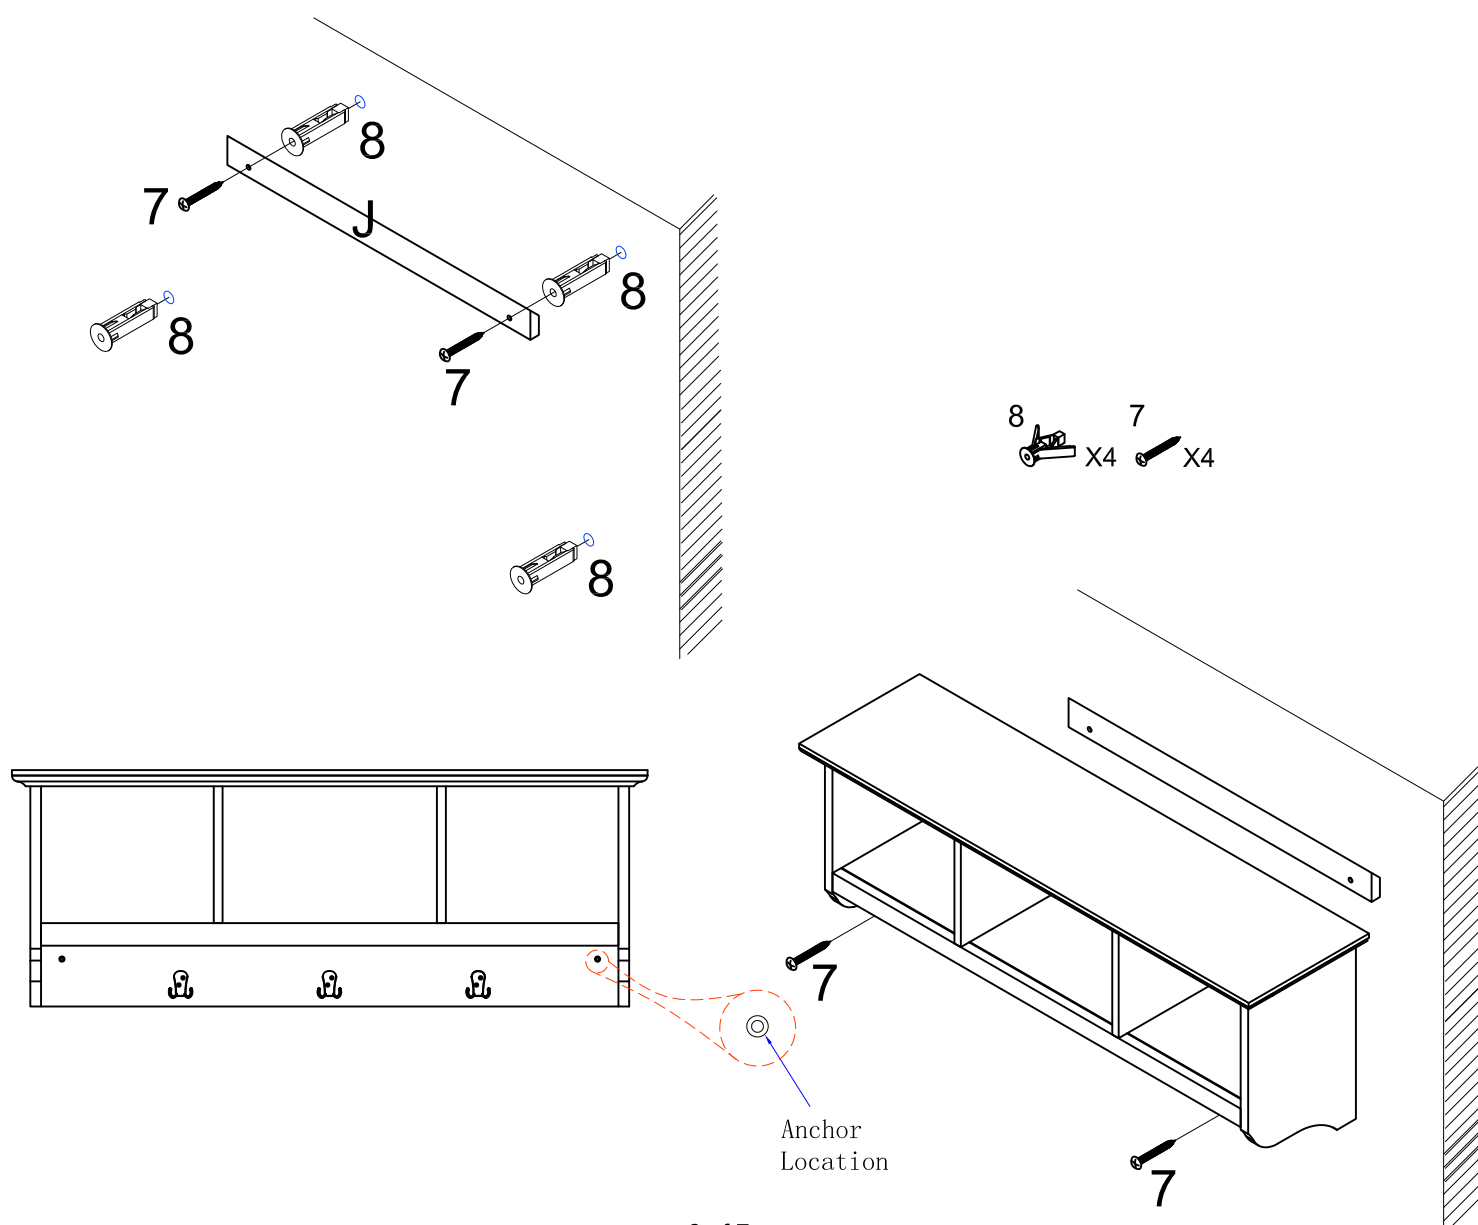



Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.

Should you experience any missing or damaged parts, do not return to the store. Please visit our website **[www . Crosleyfurniture . com](http://www.Crosleyfurniture.com)** , or contact us directly at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.