

# Bench

## Assembly instructions



### Pre-Assembly :

- Please read all instructions carefully and completely before assembly.
- Remove all parts and hardware from box along with any protective packaging.
- Do not discard any contents until after assembly is complete to avoid discarding small items accidentally.
- For your convenience and ease, assembly by two people is strongly recommended.

### Parts included :


- (1) bench top (A)
- (4) Feet with hanger bolts (B)

### Hardware Included :

- (8) Nuts (C)
- (8) Flat washers (D)

### Tools Needed

- wrench

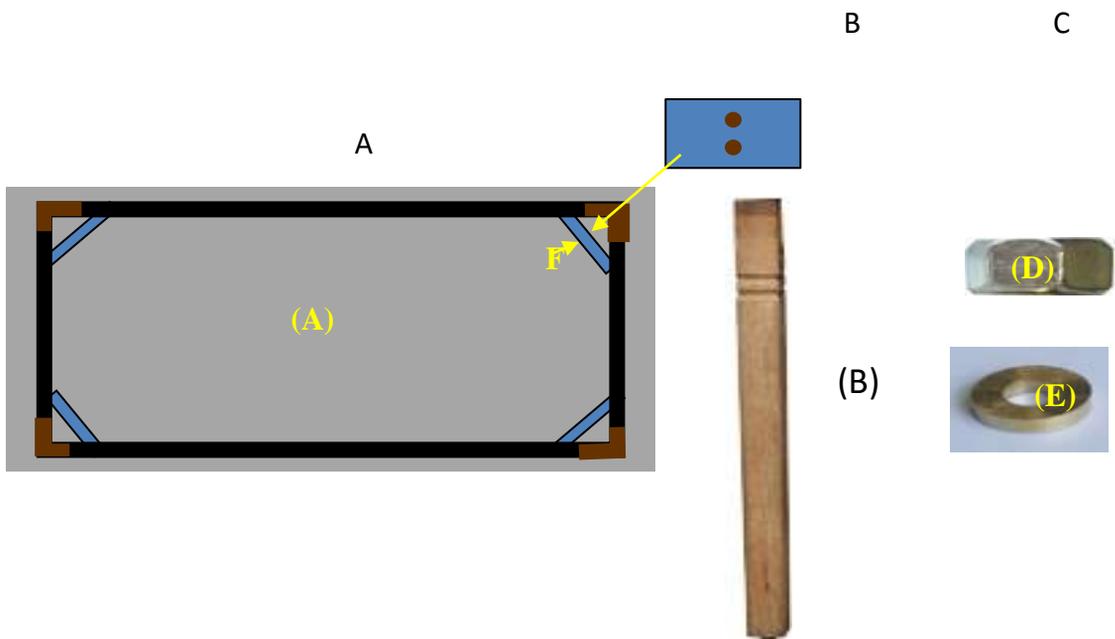

### Assembly Instructions :

1. Carefully lay the bench top ( A ) upside down on a carpeted or scratch-free surface.
2. Insert the hanger bolts on the 4 legs into the pre-drilled holes on the wood frame
3. Insert the flat washer ( D ), lock washer and nut ( C ) into long bolt. Do not tighten yet.
4. Tighten all nuts with wrench. **DO NOT OVER-TIGHTEN.**

### Care instructions:

- This items is intended for indoor use only. To prevent fading, avoid placing item in direct sunlight.
- To clean, use any furniture polish such as “Pledge” with a soft cloth.
- Wipe spills immediately.
- Avoid the use of cleaners or abrasives as they may damage the finish.
- To prevent marking, do not write directly on surface.
- To prevent discoloring, do not use rubber-based place mats.
- Do not place hot plates/cups or cold drinks directly on the surface.
- KD Furniture should be tightened periodically to avoid damage. **DO NOT OVER-TIGHTEN.**

