FRANKE TRIFLOW

Franke Kitchen Systems - Luxury Products Group

The filter cartridge needs to be changed every six months. At this stage the 'Matrix' core begins to lose its effectiveness against chlorine and other chemicals. This normally coincides with a visible reduction in the pure water flow, as the ceramic shell begins to clog with contaminants.

Changing the cartridge is a simple matter:

- 1. Shut-off the mains water supply. A stop valve was supplied with the system for this purpose, and will be found located on the adjacent pipework.
- 2. Turn the Pure lever on the faucet to the ON position. This will confirm that the water supply is turned off, and release the pressure in the system.
- 3. Conveniently position a suitable receptacle to catch residual water from the housing. Lift the filter unit from its retaining bracket. Holding Cap 'B' press down on the safety clip and unsrew Housing 'A' a quarter turn in the direction of the arrow shown. Slide housing off of filter cartridge and place to one side.
- 4. Hold the Cap 'B' firmly with one hand, unscrew the Cartridge 'C'. Discard the old cartridge with your household waste, either wrapped in newspaper, or placed in a polythene bag.
- 5. Wash Housing 'A' in warm soapy water, then rinse well.
- 6. Wet the two 'O' seals 'D' on the threaded end of the new cartridge, then screw it firmly into the female thread in the Cap 'B'.

Please note: The cartridge is fragile and may break if mishandled or dropped.

- 7. Fit Cap 'B' and Housing 'A' back together and turn a quarter turn in the opposite direction of the arown shown to lock.
- 8. Replace the unit on the bracket and turn on the water supply.
- 9. Run the filtered water for 2 minutes to flush the system, and check carefully for leaks. The system should now be ready for use.

To Winterize the Unit

If you plan to be away from home for extended periods, or the filter housing may be subject to the risk of freezing, carry out the procedures 1, 2, 3, 5 and 7 as above.

When the risk of freezing subsides and you wish to use the system again, open the mains supply to the filter. Run the filtered water for 2 minutes to flush the system and check carefully for leaks. The system should now be ready for use. **Allowing the unit to freez will invalidate the product warranty.**



Franke Kitchen Systems Luxury Products Group 3050 Campus Drive, Ste 500 Hatfield, PA 19440 USA Phone: 215.997.3259 / Fax: 888-685-0007 fks.filter@franke.com www.frankeksd.com

