
 
# Assembly Instructions

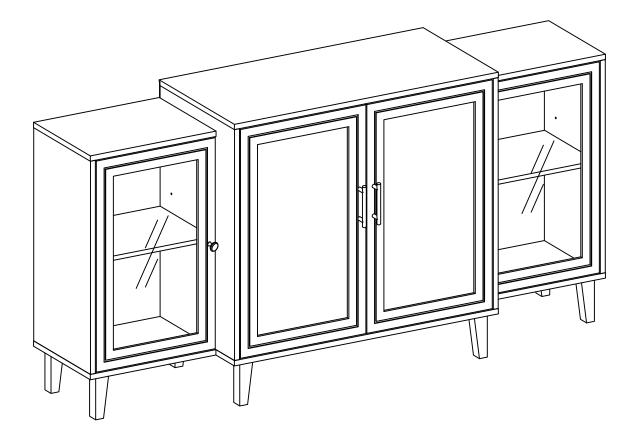

Please visit our website for the most current instructions, assembly tips, report damage, or request parts.

#### **General Assembly Guidelines**

- I. Ensure that all parts and hardware are available before beginning assembly.
- || Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.



 
In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.




M. A Phillips head screwdriver is required for the assembly of this product.




MI. Power tools should not be used to assemble this product.




MII. Concealed hinges are three-way adjustable.

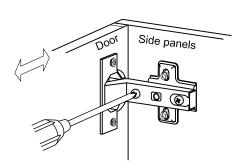


Horizontal by screw adjustment

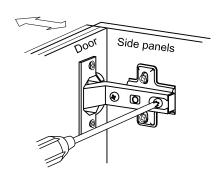

In-and-Out by loosening the hinge-arm mounting screw or via cam adjustment

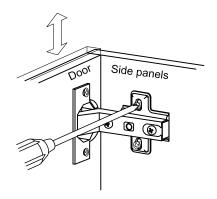

Vertical
Via slots in the mounting
plate or via cam adjustment

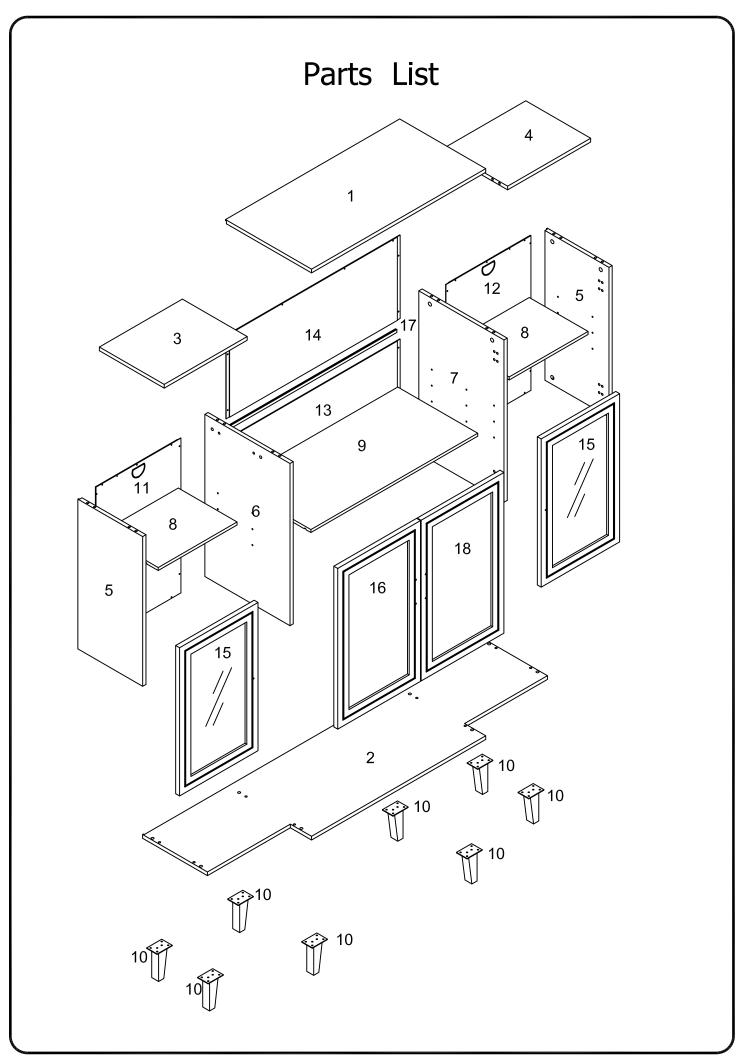


#### Hardware List

Α		Ø8x30mm	Wooden dowel	20	pcs
В	(-(8)	Ø6x32mm	Cam bolt	20	pcs
С		Ø15x9.5mm	Cam lock	20	pcs
D			Shelf support pin	12	pcs
Е	<b>(3)</b>	Ø3x12mm	Screw	34	pcs
F	0		Sticker	20	pcs
G	6		Handle	2	pcs
Н	(Symmum)	Ø4x20mm	Handle Bolt	6	pcs
J			Europe Hinge	8	pcs
K	(Dimining)	Ø4x12mm	Screw	48	pcs
L			Glue tube	2	pcs
M			Handle	2	pcs
N	<b>(3)</b>	Ø3.5x14mm		32	pcs
Р	0000		Rubber pad	1	set


#### Hardware List

 Q	<	Ø4x12mm	Screw	2	pcs
R	<	Ø4x25mm	Screw	2	pcs
S			Plastic strap	2	pcs
Т			Nut	2	pcs




Philips head screwdriver required for assembly (not included)


The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

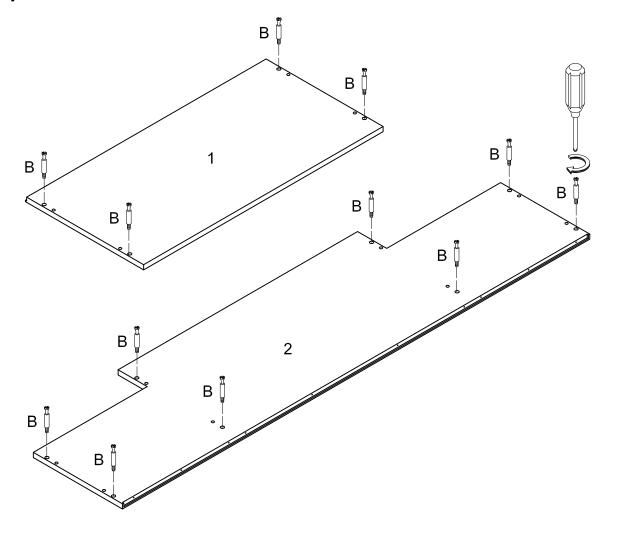


Securely screw the cam bolts (B) on parts (1 and 2) with a Philips screwdriver as per diagram .

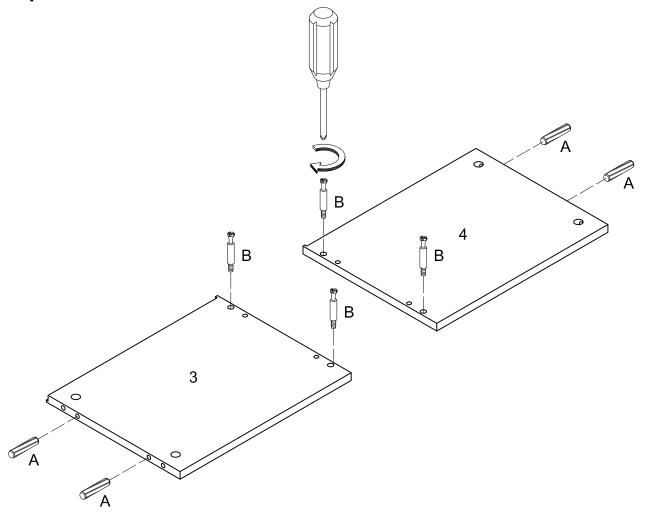


Insert wooden dowels into parts (3,4). Securely screw the cam bolts (B) on parts (3 and 4) with a Philips screwdriver as per diagram.

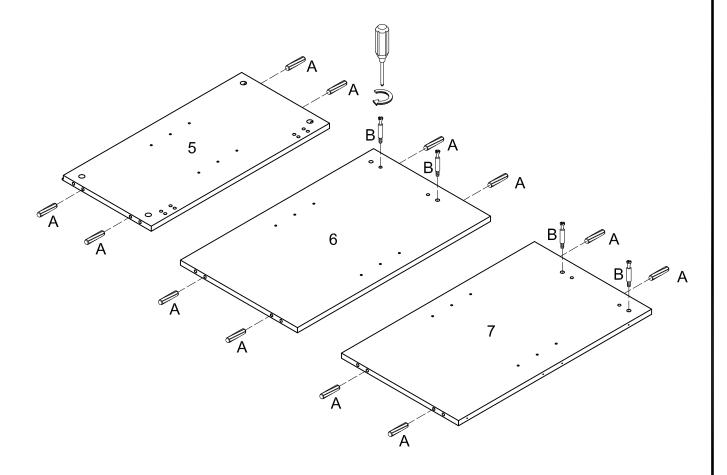


Insert wooden dowels into parts (5,6,7). Securely screw the cam bolts (B) on parts (6 and 7) with a Philips screwdriver as per diagram.

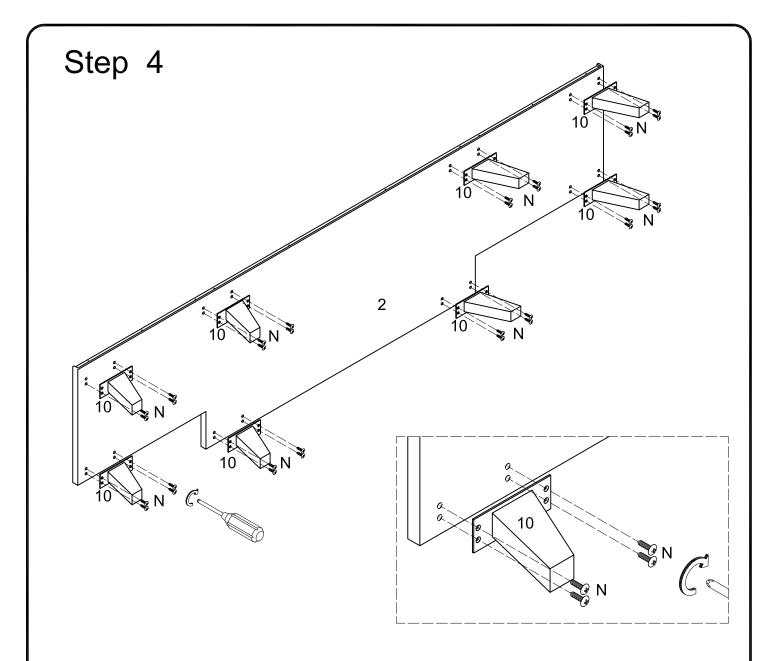


 Using screw (N) attach the leg (10) to bottom panel (2) with a Philips screwdriver as per diagram. Please kindly noted the legs placed the same direction as the AI shows .




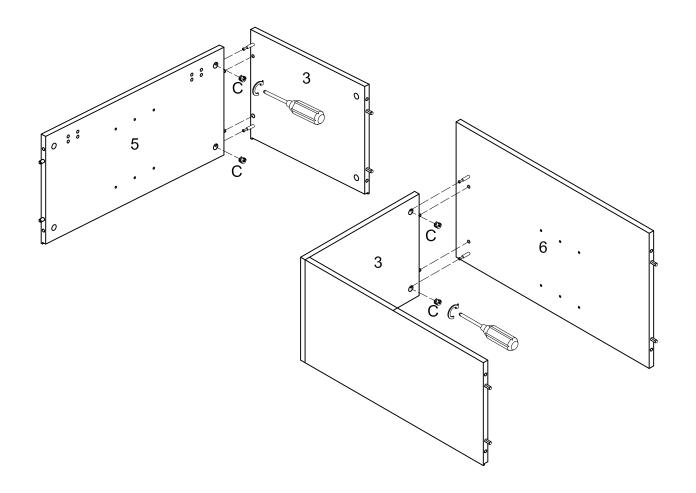


Using cam locks(C) attach part (3) to part(5) and then using cam locks(C)attach the other side of part (3) to part (6)with a Philips screwdriver as per diagram.

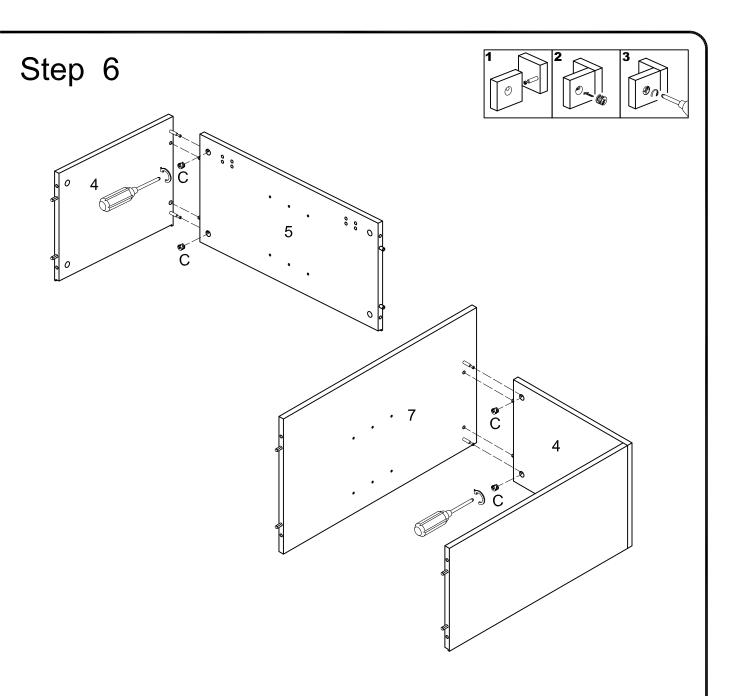


 Using cam locks(C) attach part (4) to part(5) and then using cam locks(C)attach the other side of part (4) to part (7)with a Philips screwdriver as per diagram.




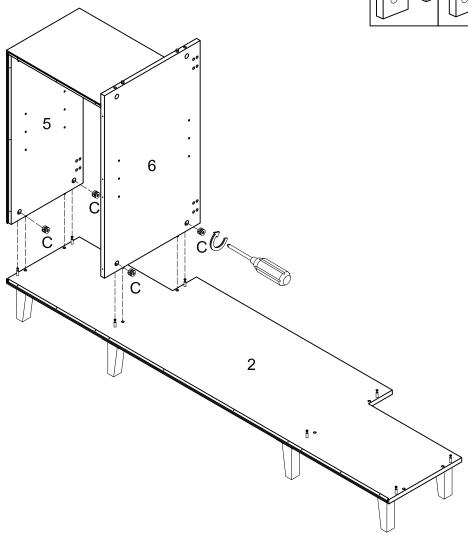


Using cam locks (C) attach parts(5,6) to part (2) with a Philips screwdriver as per diagram.

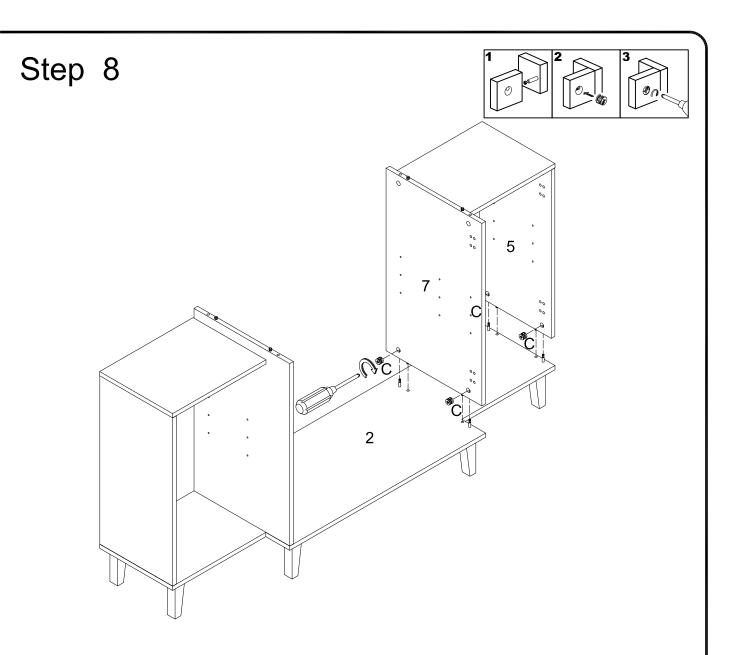


 Using cam locks (C) attach parts(5,7) to part (2) with a Philips screwdriver as per diagram.



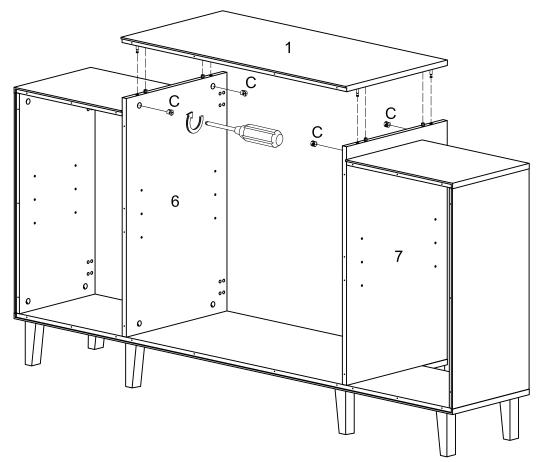


Align and attach part(1) with parts(6,7) with cam locks (C) with a Philips screwdriver as per diagram.

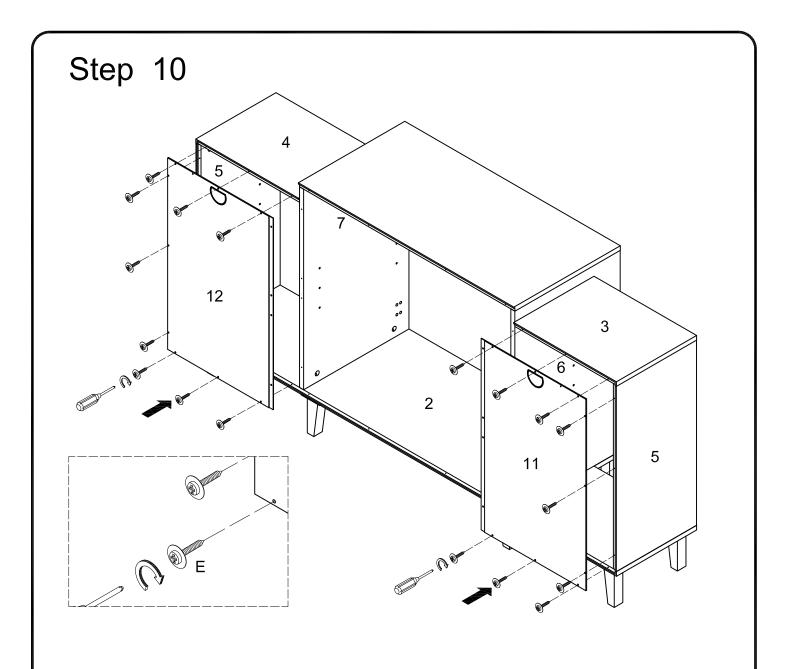


Using screw (E) secure part(11) to parts (2,3,5);part (12)to parts (2,4,5) with a Philips screwdriver as per diagram.


Step 11

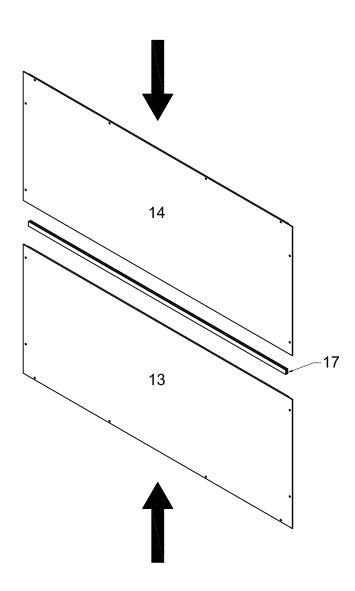


Attach parts(13,14) with part (17) as per diagram

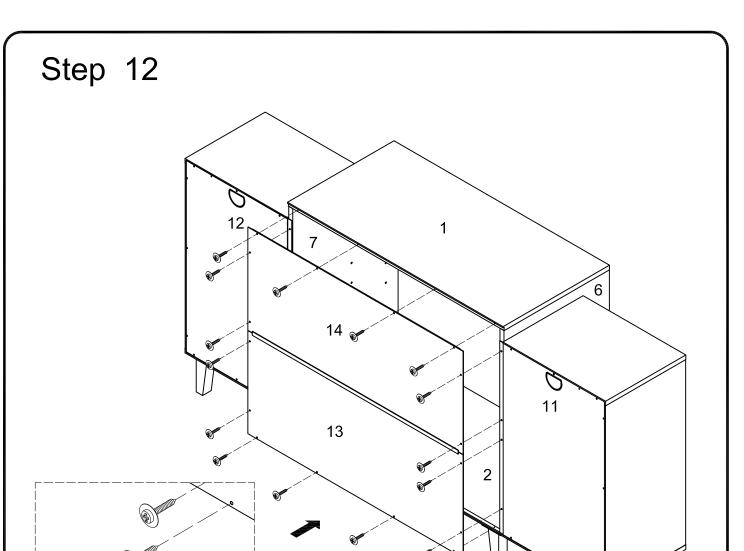


Using screw (E) secure part (13) to parts (2,6,7,11,12),part (14) to parts(1,6,7,11,12) with Philips screwdriver as per diagram.

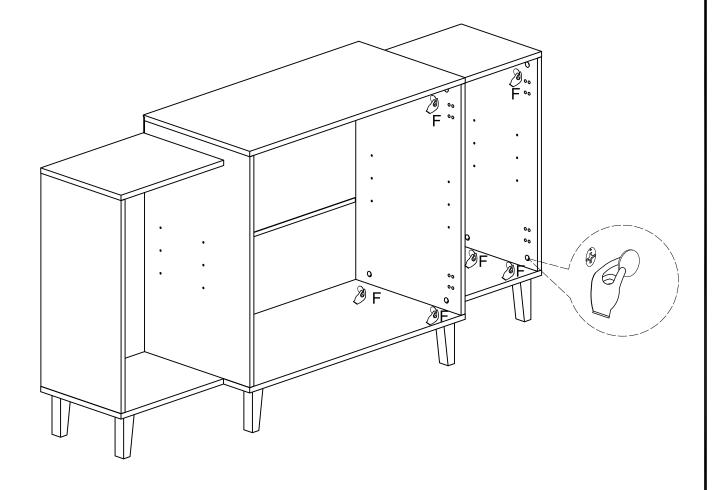


Using sticker (F) cover the cam lock holes as per diagram.

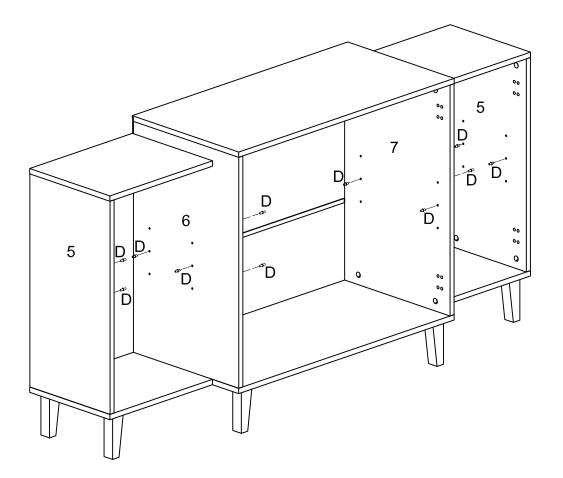


Insert shelf support pin (D) into parts (5,6,7) as per diagram .

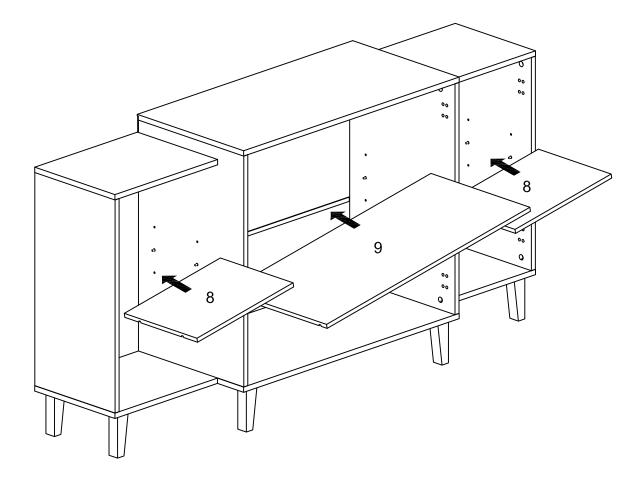


Make sure you place the four shelf pins in the same level so the shelf is not tilted . Tilt and rest the adjustable shelves (8,9) onto the shelf support pin (D)as per diagram .

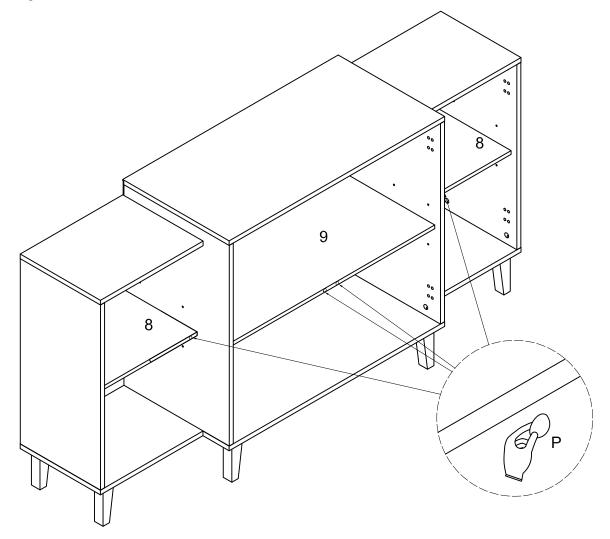


Stick the rubber pad on front of the adjustable shelves (8,9) as per diagram .

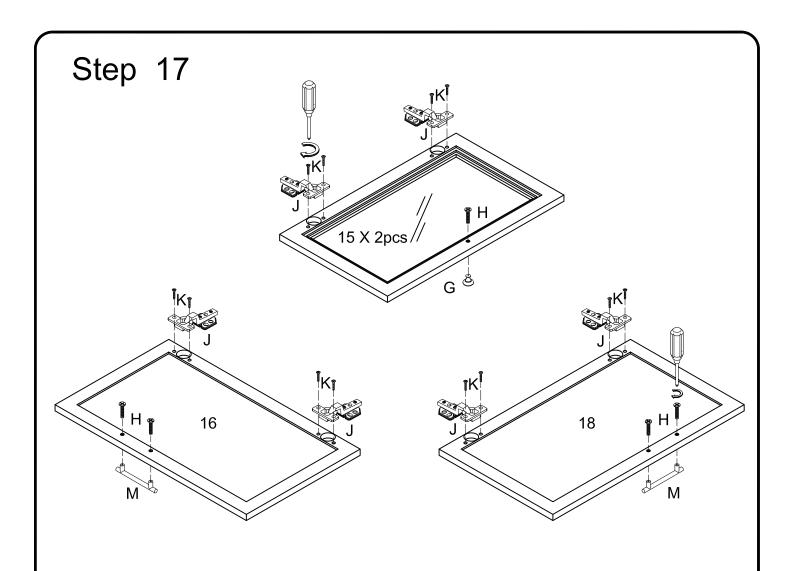


Using handle bolt (H) secure handle (G) to part(15); handle (M) to parts (16,18), then using screw (K) secure Europe hinge (J) to parts (15,16,18) with a Philips screwdriver as per diagram.

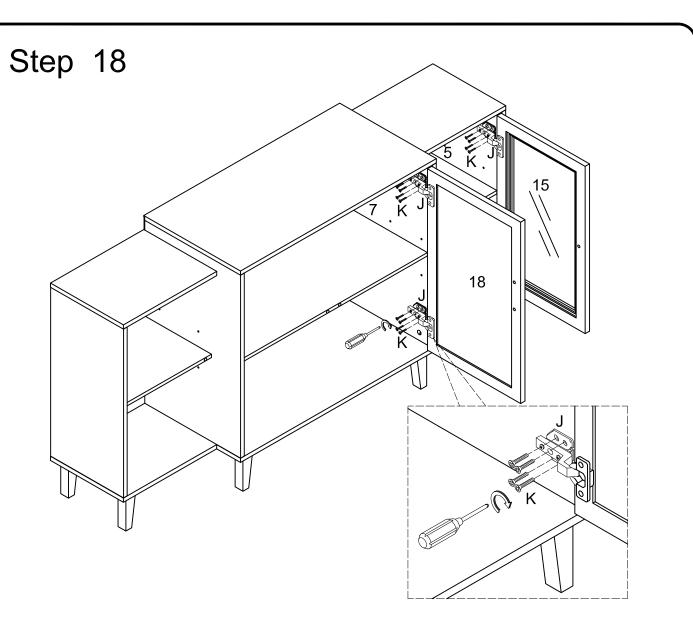


Using screw (K) secure Europe hinge (J) to parts (5,7) with a Philips screwdriver as per diagram.

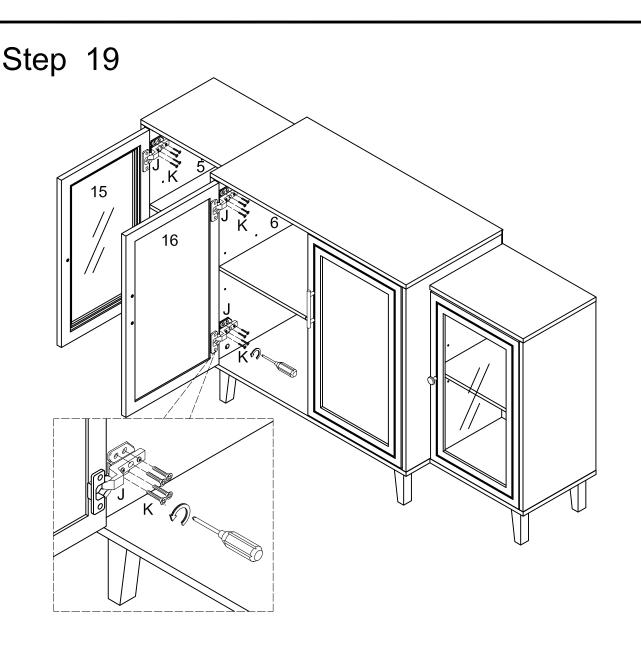

Using screw (K)secure Europe hinge (J) to parts (5,6)with Philips screwdriver as per diagram. After assembled the four doors . please close and open the doors to make sure they are align and shut correctly ,if necessary adjust the screw (K) for a good fit .

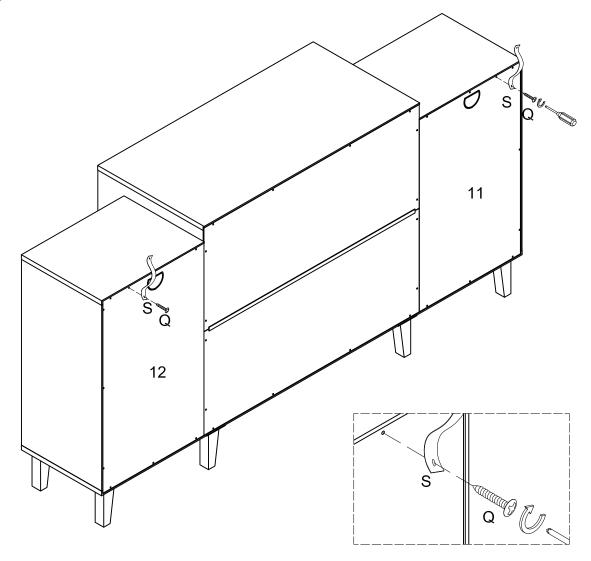


Using screw (Q) secure the part (S)to back panels (11,12) a Philips screwdriver as per diagram.

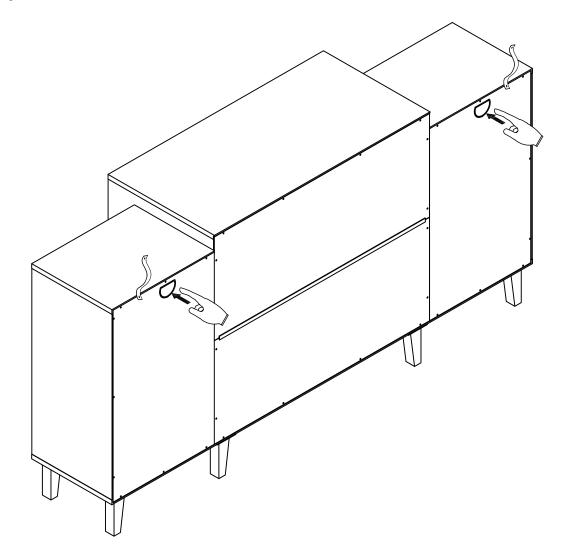


Take out the wooden panel of the faux cable holes if necessary .


#### **WARNING**

 

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

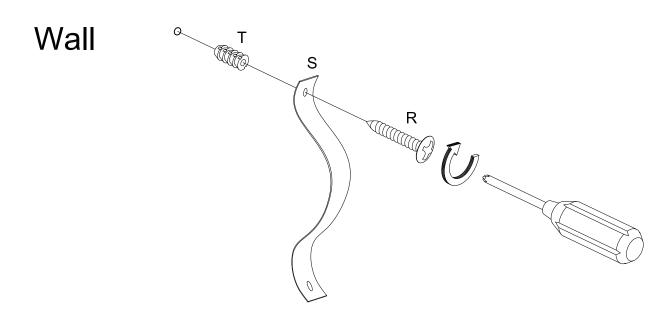

Insert the plastic nut (T) into the wall and using screw (R) fix the other side of strap (S) with nut (T)in the wall .The unit is now ready for use .

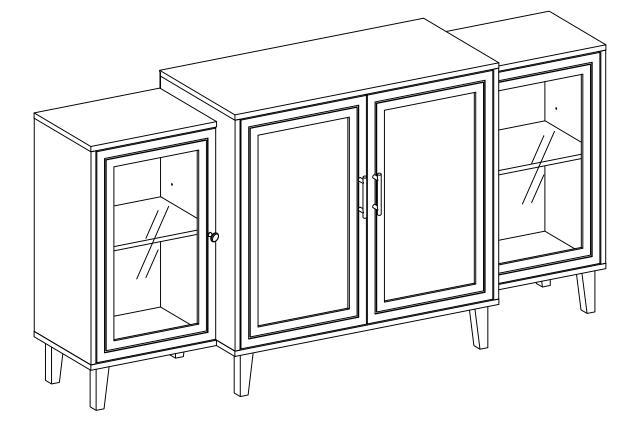

Final Assembly