
76" Sofa

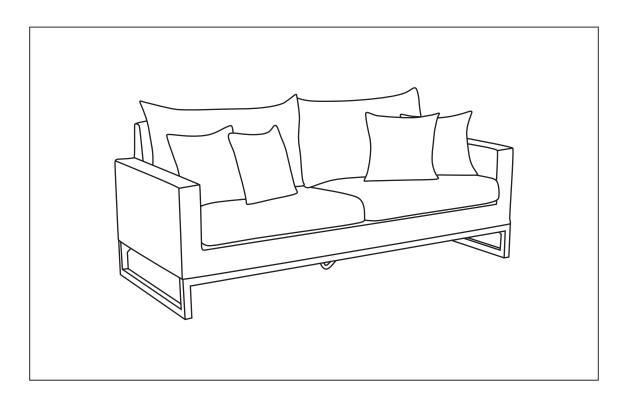

ASSEMBLY INSTRUCTIONS


IMPORTANT, RETAIN FOR FUTURE REFERENCE. READ CAREFULLY.

PARTS LIST

NO.	PICTURE	PART DESCRIPTION	QTY.
A		Sofa	1
В		Sofa legs	2
С		Support bar	2
D		Middle leg	1
E	(1)	Bolt (M6*50)	6
F		Bolt (M6*15)	6
G		Washer (ø15*ø8.5*1.5)	12
н		#4 Allen wrench	1


Step 1.


ASSEMBLE SOFA LEGS- Insert each side of the support bars (C) into both sofa legs (B). Use washers (G) and bolts (F) to secure sofa legs together using the allen wrench (H).

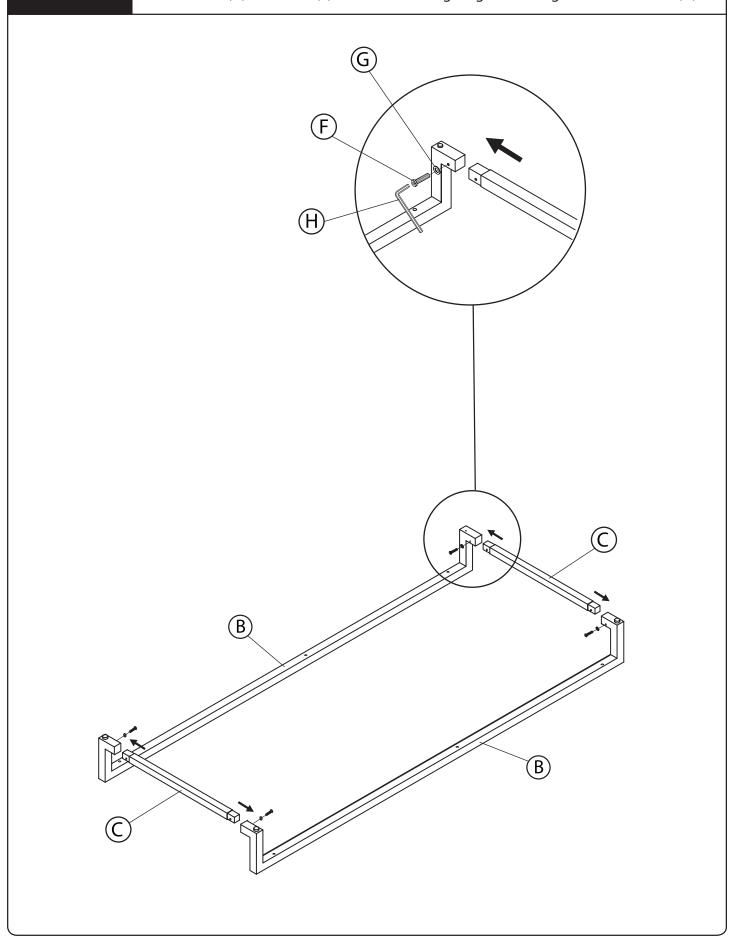

Step 2.


ATTACH SOFA LEGS - With sofa (A) upside down, place the assembled sofa feet (B) on top of sofa. Fasten sofa feet to the sofa using washers (G), bolts (E), and allen wrench (H).

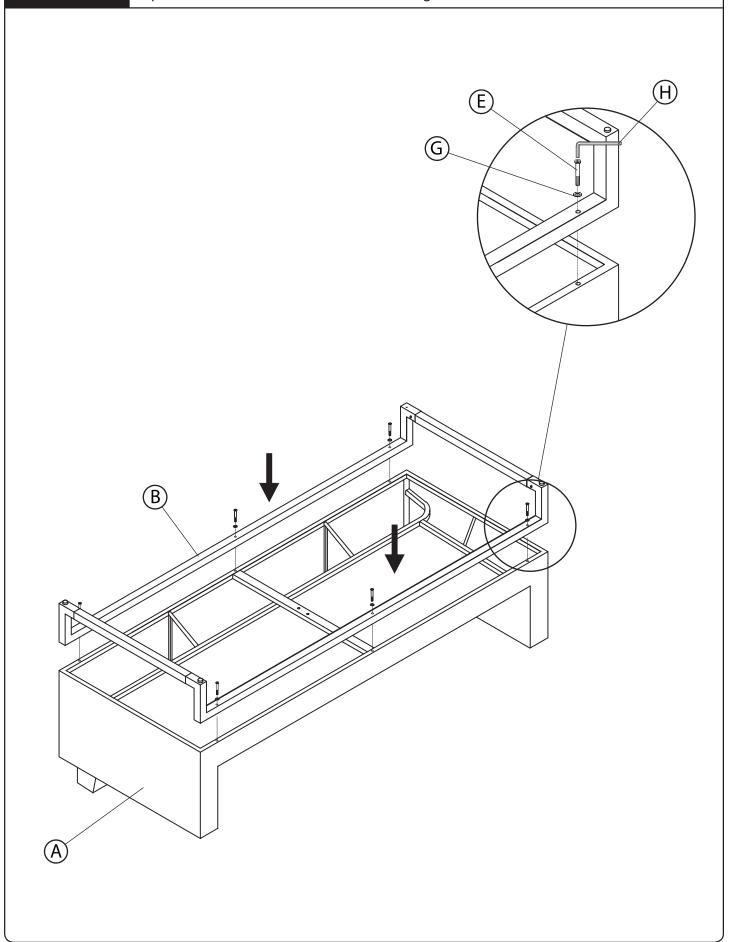

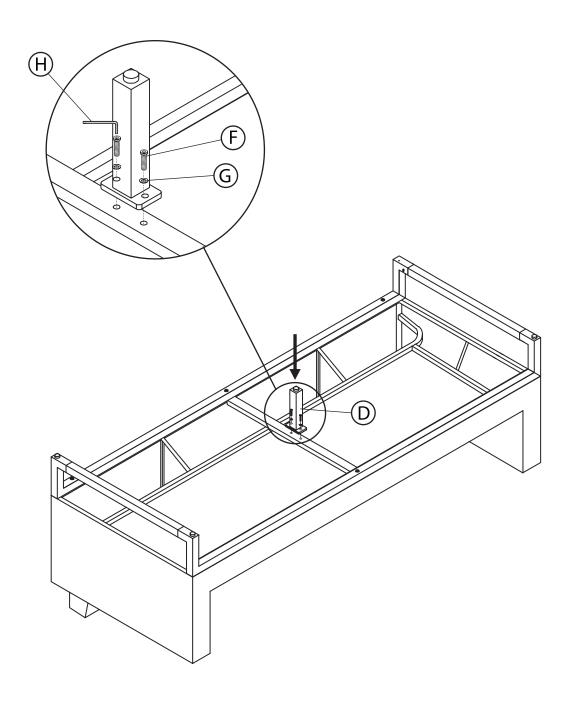

Care and Maintenance

All outdoor furniture is subject to UV rays and weather elements. In order to keep your furniture as long lasting and vibrant as possible, we advise using furniture covers or storing the furniture when not in use.

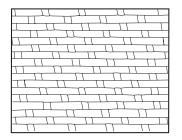


WICKER

Simply washing your wicker with a mild detergent and protecting it as much as possible by covering and or storing it when not in use for long periods of time is sufficient.




ALUMINUM FRAMES

furniture incorporates aluminum powder coated frames that are designed to require minimum maintenance. Avoid letting too much dirt build up by cleaning with mild soap and water. Never leave furniture standing in water.

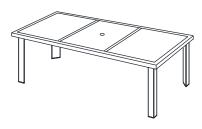

STONE TOPS/TABLE TOPS

 Spills should be wiped up quickly to avoid any staining on the surface. Regular cleaning with mild soap and water with a sponge or soft scrub brush is all that is required. Storing or covering your natural stone top when not in use for extended periods of time is recommended.



FABRICS

Wipe off spills with a cloth and water. fabrics designed to protect and last for several years. are treated with a proprietary water and stain repellent.