


ASSEMBLY GUIDE



PART



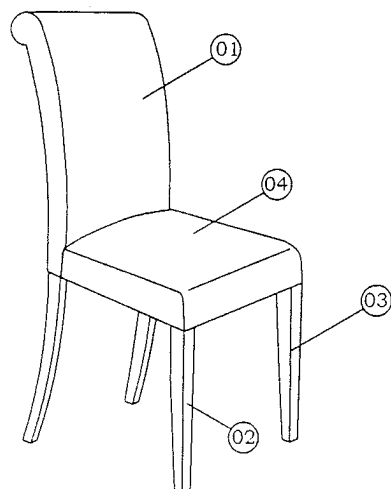


- ① BACK FRAME
- ② LEFT LEG
- ③ RIGHT LEG
- ④ CUSHION SEAT

We suggest that you spend a short time reading through this leaflet and then follow the simple step by step instructions.

Do not throw away any of the packaging until you have checked that you have all the component parts and fittings.


Please dispose of the packaging carefully once you have finished.

HARDWARE LIST


NO	DESCRIPTION	QTY
A	JCBC SCREW 90mm 	4
B	JCBC SCREW 55mm 	5
C	FLAT WASHER 	9
D	SPRING WASHER 	8
E	SHORT ALLEN KEY M4 	1

* NOTE *

DO NOT TIGHTEN ALL THE SCREWS UNTIL THE CHAIR HAS BEEN PUT ON A FLAT SURFACE TO ADJUST & LEVEL ALL THE LEGS SO THAT THEY DO NOT WOBBLE. ONCE ADJUSTED THEN TIGHTEN ALL THE SCREWS.

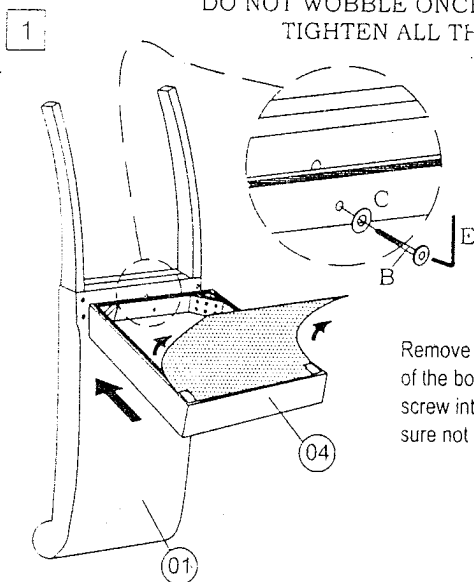


Remove the black woven on bottom of the box seat and fix the center screw into the back frame and make sure not to tighten it.

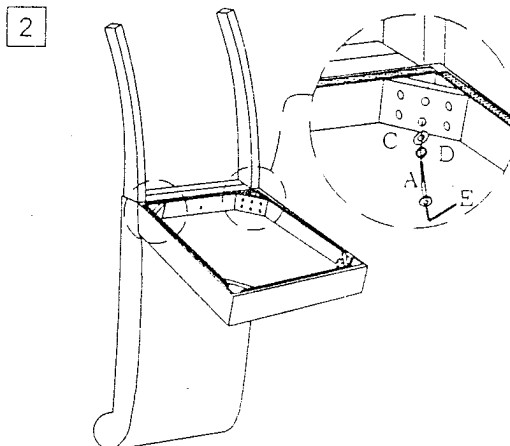

3


Then, put in the front leg in the box seat.

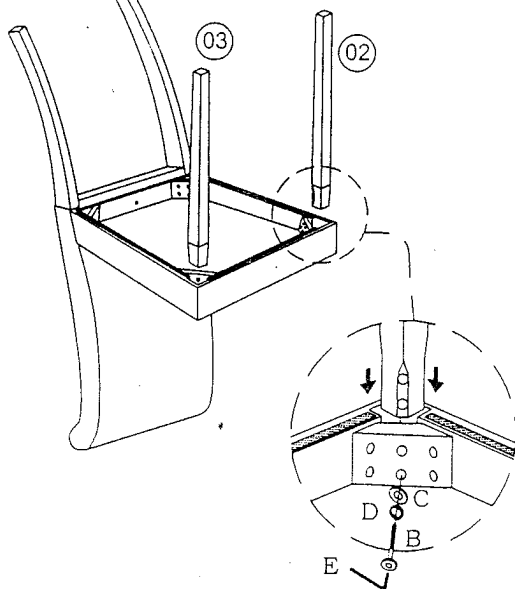

Insert the screw into the hole

4

Lastly, cover back the black woven to the bottom of the box seat.

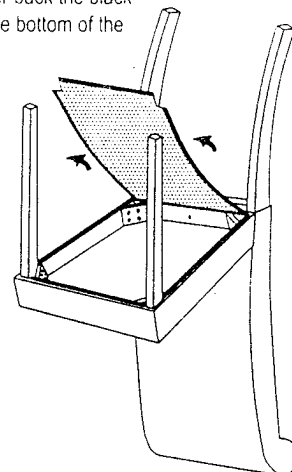

5

