



STEP 5

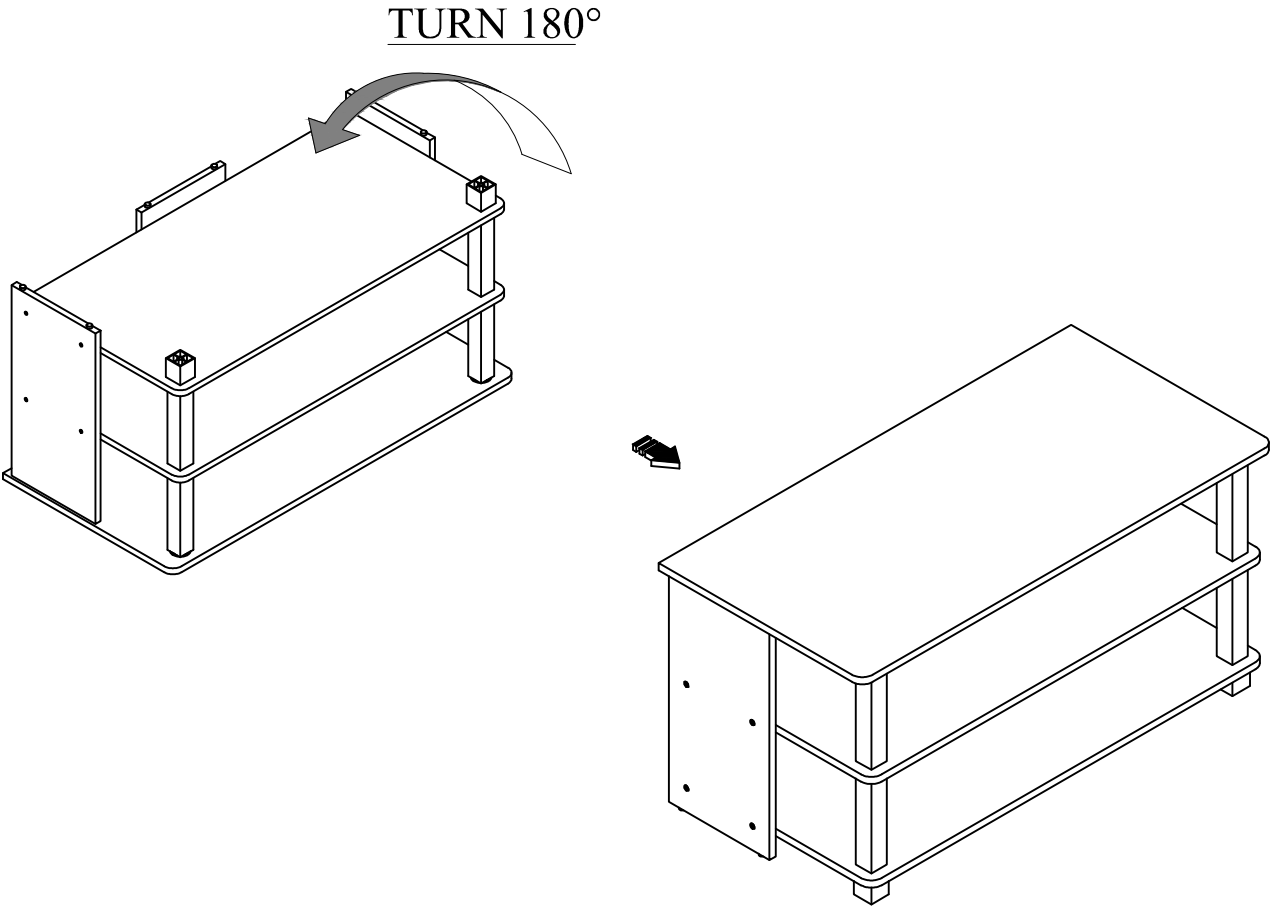

Recommended Maximum Weight

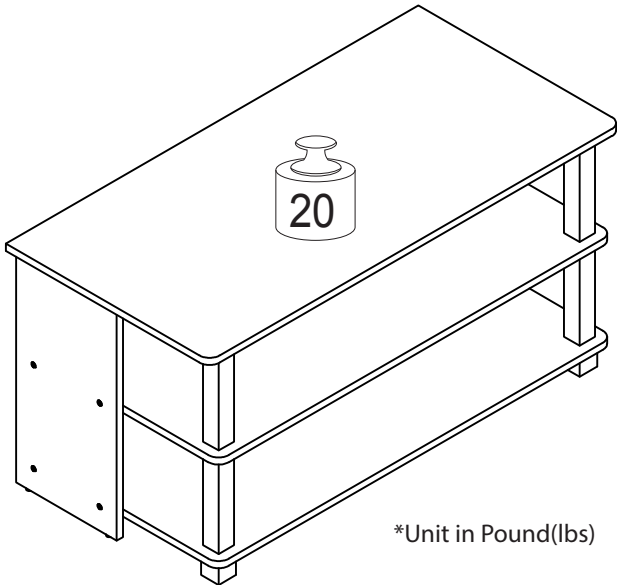

*Unit in Pound(lbs)

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

>Put heavier items on lower shelves.

Assembly Instruction


TV STAND

00:30


Approx. 30 minutes



Recomm. 1 Person

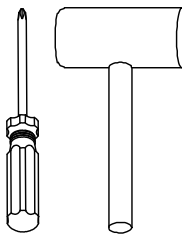

Tools Required

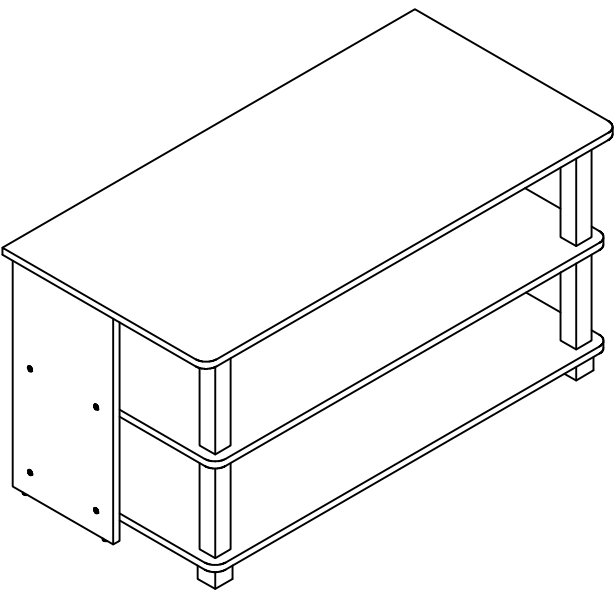







Customer Support

 
NEED HELP? For replacement requests or product inquiries, please contact our Customer Service Team by emailing us. Thank you for selecting our products!



HARDWARE & PARTS LIST

NO	HARDWARE LIST	QTY
1	SHORT POLE 	4pcs
2	LEG 	2pcs
3	SCREW 	12pcs
4	CAM-LOCK SCREW 	6pcs
5	CAM-LOCK NUT 	6pcs
6	NAIL LEG 	6pcs

NO	PARTS LIST	QTY
A	TOP PANEL	1pc
B	SHELF PANEL	2pcs
C	SIDE PANEL	2pcs
D	BACK PANEL	1pc

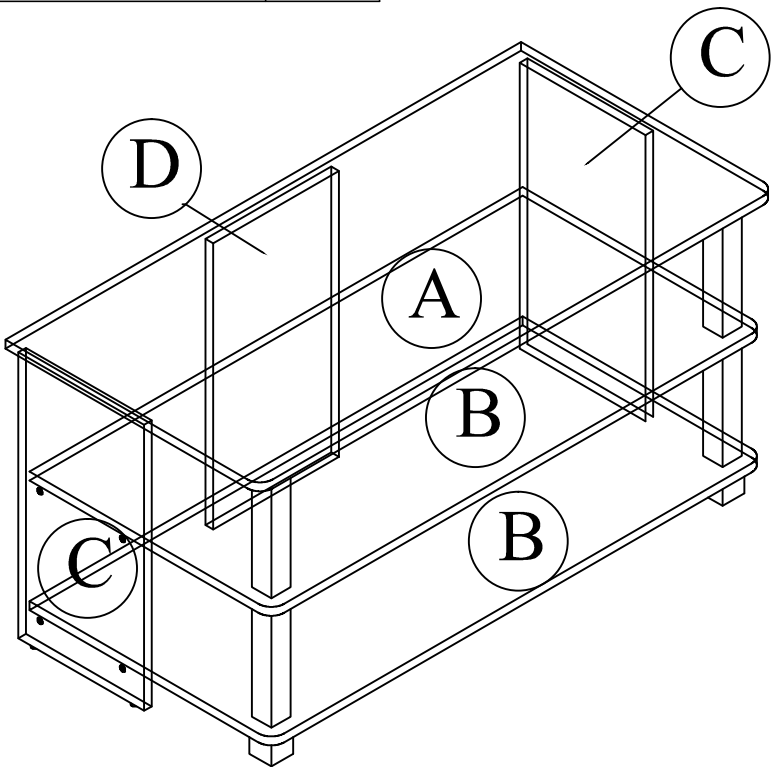


USEFUL HINTS BEFORE YOU START:

- 1. Read each step carefully before starting.
- 2. It is important that each step is performed in correct order to avoid difficulties.
- 3. Identify, sort and count the parts before assembly.
- 4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
- 5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
- 6. Using incompatible hardware might cause damage to product.


ASSEMBLY INSTRUCTIONS

BEFORE YOU BEGIN, PLEASE READ ASSEMBLY INSTRUCTION CAREFULLY, FOLLOW THEM STEP BY STEP.


STEP 1

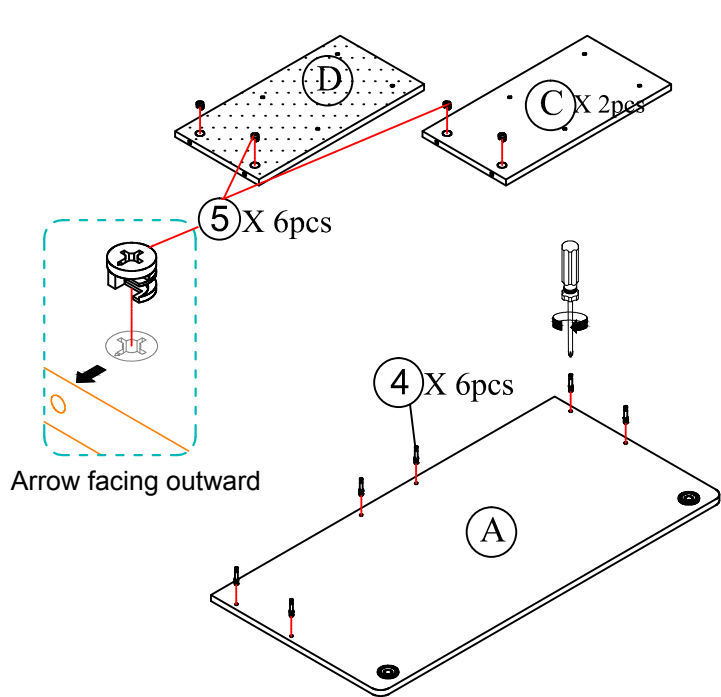

STEP 2

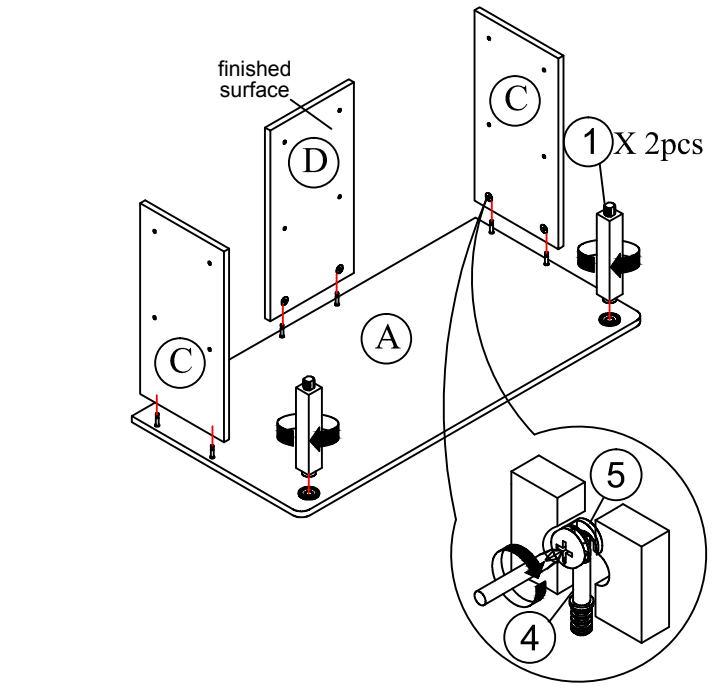

STEP 3

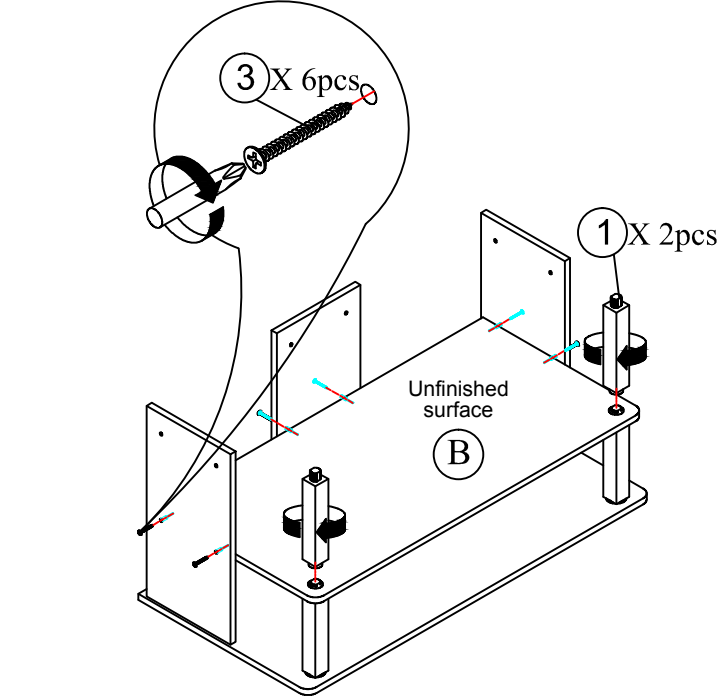

STEP 4

