

OUTDOOR FURNITURE CARE & MAINTENANCE

GENERAL FRAME, ALUMINUM TOP, & RESIN WICKER CARE: For best results, clean once a year with mild soap and water, rinse and let drain. For spot cleaning, a soft bristle brush may be used to loosen food particles, dirt and debris. If not in use for a period of time or exposed to temperatures below 32-degree Fahrenheit, it is recommended to store furniture and accents in a dry, cool place with a furniture cover to maximize protection and extend product use.

SPECIAL NOTE: DO NOT use solvents, janitorial cleaners, alcohol-based cleaners, protectants, scouring agents, bleach, gasoline or ammonia-based cleaners.

NORMAL FRAME CARE FOR EXTREME COASTAL ENVIRONMENTS:

Peak Season recognizes that certain extreme environments exist and accelerate the potential for oxidation, therefore if your Peak Season furniture is exposed to a salt air environment, we strongly suggest washing the furniture with a mild soap and water mix 2 to 3 times a year to help resist oxidation. Furthermore, Peak Season suggests that any surface condition that results in oxidation should be promptly treated and repaired by lightly (wire) brushing the area to bare metal and applying a suitable primer for metal. After allowing enough time to dry, touch-up paint may be applied. This action will prevent the condition from spreading and preserve the life of the furniture.

WOOD FRAME & ACCENT CARE: Use a soft damp cloth to wipe away any stains or dirt. For regular care and maintenance, it is highly recommended to rinse your furniture with a soap solution and clean water every 3 months. For spot cleaning, a soft bristle brush may be used to loosen food particles, dirt and debris. After any spot cleaning, rinse again with clean water and leave to dry. Ensure furniture is fully dry prior to storage. If not in use for a period of time or exposed to temperatures below 32-degree Fahrenheit, it is recommended to store furniture and accents in a dry, cool place with a furniture cover to maximize protection and extend product use.

SPECIAL NOTE: DO NOT apply any abrasive chemicals that may spoil the product. DO NOT use a pressure washer or you will damage the texture of the wood.

FABRIC, SLIP, & PILLOW CARE: To clean, wipe down with mild soap & water. Let air dry. If mildew and tougher stains occur; refer to Sunbrella.com® for additional instructions. For spot cleaning, a soft bristle brush may be used to loosen food particles, dirt and debris.

NON-GLASS ALTERNATIVE TABLE TOPS & STONE ACCENT CARE:

Blot to remove spills immediately to prevent staining. Be sure to keep clean with a damp cloth on a regular basis. Re-seal at least once a year or more if placed in full sun for extended periods of time. All-natural stone table tops must be securely stored (on-edge) when not in use.

BURNER UNIT CARE: For tables that include burner units, it is recommended to use and store unit on a leveled surface free of debris or trash. When not in use, remove burner and store in a safe, cool, covered location away from easy access by children. Place fire burner lid over the unit. Once a month empty fire table burner and clean the exterior with damp cloth containing stainless steel cleaner.

SPECIAL NOTE: DO NOT use other abrasives or any abrasive cloth, always making certain the cavity of the burner is kept free from all debris before refueling.

WIND GUARD CARE: Only clean the unit when it is cool. Use paper towel and glass cleaner to clean glass. It is recommended to disassemble and store glass components in a cool dry place when not in use.

SPECIAL NOTE: DO NOT use unit if the wind guard is damaged.

LANTERN & STEEL COMPONENT CARE: Use a damp cloth to wipe down the surface or absorb any spills.

SPECIAL NOTE: DO NOT use chemical cleaners as it may damage the natural patina or coated surface of the product.

LAMP & SHADE CARE: Use a damp cloth to wipe down the surface or absorb any spills.

SPECIAL NOTE: DO NOT use chemical cleaners as it may damage the natural composition of the product. To clean lamp shade, wipe down with mild soap & water. Let air dry. If mildew and tougher stains occur; refer to Sunbrella.com® for additional instructions.

CANDLE CARE: While candles are made for outdoor use, it is not recommended to leave candles in total exposure to elements. Use a damp cloth to wipe down the surface.

RUG CARE: Use a damp cloth to wipe down the surface or absorb any spills. Can be combined with mild soap for spot cleaning. Professional cleaning recommended every 5 years.

COPPER ELEMENTS CARE: Use a damp cloth to wipe down the surface or absorb any spills.