 
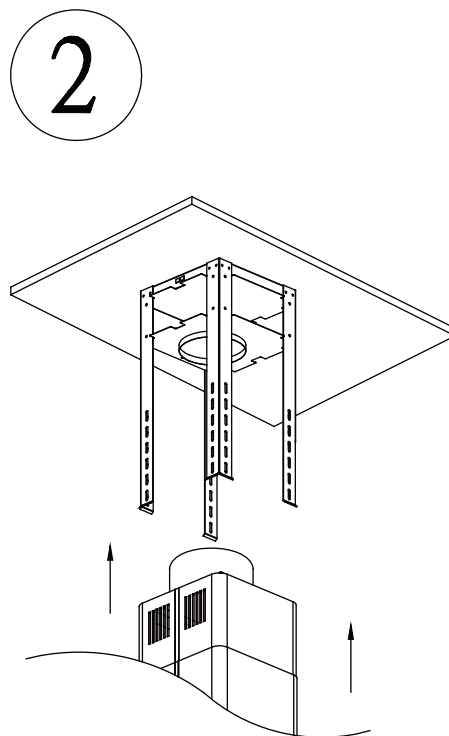 
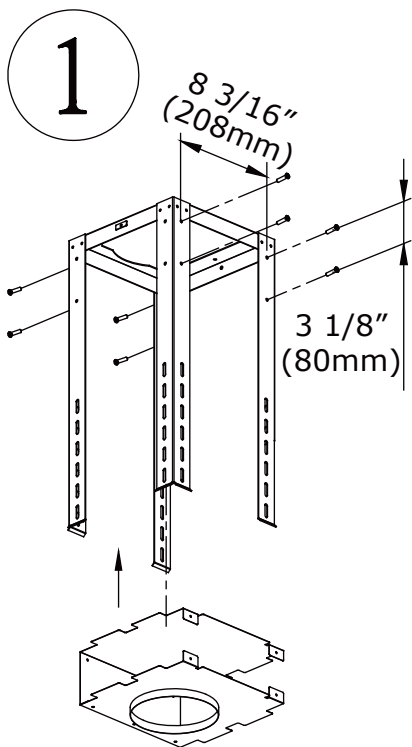 


## ZRC-00LC

For use with models : ZLC-A , ZLC-B

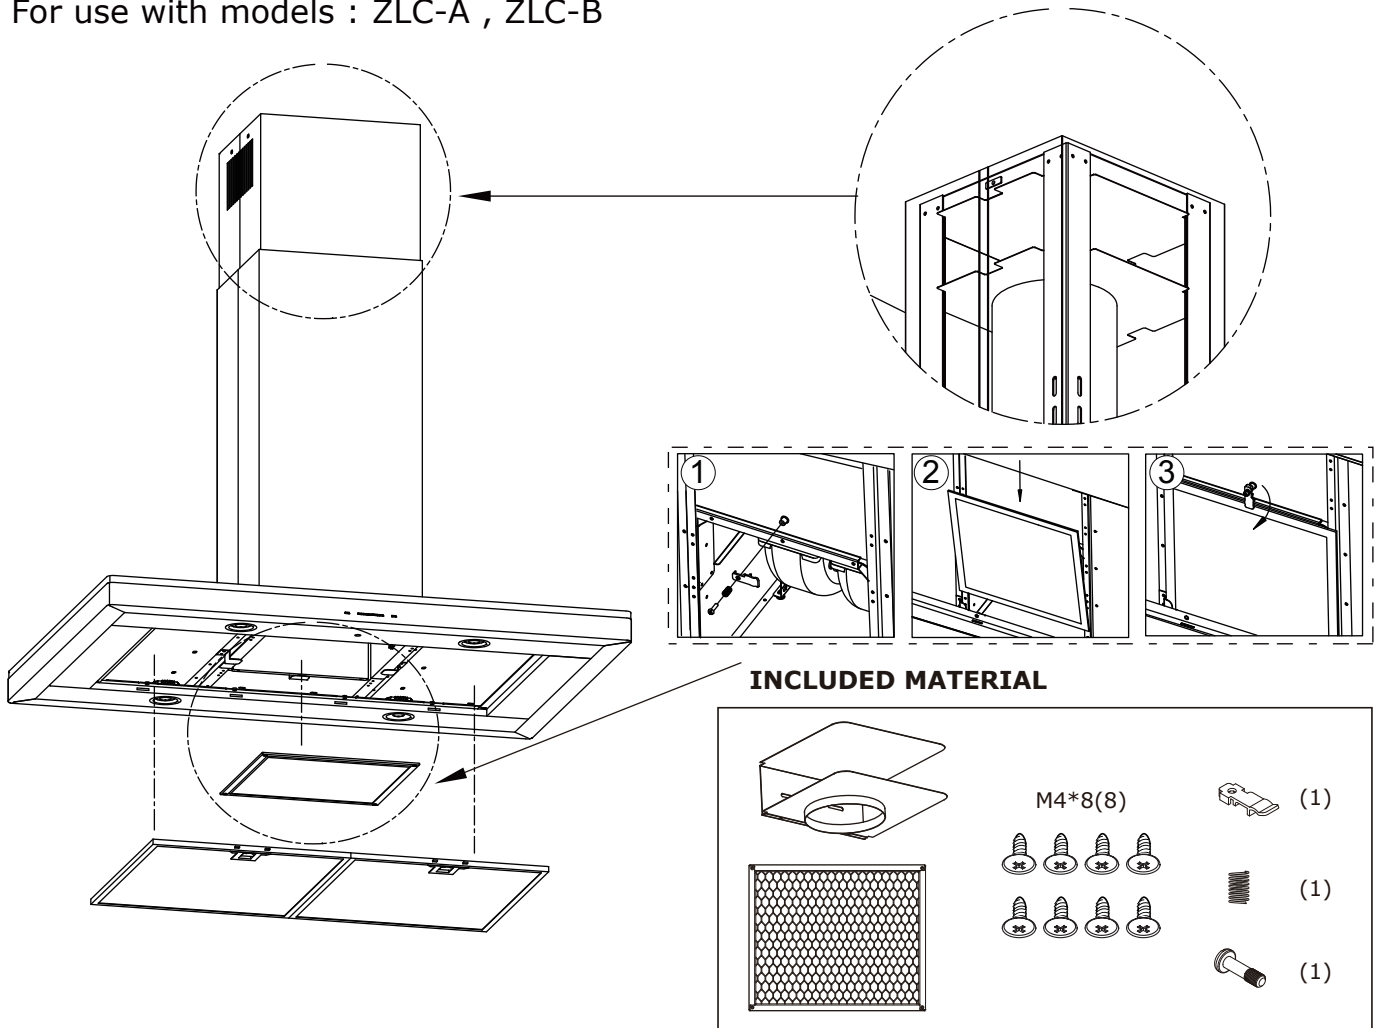

Follow instructions in hood manual to enable the "replace charcoal filter" indicator on the hood controls.